

AIR INLET TEMPERATURE SENSOR INSPECTION


AC1LQ-01

1. REMOVE THESE PARTS:

- (a) Front seats
- (b) Rear console box
- (c) Front console box cover.
- (d) Lower center cluster finish panel
- (e) Front door scuff plates
- (f) Cowl side trims
- (g) Rear door scuff pates
- (h) Center pillar garnishes

2. REMOVE AIR INLET TEMPERATURE SENSOR

- (a) Slide the floor carpet backward.

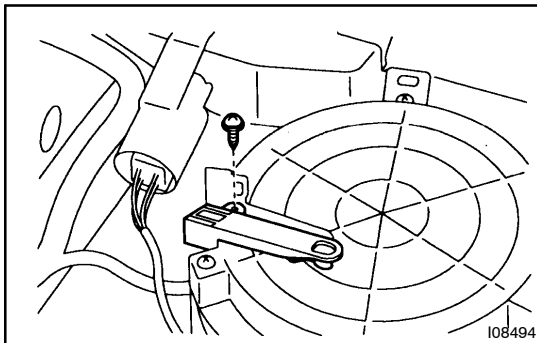

- (b) Disconnect the connector.
- (c) Remove the screw and sensor.

3. INSPECT AIR INLET TEMPERATURE SENSOR CIRCUIT

(See page [DI-801](#))

4. INSTALL AIR INLET TEMPERATURE SENSOR

- (a) Install the sensor with the screw.
- (b) Connect the connector.
- (c) Install the floor carpet.

5. INSTALL THESE PARTS:

- (a) Center pillar garnishes
- (b) Rear door scuff plates
- (c) Cowl side trims
- (d) front door scuff plates
- (e) Rear console box
- (f) Front seats