


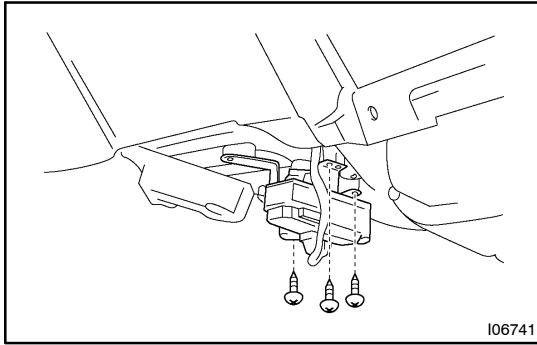

AIR MIX SERVOMOTOR (for Front A/C)

AC1LK-01

INSPECTION

1. REMOVE AIR MIX SERVOMOTOR

- (a) Disconnect the connector.
- (b) Remove the 2 screws and servomotor.

2. INSPECT AIR MIX SERVOMOTOR OPERATION

(See page [DI-813](#))

3. INSPECT AIR MIX DAMPER POSITION SENSOR

(See page [DI-804](#))

4. INSTALL SERVOMOTOR

- (a) Install the servomotor with the 2 screws.
- (b) Connect the connector.