


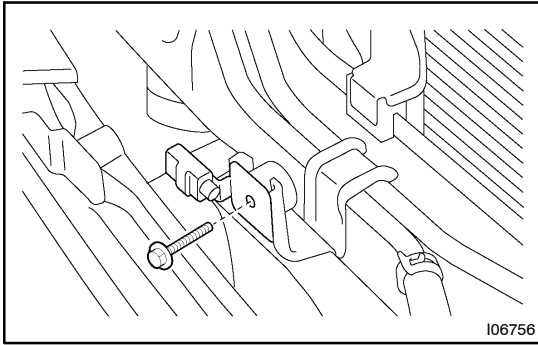

AMBIENT TEMPERATURE SENSOR INSPECTION

AC1LP-01

1. REMOVE AMBIENT TEMPERATURE SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and the sensor.

2. INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT

(See page [DI-775](#))

3. INSTALL AMBIENT TEMPERATURE SENSOR

- (a) Install the sensor to condenser upper bracket.
- (b) Connect the connector.