

INSPECTION

1. INSPECT AIR INLET SERVOMOTOR OPERATION
(See page [DI-815](#))
2. INSPECT AIR INLET DAMPER POSITION SENSOR CIRCUIT
(See page [DI-807](#))