


REMOVAL

1. **REMOVE FRONT COOLING UNIT**
(See page [AC-24](#))

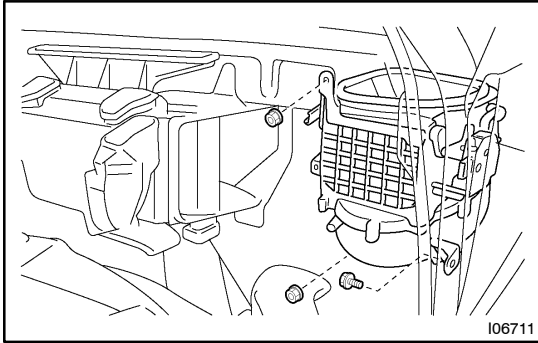

2. **REMOVE BLOWER UNIT**
 - (a) Disconnect the connectors.
 - (b) Remove the bolt, 2 nuts and blower unit.