


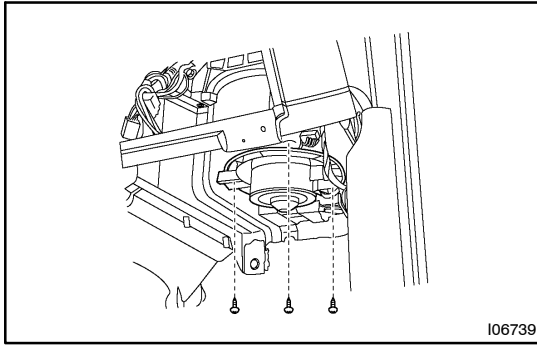

FRONT A/C BLOWER MOTOR INSPECTION

AC1LG-01

1. REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and blower motor.

2. INSPECT BLOWER MOTOR CIRCUIT (See page [DI-824](#))

3. INSTALL BLOWER MOTOR

- (a) Install the blower motor with 3 screws.
- (b) Connect the connector.