

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.


Specified amount: 1,050 ± 50 g (37.03 ± 1.76 oz.)

2. DISCONNECT LIQUID AND SUCTION TUBES FROM FRONT COOLING UNIT

(See page [AC-24](#))

3. REMOVE INSTRUMENT PANEL


(See page [BO-96](#))

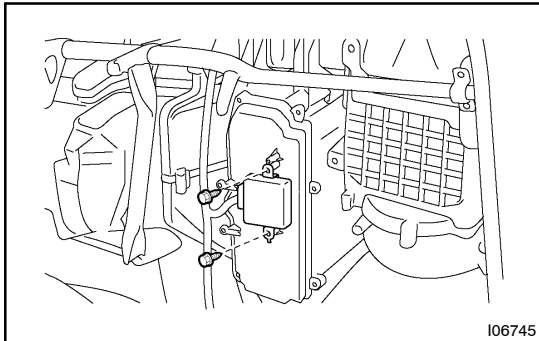

I06745

4. REMOVE ANTENNA RELAY

- (a) Disconnect the connector.
- (b) Remove the 2 screws and relay.

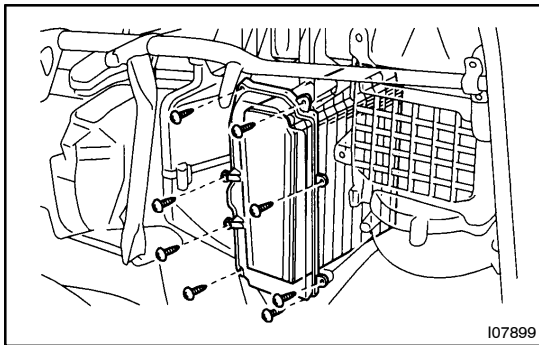

I07899

5. REMOVE EVAPORATOR

- (a) Disconnect the connector.
- (b) Disconnect the connector clamp.
- (c) Remove the 8 screws and No .1 cooler cover.
- (d) Pull out the evaporator.