



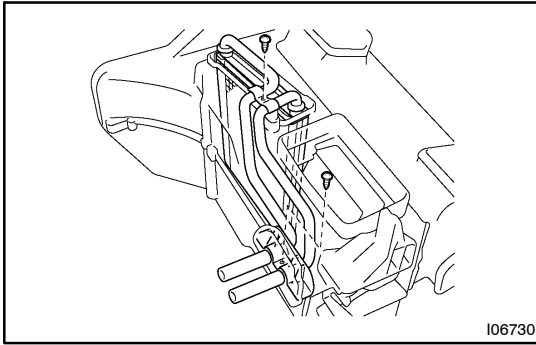

DISASSEMBLY


1. REMOVE HEATER RADIATOR

- Pry out the packing.
- Remove the screw and bracket.
- Remove the screw and clamp.
- Pull out the heater radiator.

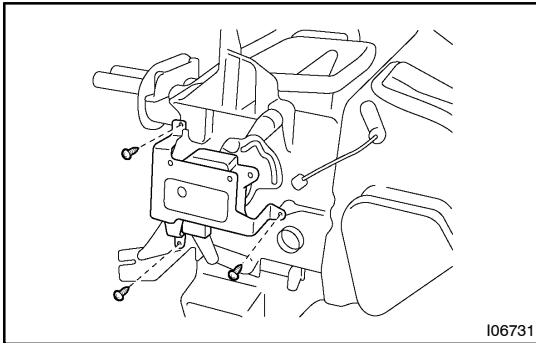


2. REMOVE AIR OUTLET SERVOMOTOR

Remove the 3 screws and servomotor.

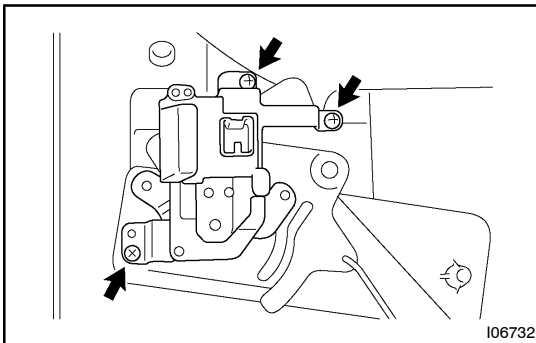


3. REMOVE AIR MIX SERVOMOTOR

- Disconnect the connector.
- Remove the 3 screws and servomotor.
- Release the claw and remove the wire harness.

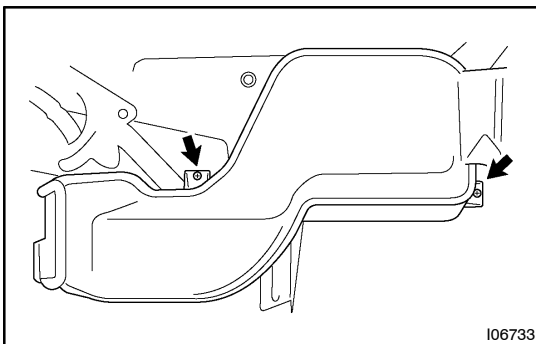

4. REMOVE AIR DUCT (Foot Duct)

Remove the 2 screws and duct.

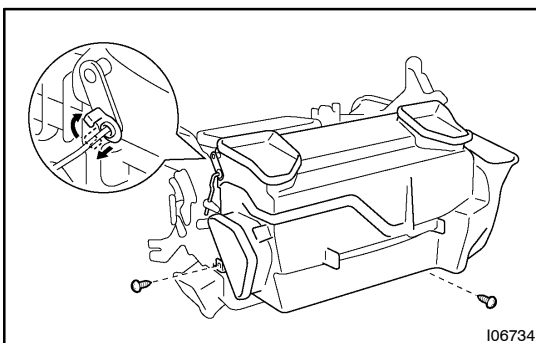

5. REMOVE AIR DUCT (Vent Duct)

- Disconnect the mode damper control link.
- Remove the 2 screws and duct.