



REAR HEATER RELAY INSPECTION


1. REMOVE THESE PARTS:
- (a) Front door scuff plate LH
 - (b) Cowl side trim LH

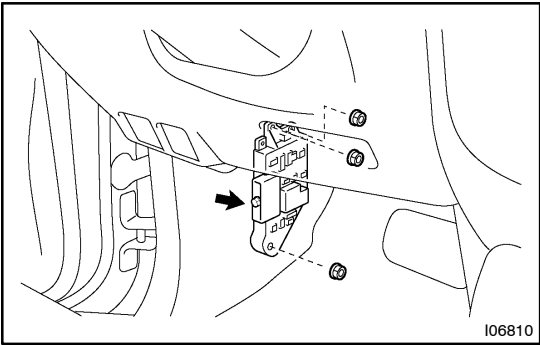

2. REMOVE REAR HEATER RELAY
- (a) Remove the 3 No.2 junction block set nuts.
 - (b) Loosen the bolt and disconnect the connector.
 - (c) Pull out the junction block.

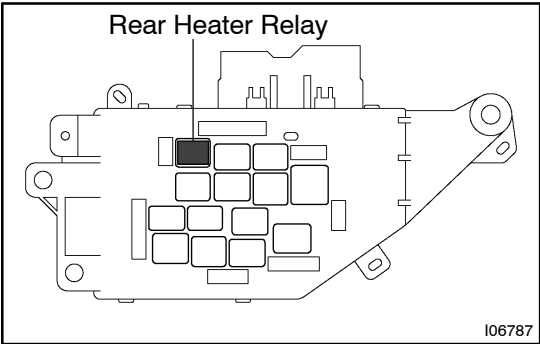

- (d) Remove the relay

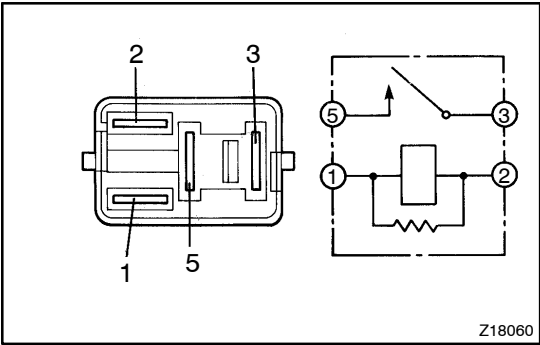

3. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

4. INSTALL RELAY
5. INSTALL 3 NO.2 JUNCTION BLOCK SET NUTS
6. INSTALL THESE PARTS:
- (a) Cowl side trim LH
 - (b) Front door scuff plate LH