


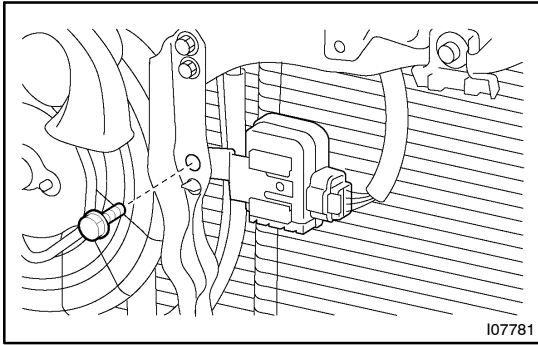

SMOG VENTILATION SENSOR INSPECTION

AC1LR-01

1. REMOVE SMOG VENTILATION SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and sensor.

2. INSPECT SMOG VENTILATION SENSOR (See page [DI-786](#))

3. INSTALL SMOG VENTILATION SENSOR

- (a) Install the sensor with the bolt.
- (b) Connect the connector.