


## REMOVAL


1. REMOVE TRANSFER SHIFT LEVER KNOB
2. REMOVE UPPER CONSOLE PANEL  
(See page [BO-96](#))

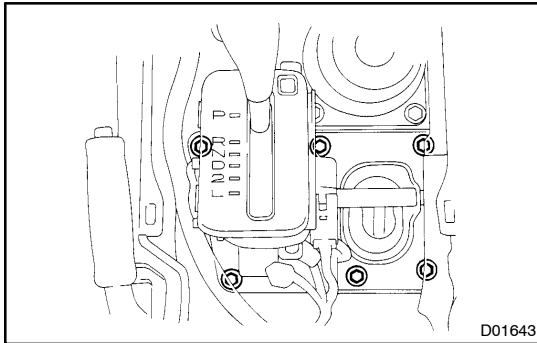

3. REMOVE SHIFT LEVER ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the 6 bolts.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

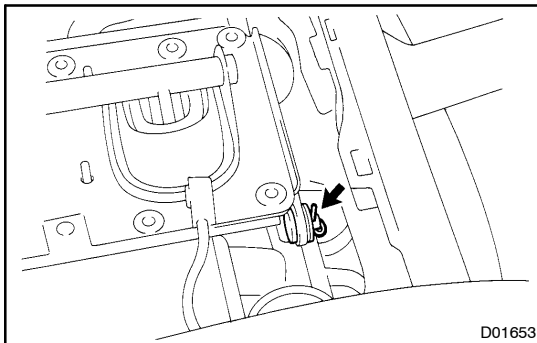

- (c) Lift the shift lever assembly up, using a needle nose pliers, remove the clip and plate washer.
- (d) Remove the transmission control rod and washer from the shift lever assembly and remove the remove.