




CIRCUIT

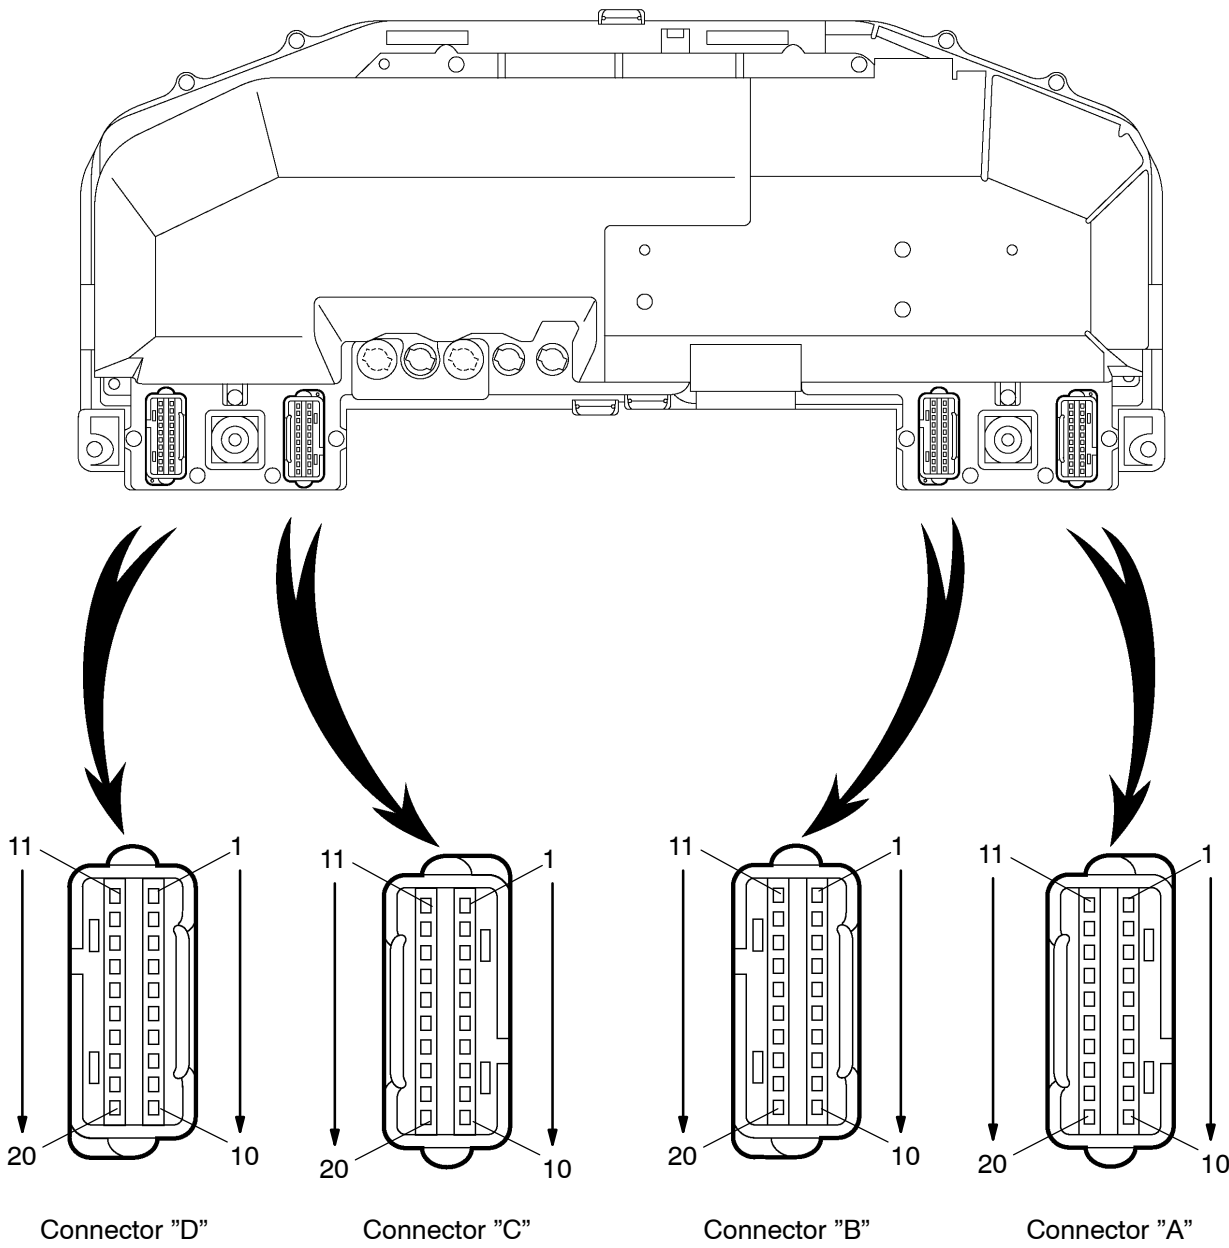

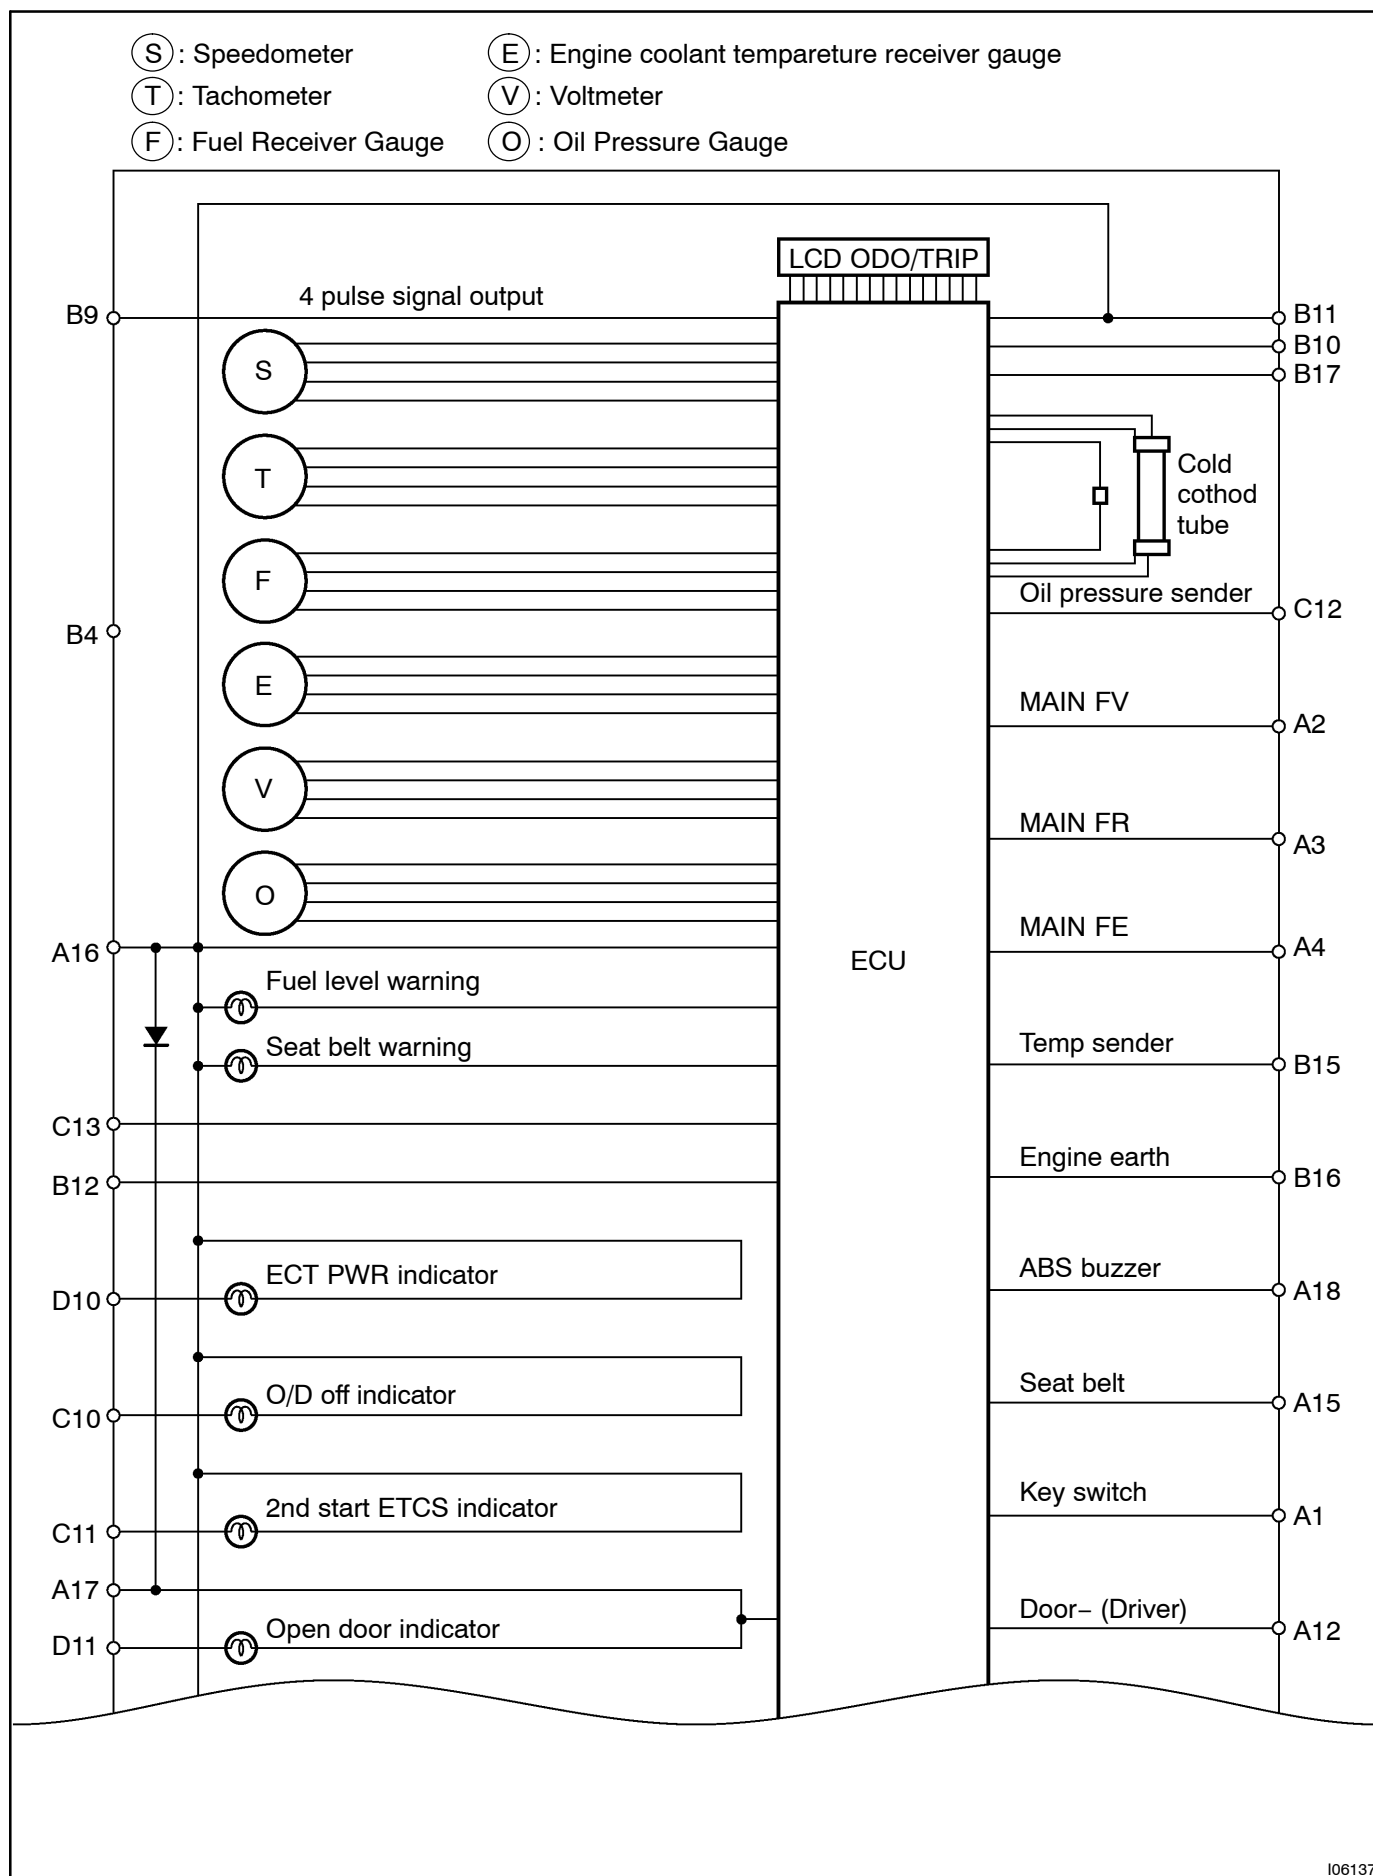

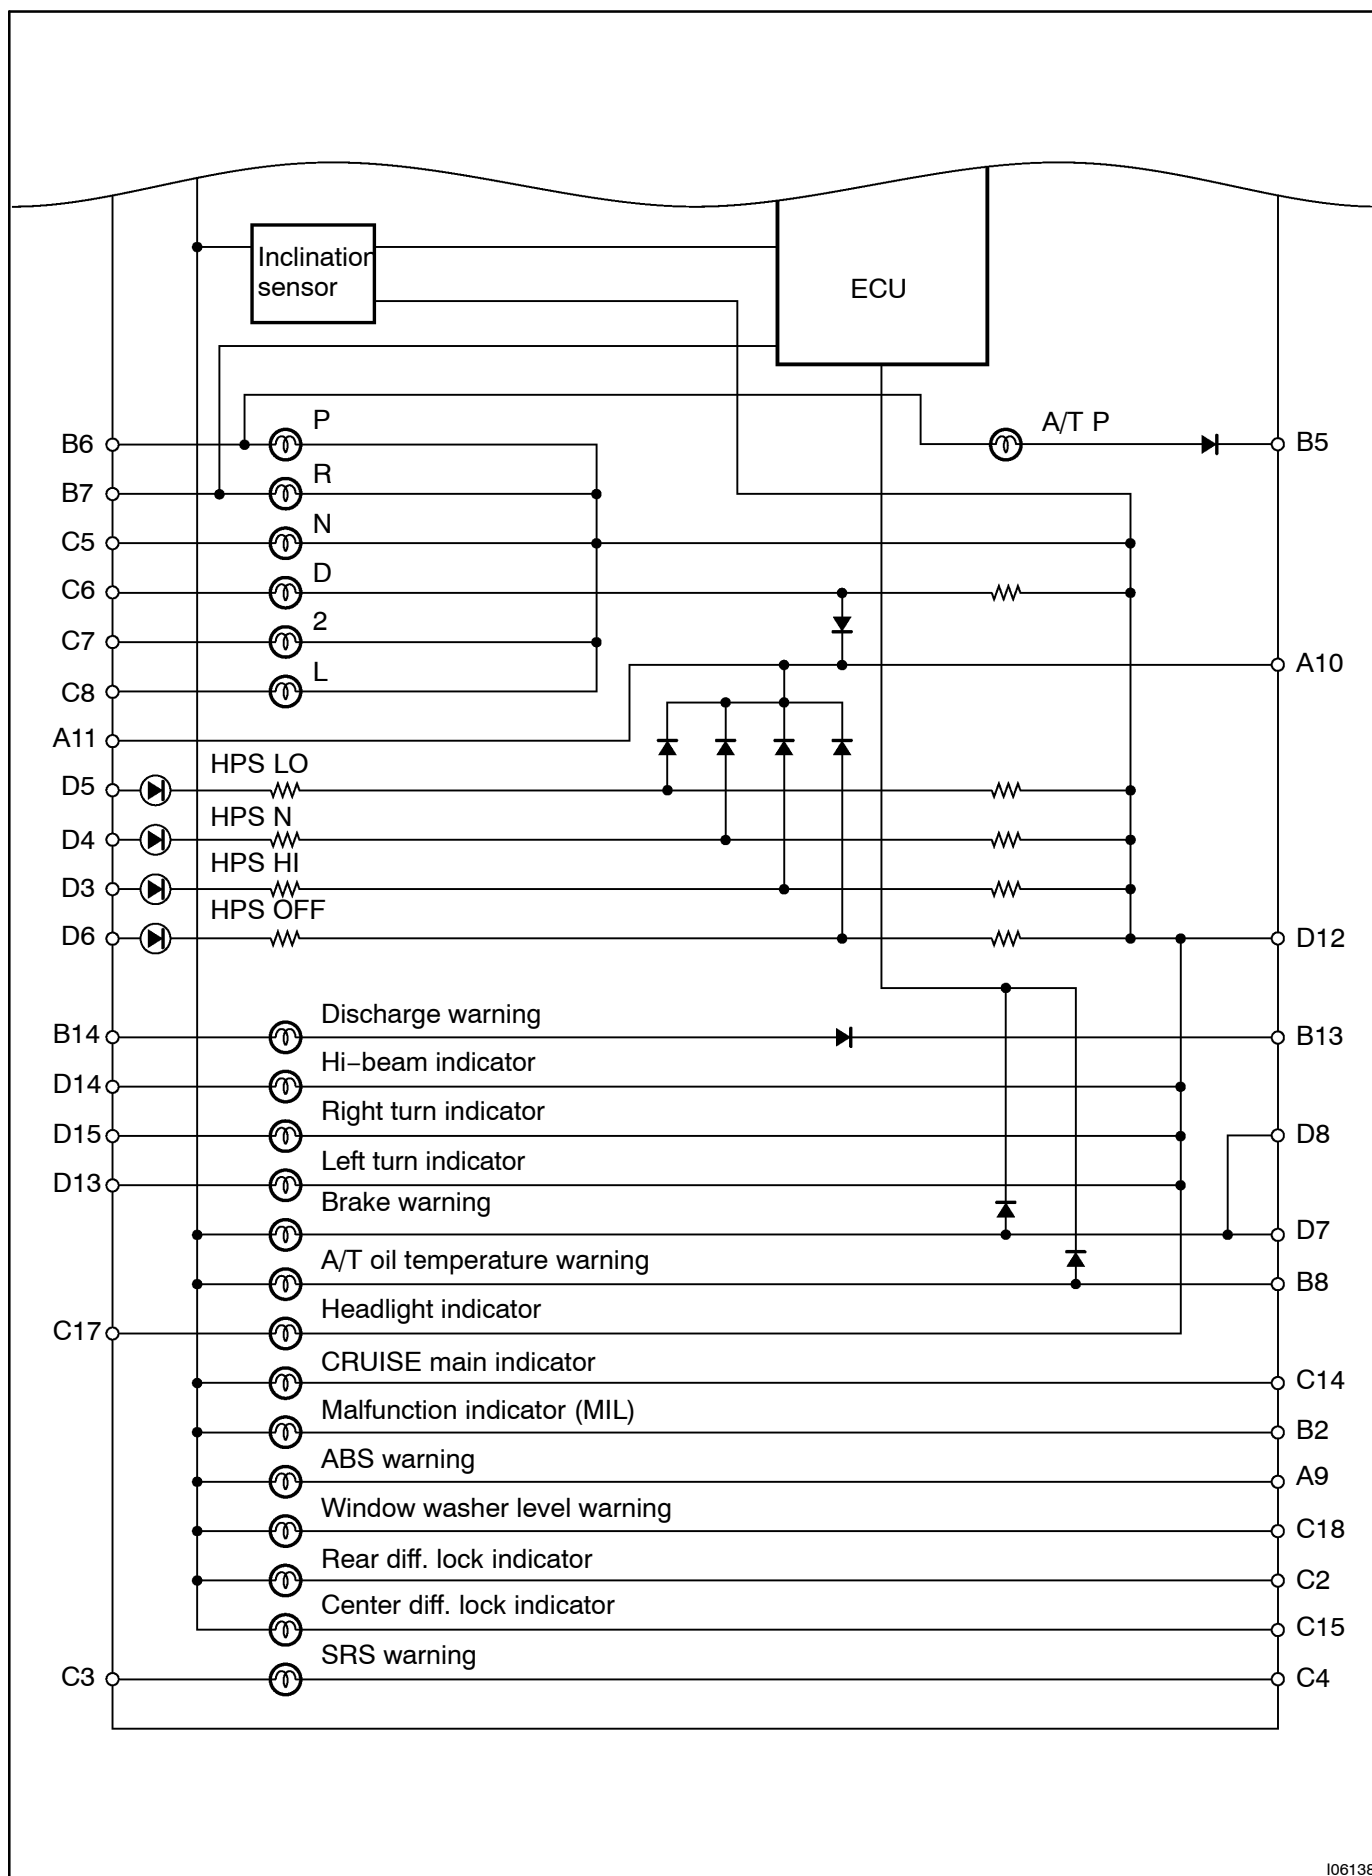

BODY ELECTRICAL – COMBINATION METER

No.		Wiring connector side
A	1	Key unlock warning switch
	2	Fuel sender gauge
	3	Fuel sender gauge
	4	Fuel sender gauge
	9	ABS ECU
	10	Light control rheostat
	11	TAIL fuse
	12	Driver door courtesy switch
	15	Seat belt buckle switch
	16	GAUGE fuse
B	17	DOM E fuse
	18	ABS ECU
	2	ECM
	4	MIRR fuse
	5	Park/ neutral position switch (P position)
	6	Park/ neutral position switch (P position)
	7	Park/ neutral position switch (R position)
	8	ECM
	9	Speed control unit
	10	Speed sensor
C	11	Ground
	12	DLC3
	13	Generator
	14	IGN fuse
	15	Engine coolant temperature sender gauge
	16	Ground
	17	ECM
	2	Rear diff. lock detection switch
	3	ECU-B fuse
	4	Center airbag sensor assembly
D	5	Park/ neutral position switch (N position)
	6	Park/ neutral position switch (2 position)
	7	Park/ neutral position switch (D position)
	8	Park/ neutral position switch (L position)
	10	O/D main switch
	11	ECM
	12	Low oil pressure warning switch
	13	Starter relay
	14	ECM
	15	Transfer 4WD position detection switch
E	17	HEAD LH-LWR fuse
	18	Washer level warning switch
	3	Suspension control ECU
	4	Suspension control ECU
	5	Suspension control ECU
	6	Suspension control ECU
	7	Rear diff. lock detection switch
	8	Parking brake switch
	10	ECT pattern select switch
	11	Body control ECU (Instrument panel ECU)
F	12	Ground
	13	Turn signal switch (Left side)
	14	Headlight dimmer switch
	15	Turn signal switch (Right side)