



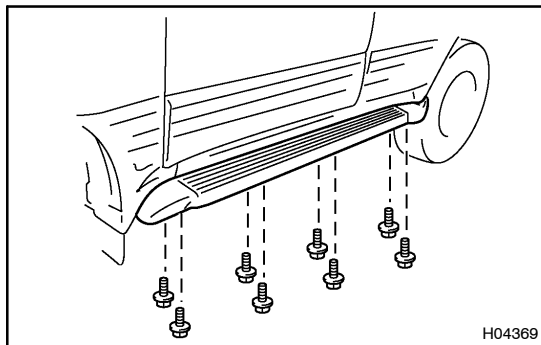

REMOVAL

1. w/ Side Step: REMOVE SIDE STEP SUB-ASSEMBLY

- (a) Remove the 8 bolts.
- (b) Remove the step sub-assembly.

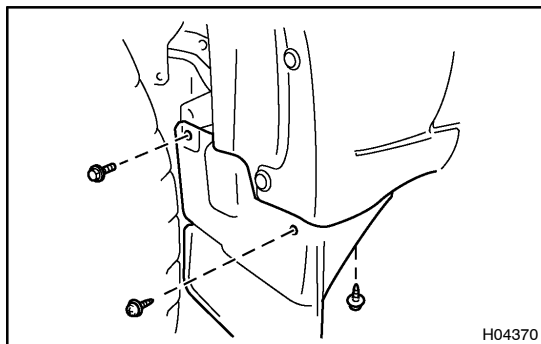


2. REMOVE FRONT MUDGUARD

- (a) Remove the 2 screws and bolt.
- (b) Remove the front mudguard.

3. REMOVE ROCKER PANEL MOULDING

- (a) Remove the 10 screws.
- (b) Remove the rocker panel moulding.

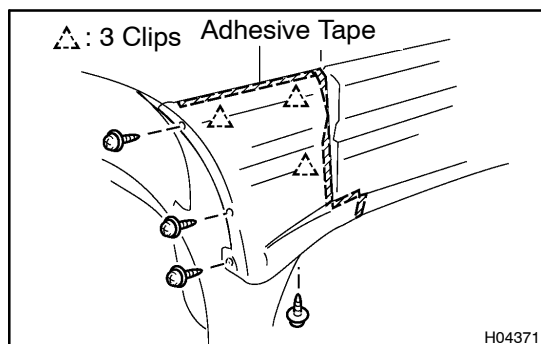

4. REMOVE FRONT FENDER WHEEL OPENING MOULDING

- (a) Remove the 4 screws.
- (b) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).


NOTICE:

Do not heat the moulding excessively.

- (c) Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not damage the moulding.
- Do not damage the body.
- (d) Remove the moulding.

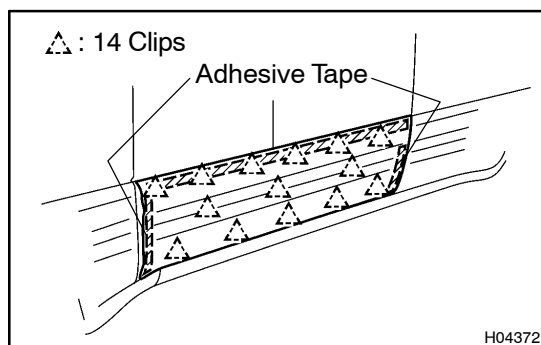

5. REMOVE OUTSIDE FRONT DOOR MOULDING

- (a) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:


Do not heat the moulding excessively.

- (b) Cut the adhesive tape with a knife.

NOTICE:


- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.

(c) Remove the moulding.

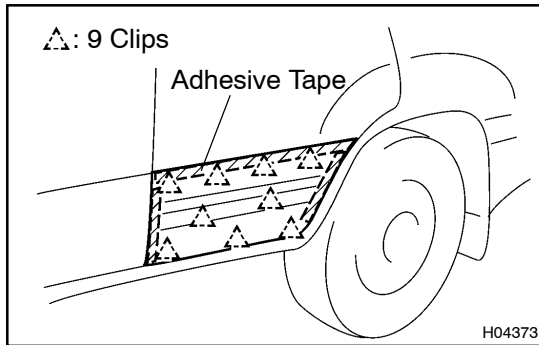


6. REMOVE OUTSIDE REAR DOOR MOULDING

Remove the outside rear door moulding in the same way as the outside front door moulding.

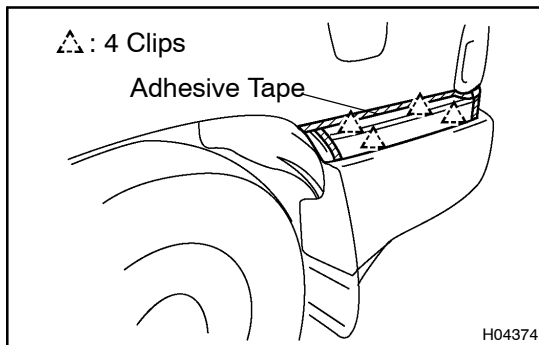

7. REMOVE OUTSIDE QUARTER MOULDING

Remove the outside quarter moulding in the same way as the outside front door moulding.

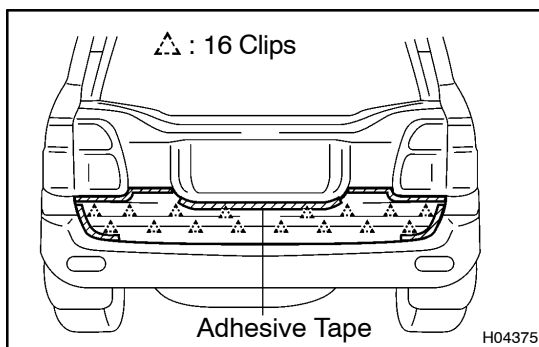

8. REMOVE OUTSIDE BACK DOOR MOULDING

Remove the outside back door moulding in the same way as the outside front door moulding.