

REMOVAL

1. REMOVE THESE PARTS:



- (a) Fender liner
- (b) Hood release lever
- (c) Hood lock

2. REMOVE HOOD LOCK CONTROL CABLE

- (a) Using a screwdriver, disconnect the cable from the clamps.

HINT:


Tape the screwdriver tip before use.

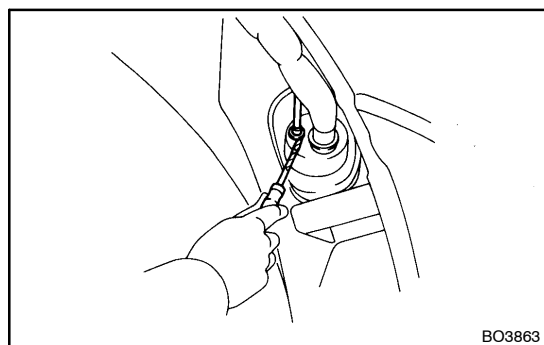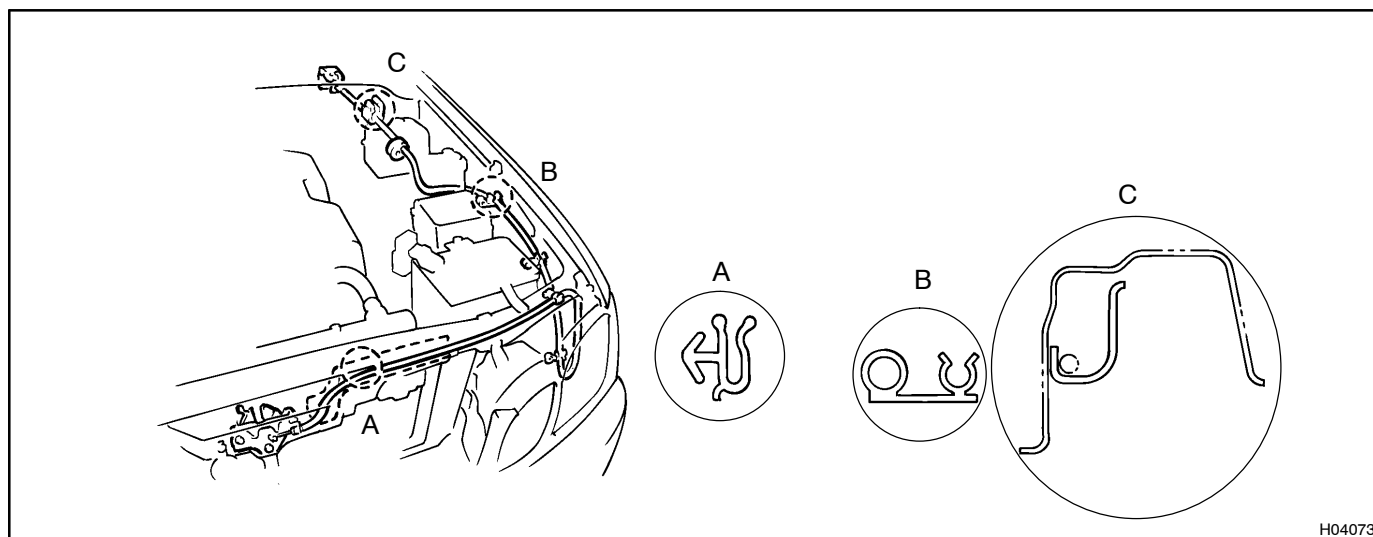

- (b) Using a screwdriver, pry out the cable stopper from the grommet.

HINT:

- Tape the screwdriver tip before use.
- Do not damage the grommet with the screwdriver.

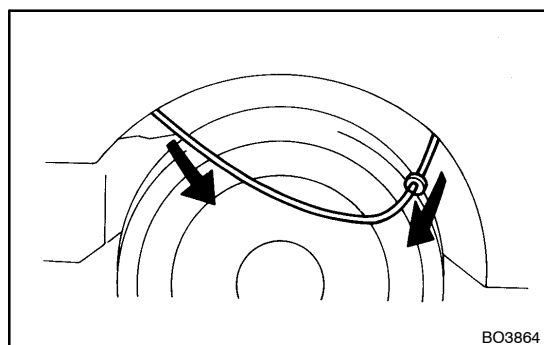

- (c) Pull the cable from the front wheel housing to remove it.