


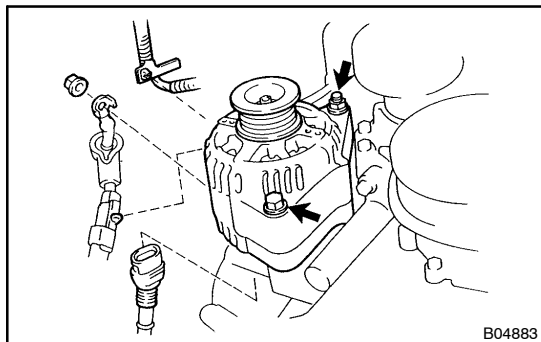

INSTALLATION

1. INSTALL GENERATOR

- (a) Install the generator with the bolt and nut.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)


- (b) Connect the generator connector.
(c) Connect the generator wire with the nut and rubber cap.
(d) Install the generator wire clamp to the cord clip on the generator.

2. INSTALL PS VANE PUMP PULLEY

(See page [SR-33](#))

3. INSTALL RADIATOR ASSEMBLY

(See page [CO-19](#))

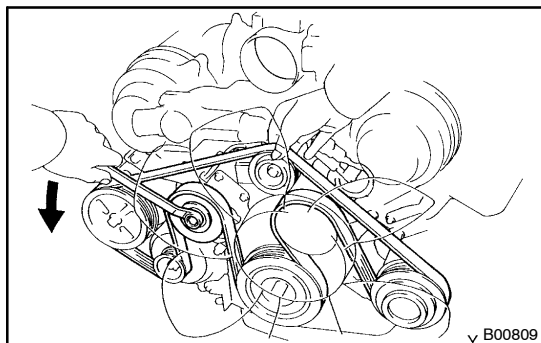

4. INSTALL GENERATOR DRIVE BELT

Install the belt by turning the belt tensioner counterclockwise.

HINT:

The pulley bolt for the belt tensioner has a left – hand thread.

5. FULL ENGINE COOLANT

6. START ENGINE AND CHECK FOR LEAKS

7. RECHECK ENGINE COOLANT LEVEL

8. PERFORM ON-VEHICLE INSPECTION

(See page [CH-2](#))

9. INSTALL ENGINE UNDER COVER NO.1