


DTC	42	Air Inlet Damper Control Servomotor Circuit
------------	-----------	--

CIRCUIT DESCRIPTION


The air inlet damper control servomotor is controlled by the A/C amplifier and moves the air inlet damper to the desired position.

DTC No.	Detection item	Trouble Area
42	Air inlet damper position sensor value does not change even if A/C amplifier operated air inlet damper control servomotor.	- Air inlet damper position sensor. - Harness or connector between air inlet damper control servomotor assembly and A/C amplifier. - A/C amplifier.

WIRING DIAGRAM

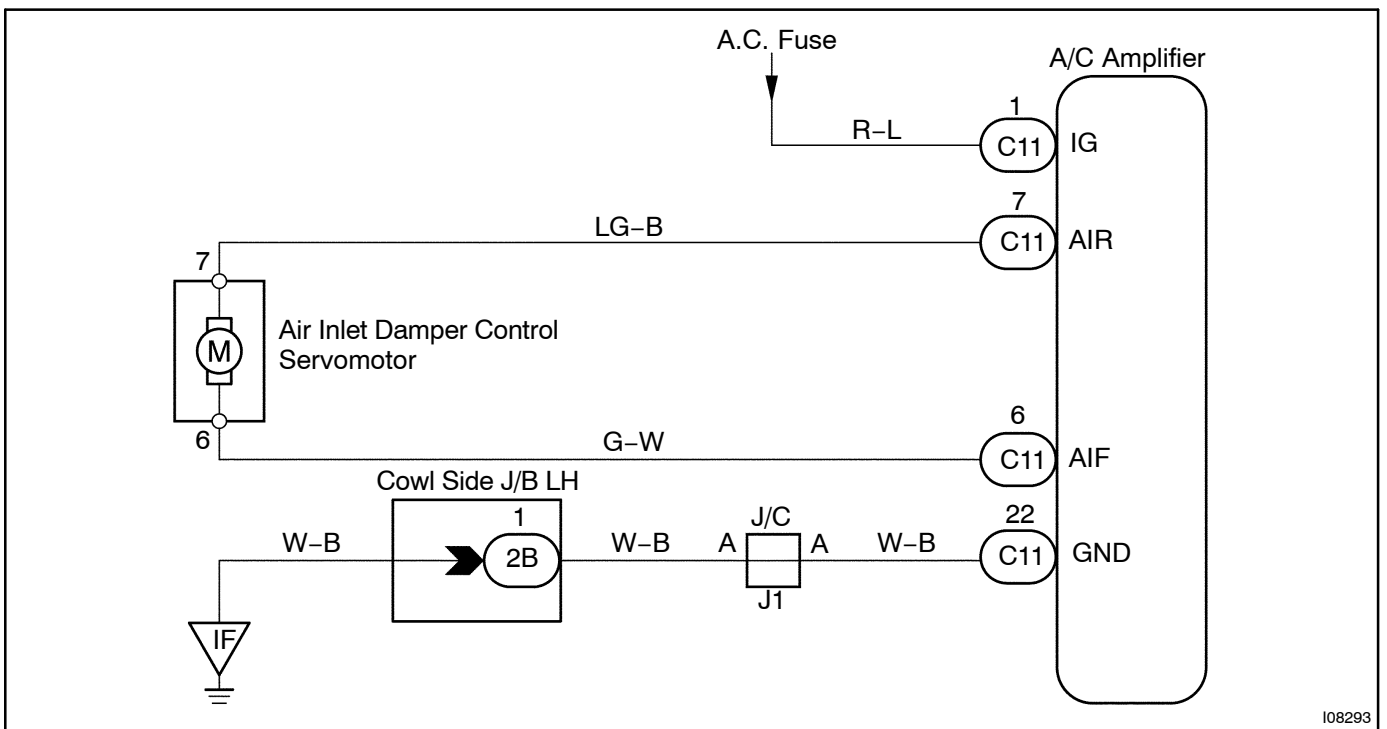

I08293

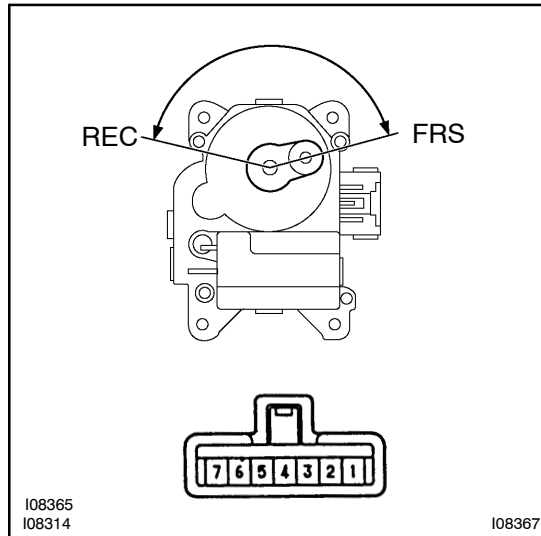INSPECTION PROCEDURE**1 Check air inlet damper control servomotor.****PREPARATION:**

Remove the air inlet damper control servomotor.

CHECK:

Connect positive (+) lead to terminal 7 and negative (-) lead to terminal 6.

OK:

The lever moves smoothly to REC position.

CHECK:

Connect positive (+) lead to terminal 6 and negative (-) lead to terminal 7.

OK:

The lever moves smoothly to FRS position.

NG

Replace air inlet damper control servomotor assembly.

OK**2 Check harness and connector between A/C amplifier and air inlet damper control servomotor (See page [IN-34](#)).****NG**

Repair or replace harness or connector.

OK

Check and replace A/C amplifier.