


A/T. P. (Automatic Transmission Parking) Indicator Circuit

CIRCUIT DESCRIPTION

The propeller shaft and wheels are free even when the transmission shift lever is set to P as long as the transfer shift lever is in Neutral position. The A/T.P. indicator light lights up to warn the driver that the propeller shaft and wheels are not locked.

If the A/T.P. indicator light goes on, the transfer shift lever should be shifted to the positions other than N position.

WIRING DIAGRAM

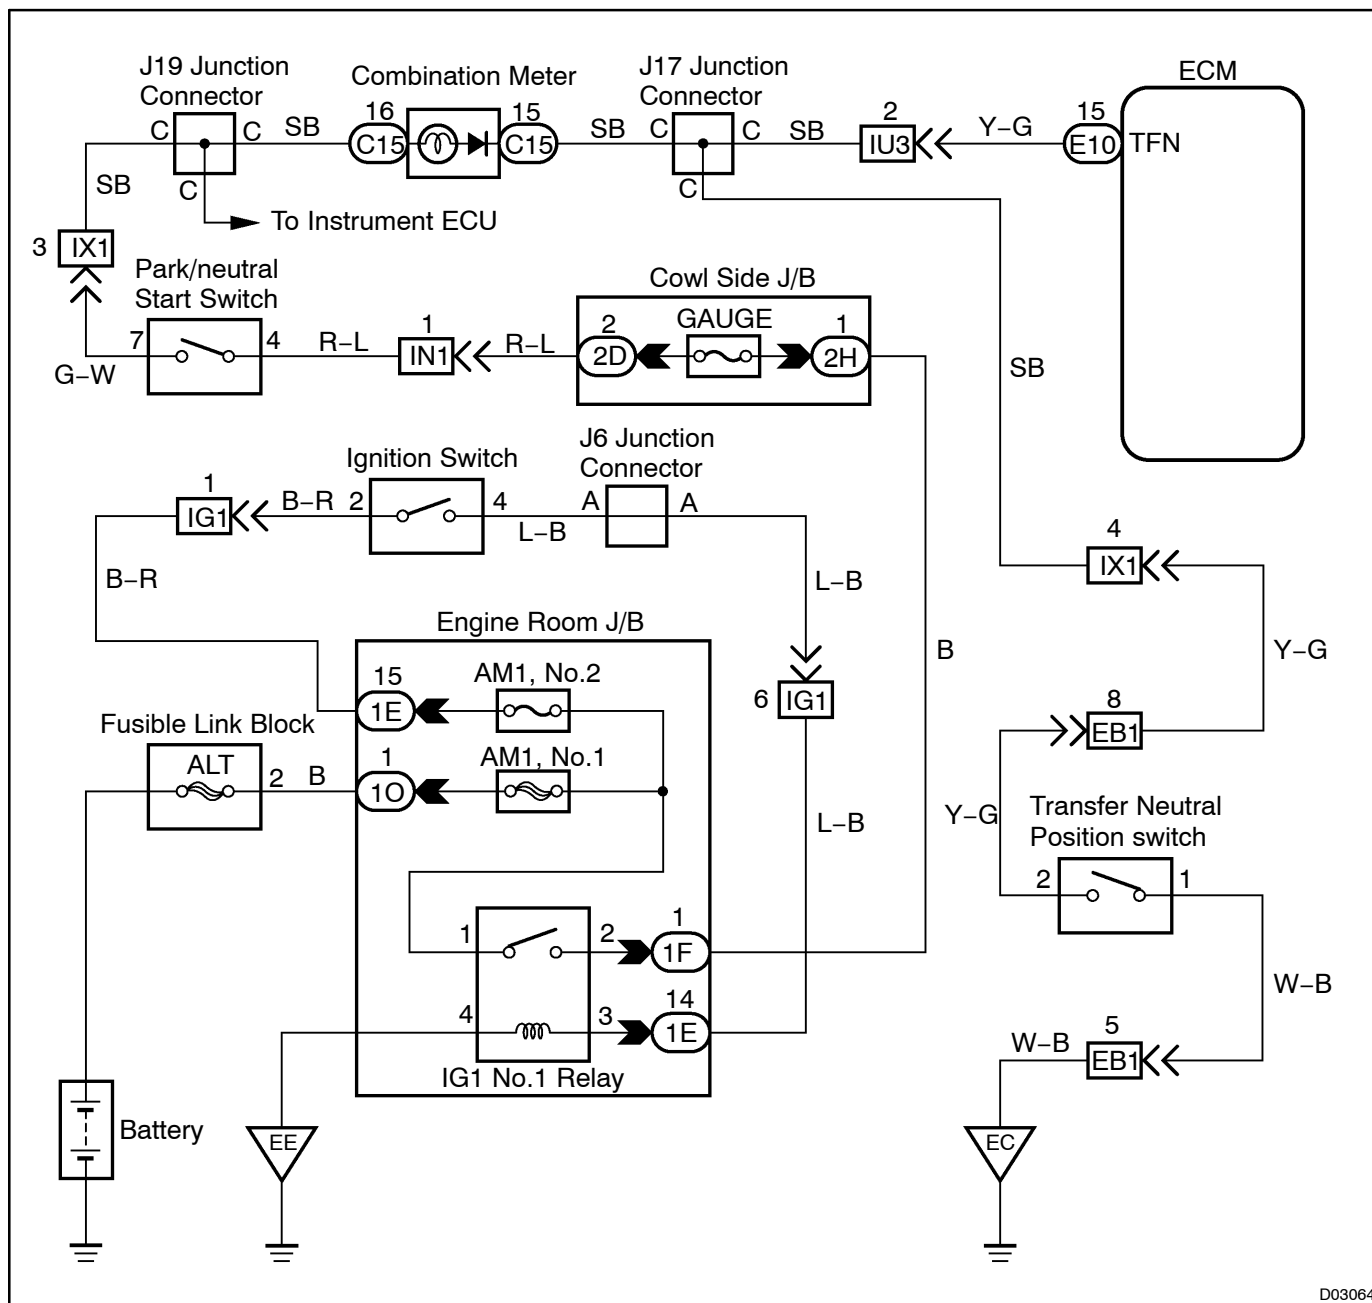

D03064

INSPECTION PROCEDURE

