



CIRCUIT DESCRIPTION

WIRING DIAGRAM

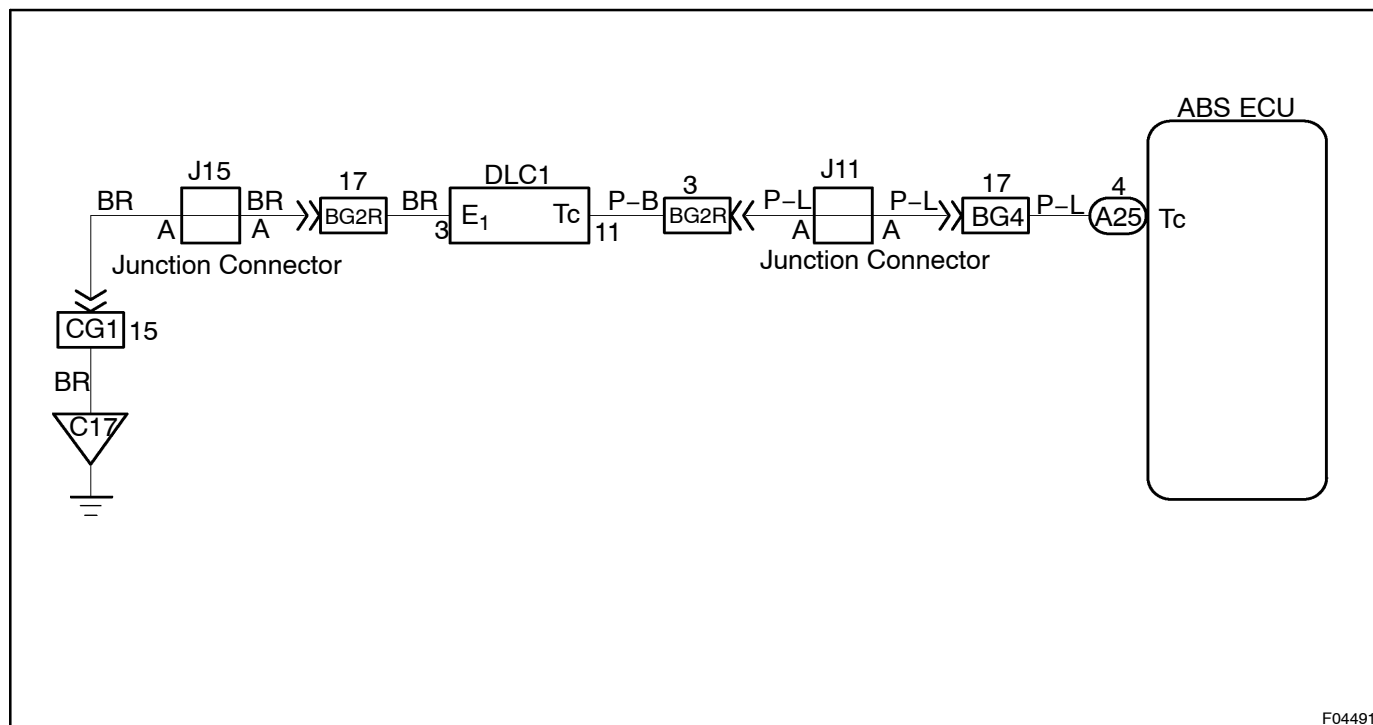

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and E₁ of DLC1.**

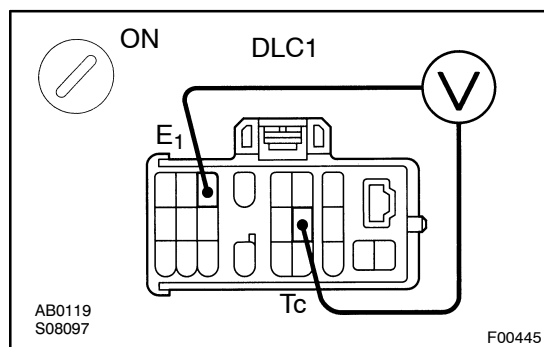

Turn ignition switch ON.

Measure voltage between terminal Tc and E1 of DLC1.

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and E₁ are connected, the ECU may be defective.

NG

2	IG switch OFF, and check for open and short circuit in harness and connector between ABS ECU and DLC1, DLC1 and body ground (See page IN-34).
---	--

NG**Repair or replace harness or connector.****OK****Check and replace ABS ECU.**