


Door key lock and unlock switch circuit

CIRCUIT DESCRIPTION


The door key lock and unlock switch is built in the door key cylinder. When the key is turned to the lock side, terminal 3 of the switch is grounded and when the key is turned to the unlock side, terminal 2 of the switch is grounded.

WIRING DIAGRAM

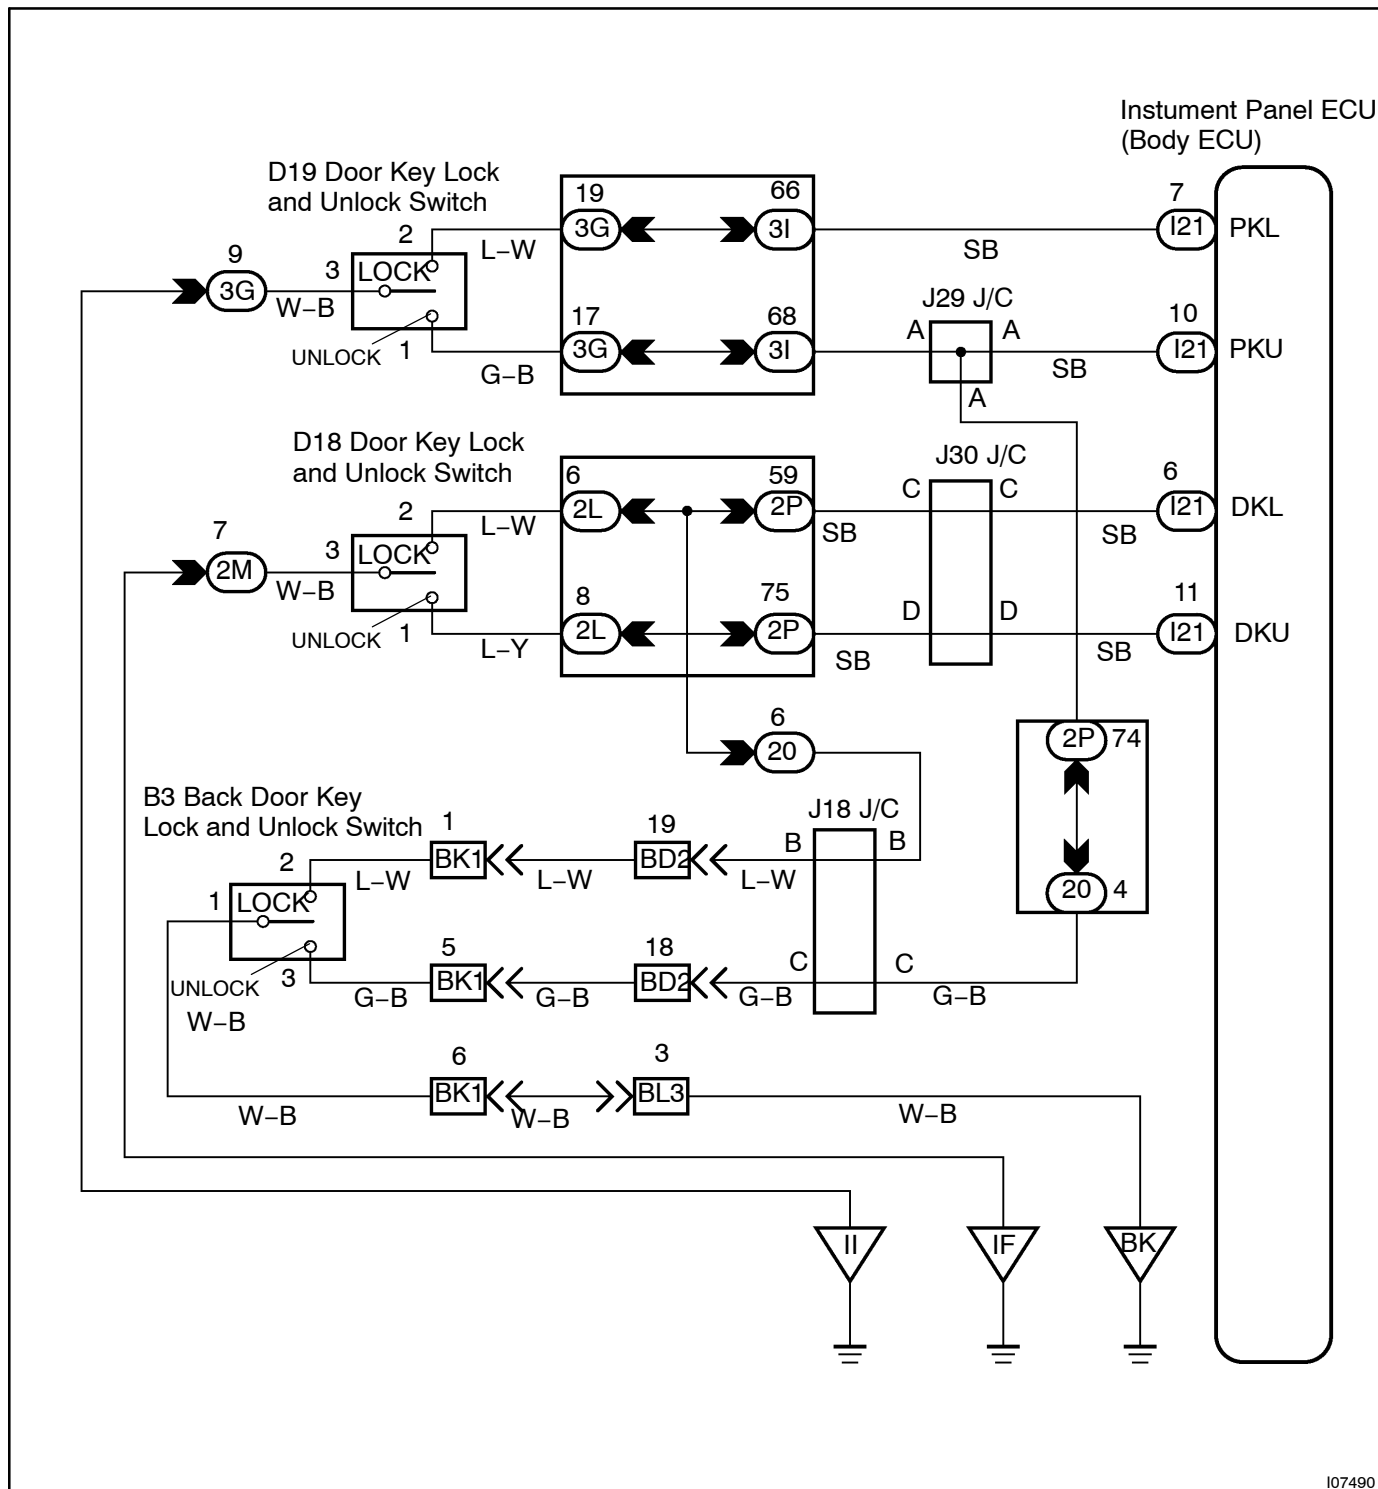


INSPECTION PROCEDURE

1	Check the door key lock and unlock switch. (See page BE-116)
----------	---

 

2	Check wireharness and connector between door key lock and unlock switch and body ECU.
----------	--

 

**Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-694](#))**