


Door lock motor and relay circuit

WIRING DIAGRAM

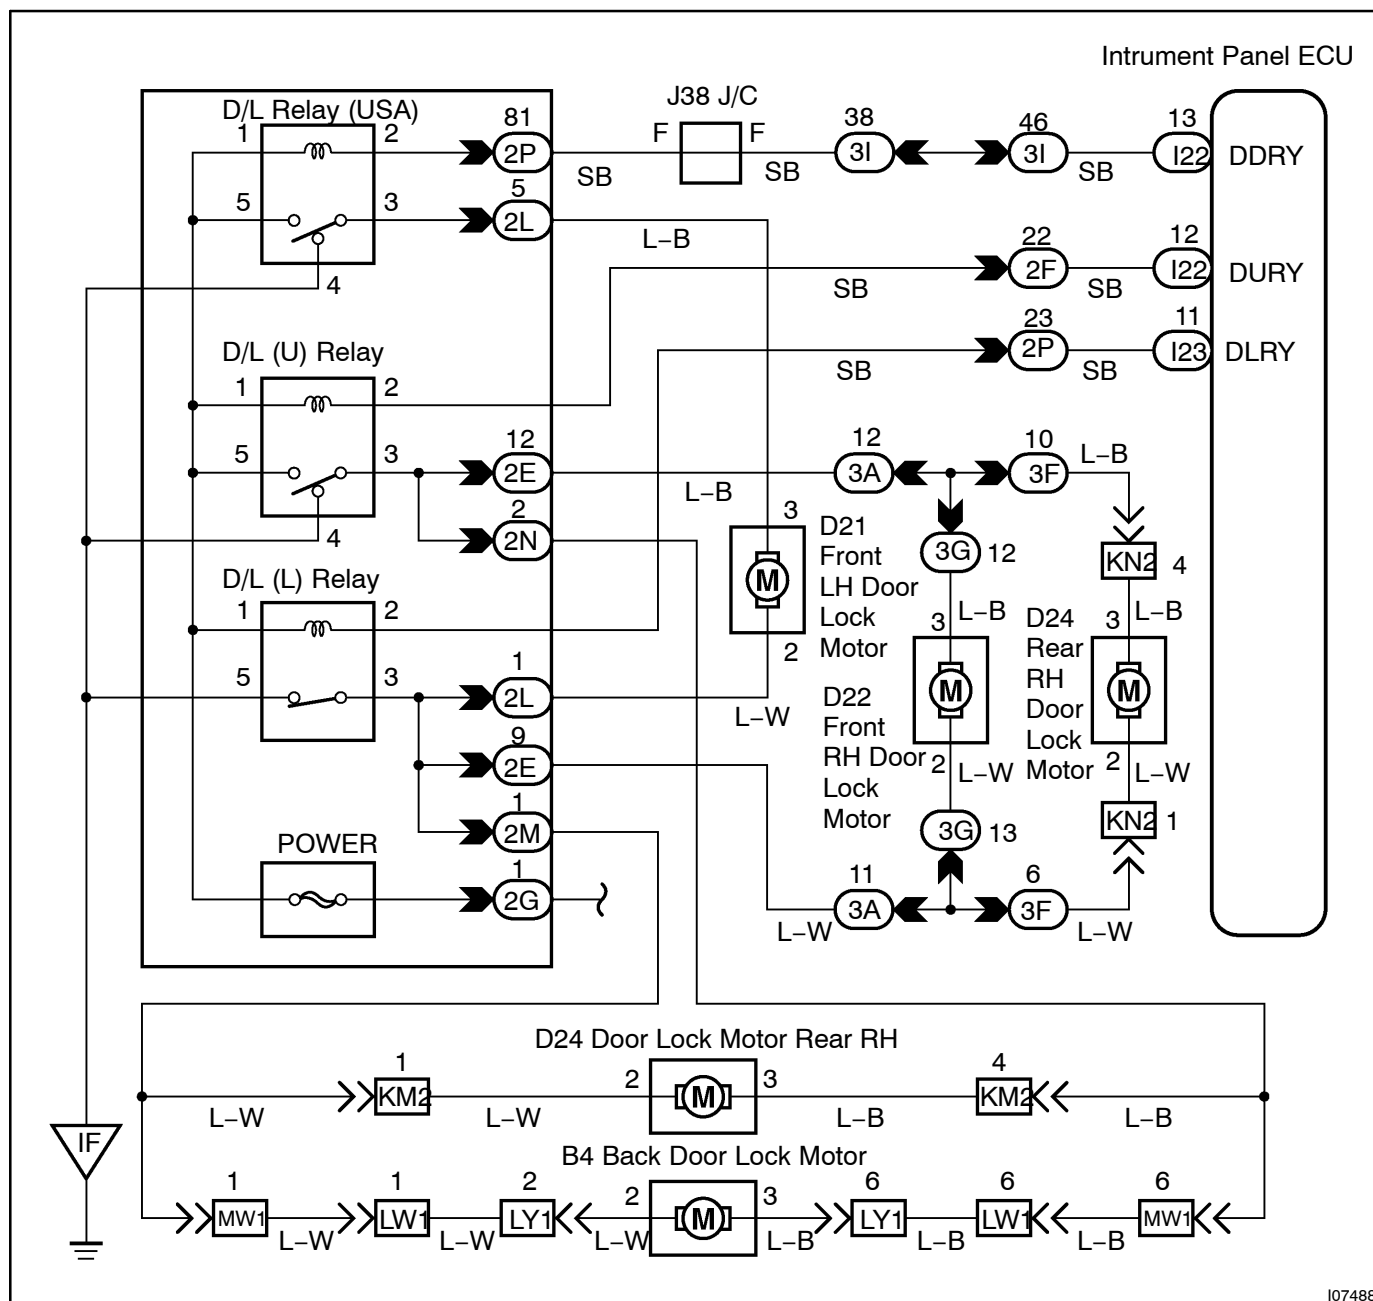

INSPECTION PROCEDURE

1	Check door lock relay. (See page BE-116)
----------	---

NG**Replace the door lock relay.****OK**

2	Check door lock motor. (See page BE-116)
----------	---

NG**Replace the door lock motor.****OK**

3	Check wireharness and connector between door lock motor and body ECU.
----------	--

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table.
(See page [DI-694](#))**