


Illumination circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU will make the interior light, ignition light, and courtesy light come on.

WIRING DIAGRAM

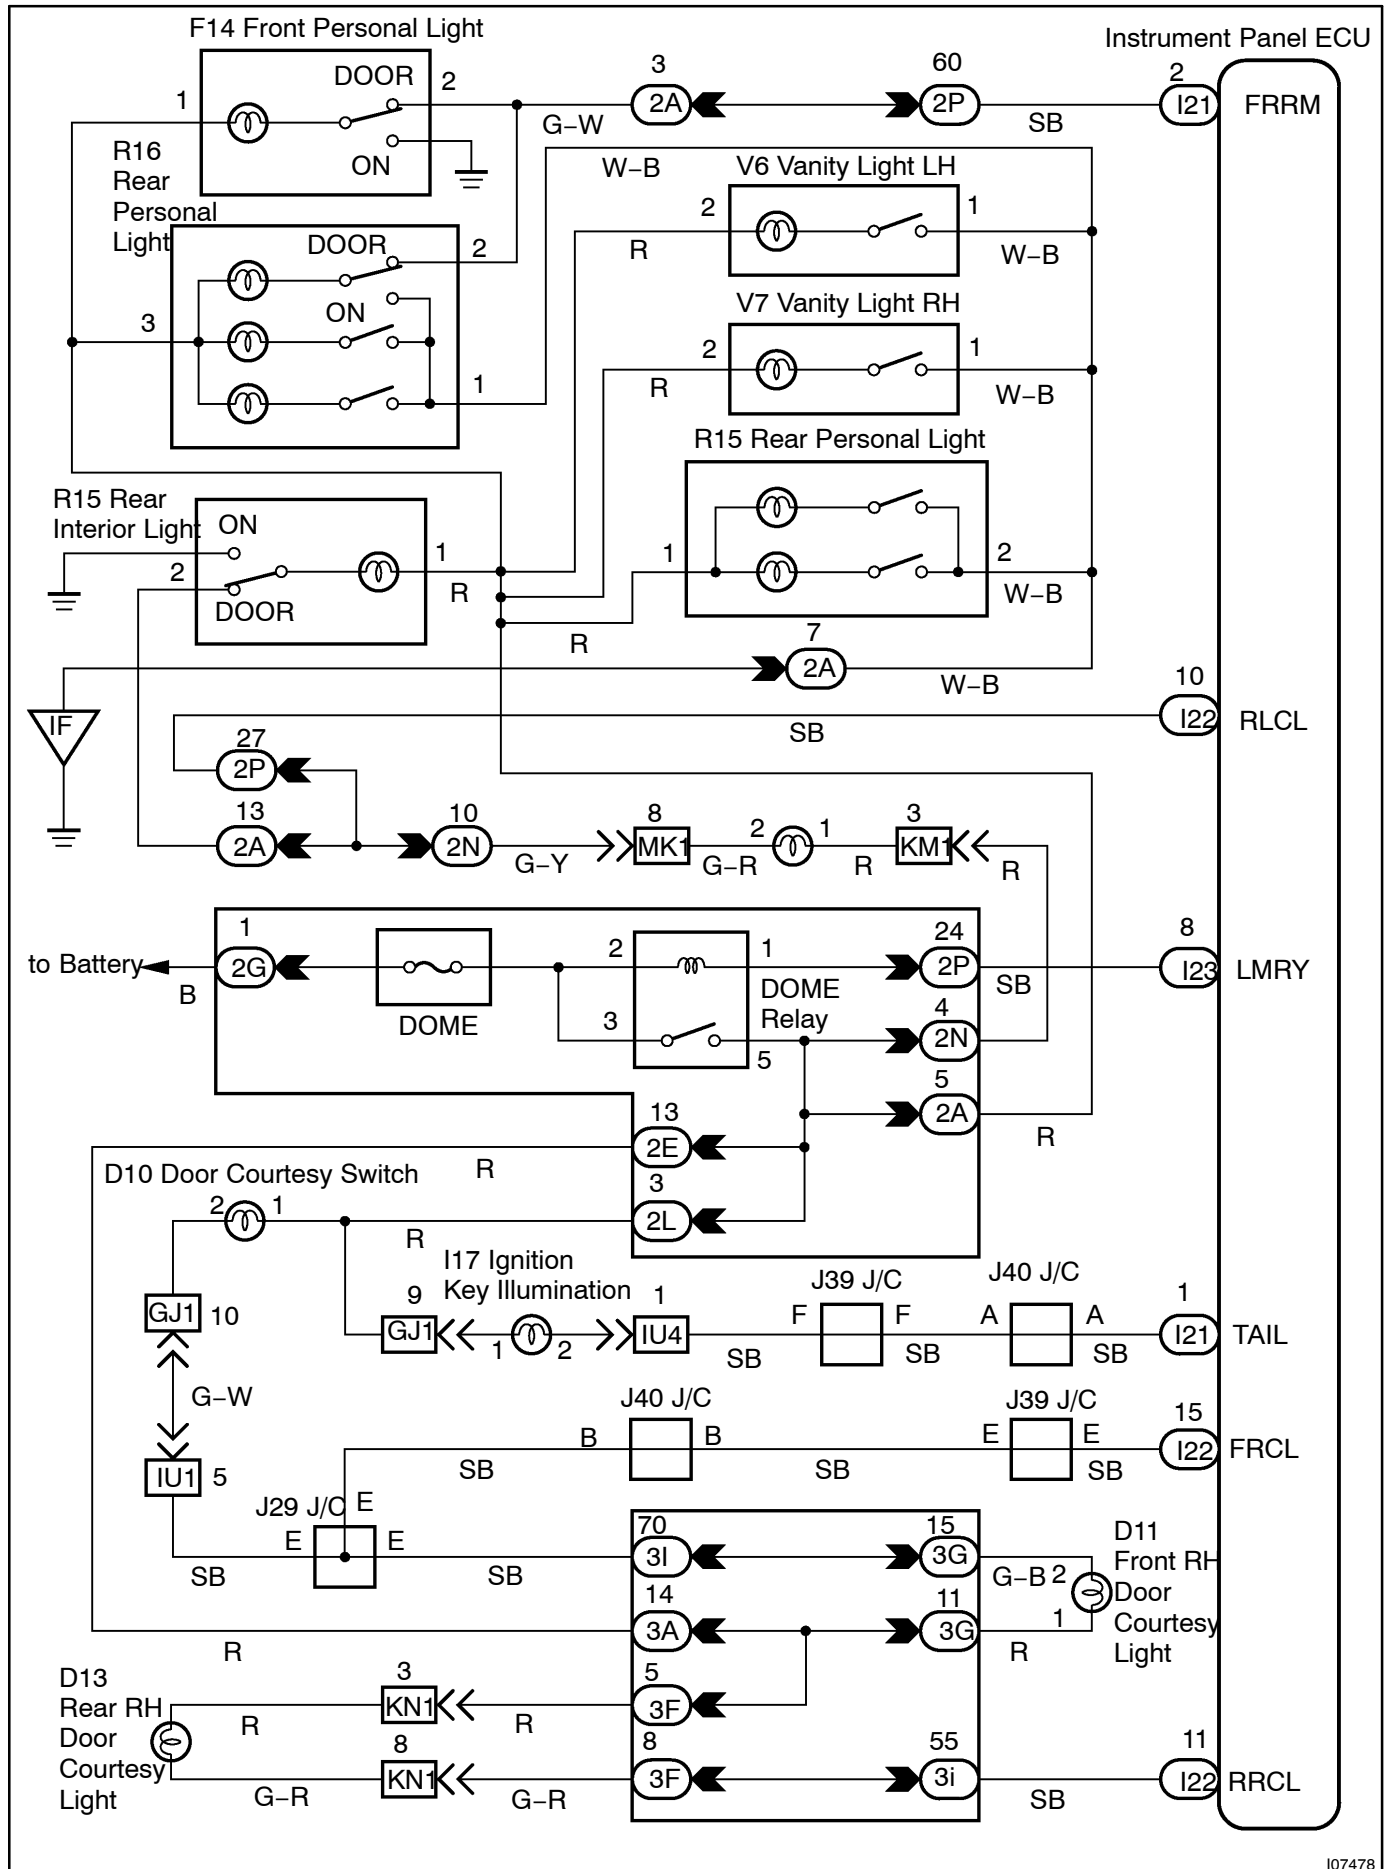

107478

1	Check DOME fuse.
---	------------------

Check DOME fuse.

Replace the fuse.



Check illumination light.

Replace the failure light.



Check wireharness and connector between each illumination light and Body ECU, battery and each illumination light .

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-694](#))