


Light control switch circuit

WIRING DIAGRAM

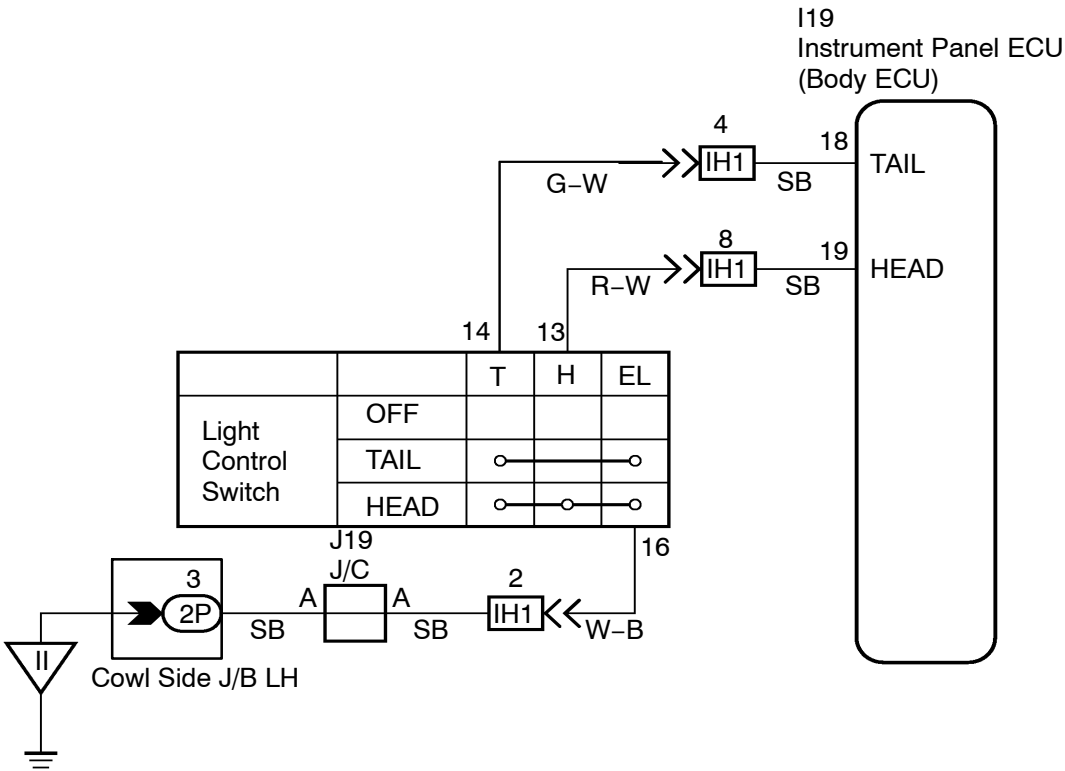

INSPECTION PROCEDURE

1	Check headlight control switch (See page BE-32)
----------	--

NG

Replace the headlight control switch.

OK

2	Check wireharness and connector between headlight control switch and Body ECU.
----------	---

NG

Repair or replace wireharness or connector.

OK

**Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-694](#))**