


Memory switch circuit (W/ memory)

WIRING DIAGRAM

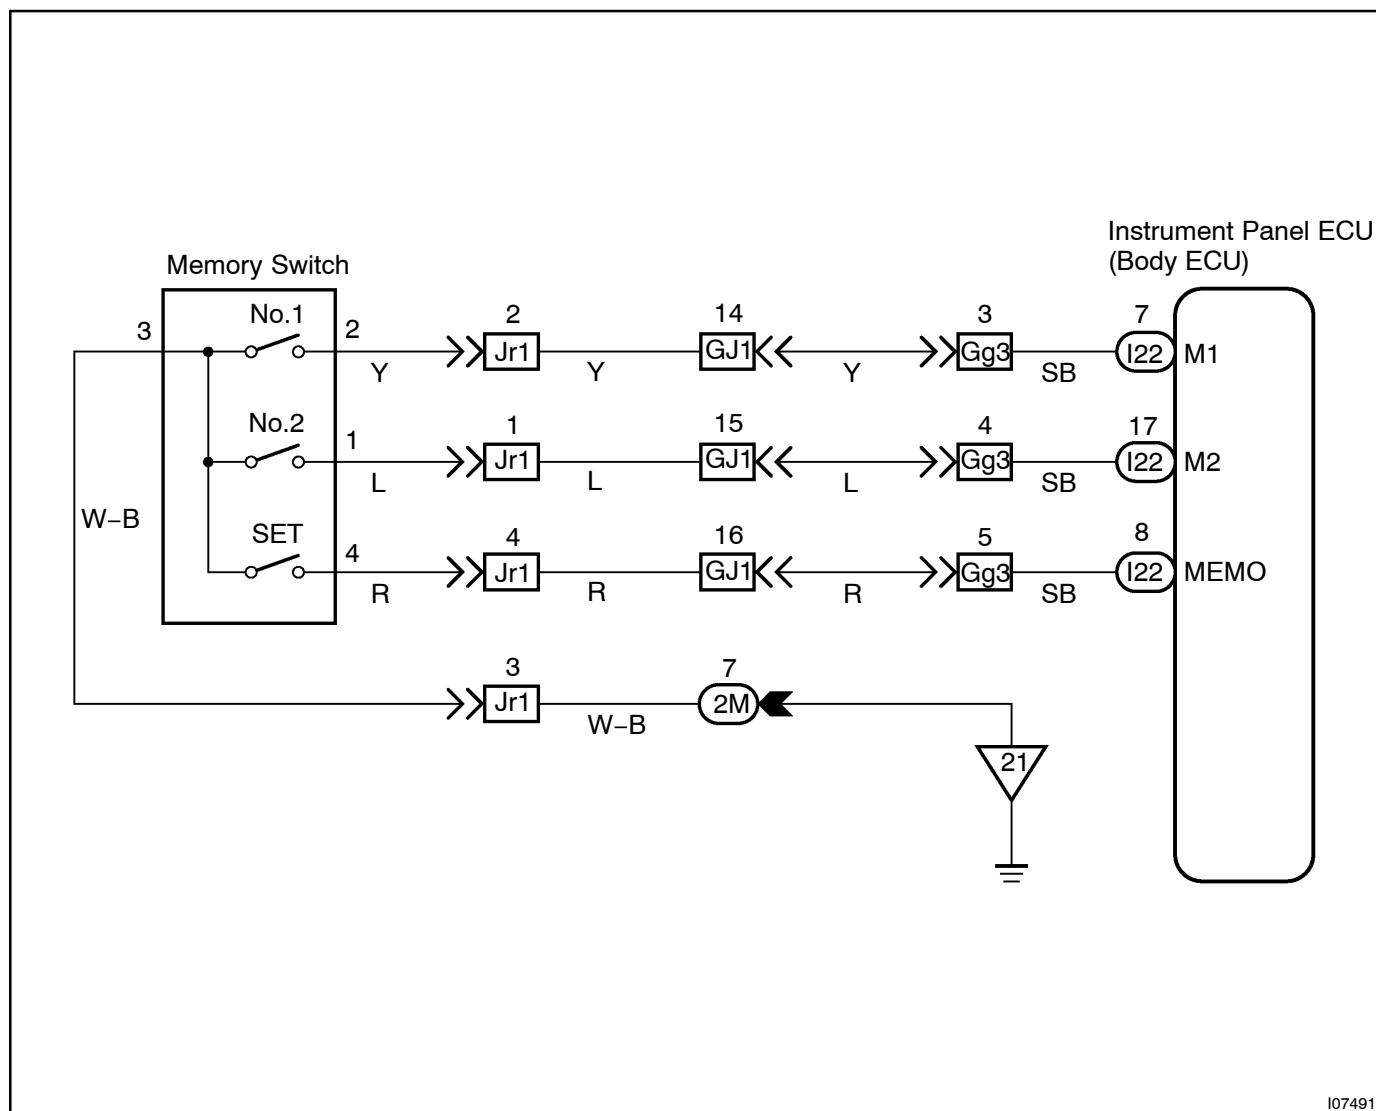

I07491

INSPECTION PROCEDURE

1	Check memory switch. (See page BE-133)
----------	---

NG	Replace the memory switch.
-----------	-----------------------------------

OK

2	Check wireharness and connector between memory switch and Body ECU.
----------	--

NG	Repair or replace wireharness or connector.
-----------	--

OK

**Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-694](#))**