


Park/Neutral Position Switch Circuit

CIRCUIT DESCRIPTION

The park/neutral position switch detects the shift lever position P and sends signals to the Body ECU.

WIRING DIAGRAM

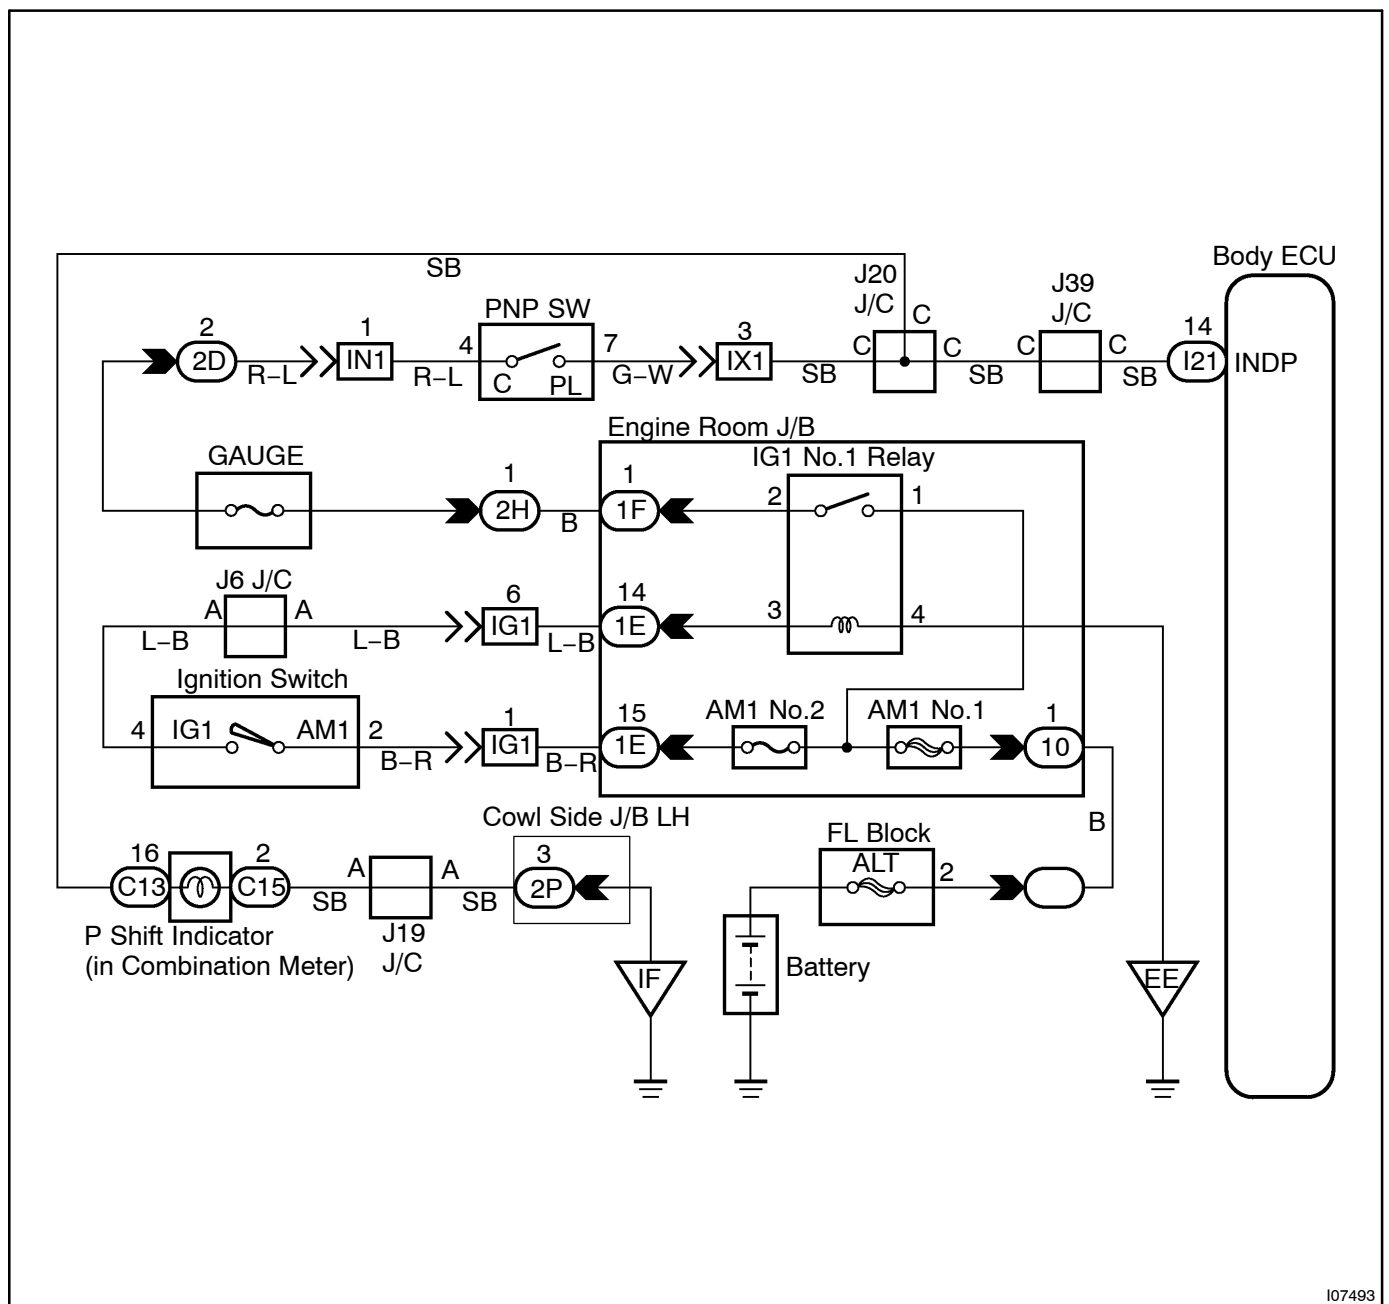

I07493

INSPECTION PROCEDURE

1	Check A/T shift operation.
----------	-----------------------------------

CHECK:

Check that the A/T shift operates normally.

NG

**Proceed to AT troubleshooting.
(See [ST-1](#)).**

OK

2	Check harness and connector between Body ECU and park/neutral position switch (See page IN-34).
----------	--

NG

Repair or replace harness or connector.

OK

Check and replace Body ECU (See page [IN-34](#)).