


Stop light switch circuit

CIRCUIT DESCRIPTION

The Body ECU is detecting the condition of the stop light switch.

WIRING DIAGRAM

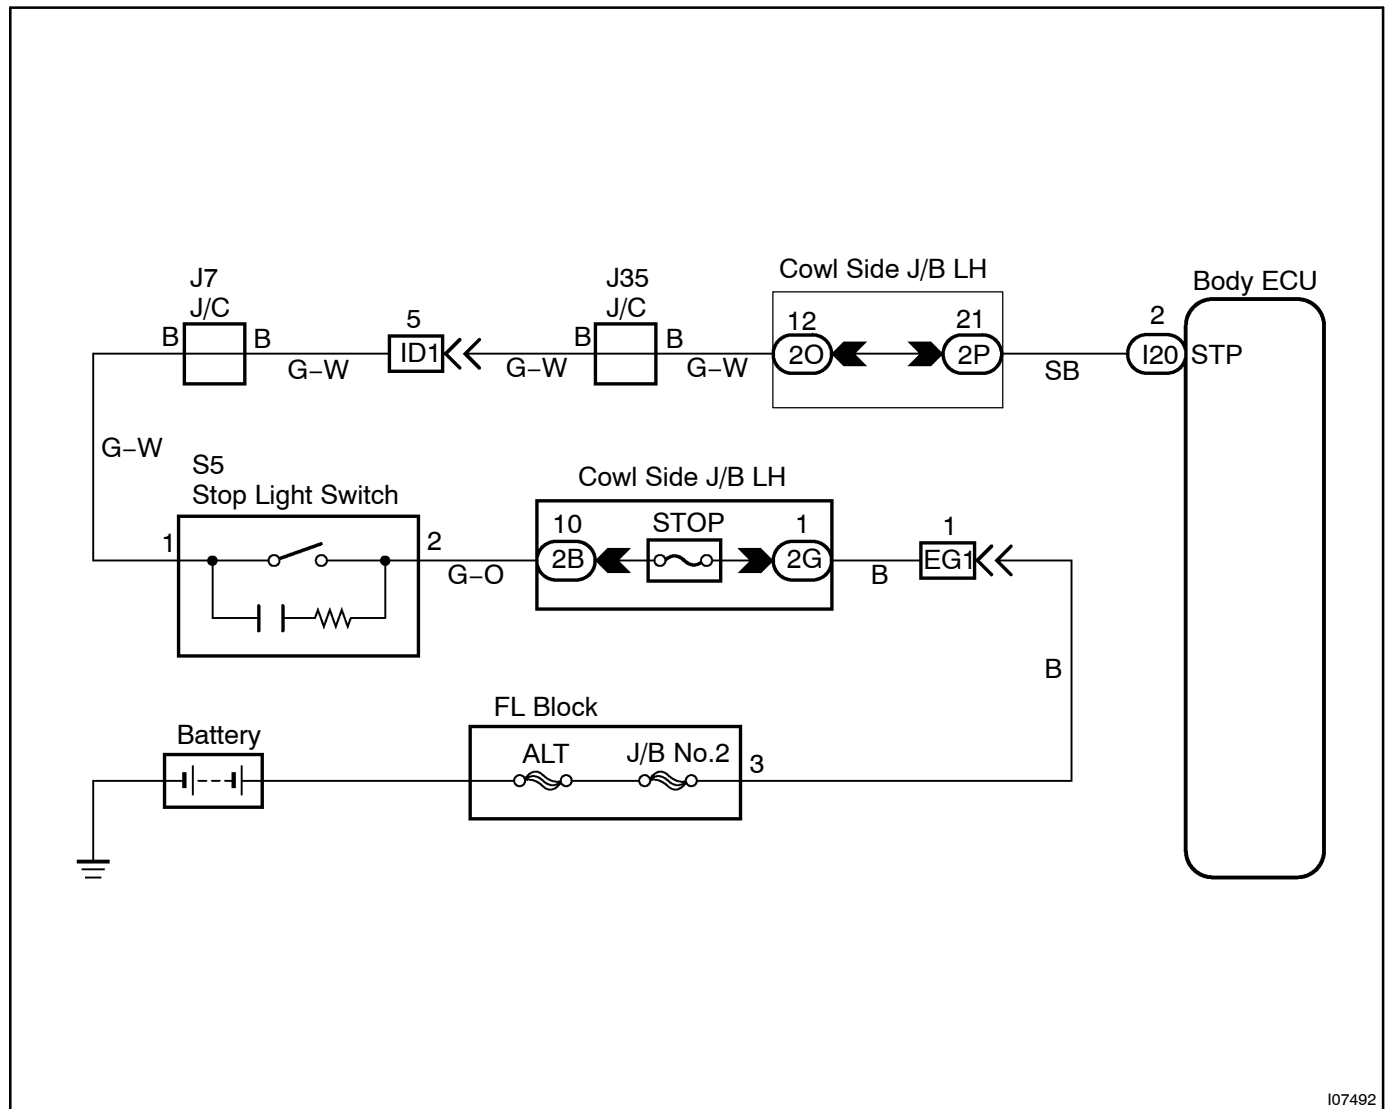

INSPECTION PROCEDURE

1	Check stop light switch. (See page BE-60)
---	--

NG	Replace the stop light switch.
----	--------------------------------

OK

2	Check wireharness and connector between stop light switch and Body ECU, battery and stop light switch.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-694](#))