


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Body ECU.

WIRING DIAGRAM

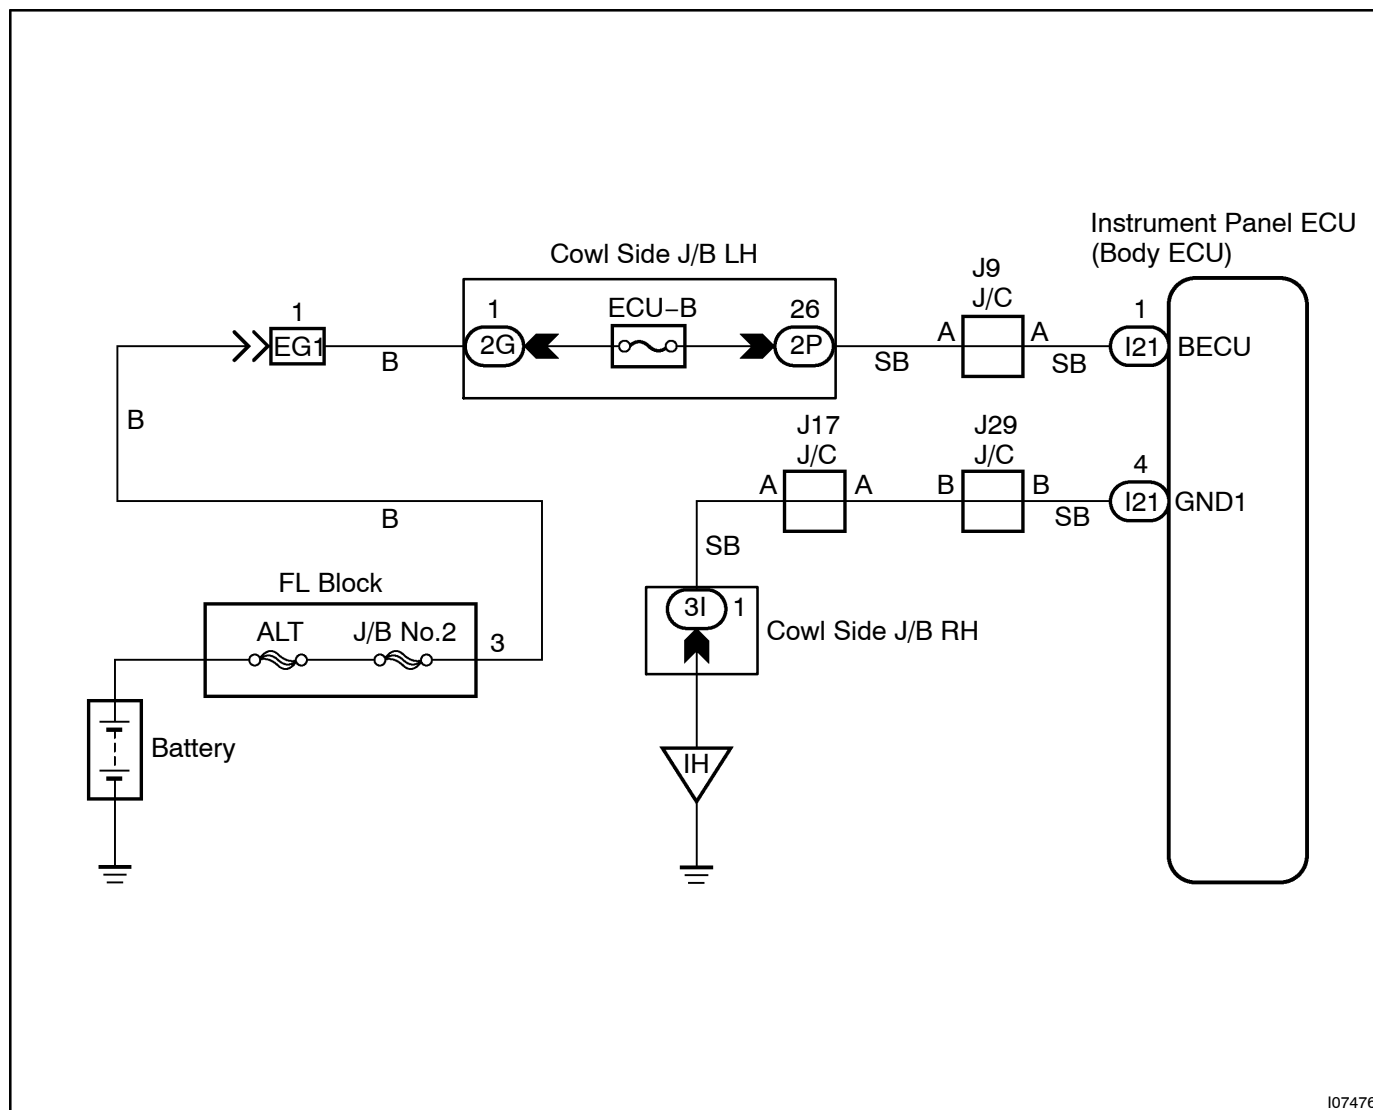

INSPECTION PROCEDURE

1 Check ECU-B fuse.

CHECK:

Check continuity of ECU-B fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2 Check voltage between terminals BECU and GND of Body ECU connector.

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the Body ECU connector.

CHECK:

Measure voltage between terminals BECU and GND.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-694](#))

NG

3 Check wireharness and connector between Body ECU and body ground.

NG

Repair or replace wireharness or connector.

OK

Check and repair wireharness and connector between Body ECU and battery.