

## DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

| DTC No.<br>(See Page)       | Circuit Inspection                     | Trouble Area                                                                                                                                                           |
|-----------------------------|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0500/<br>21,23<br>(DI-653) | Vehicle Speed Signal Abnormal          | <ul style="list-style-type: none"> <li>• Harness or connector between ECM and vehicle speed sensor</li> <li>• Vehicle speed sensor</li> <li>• ECM</li> </ul>           |
| P1520/ 52<br>(DI-654)       | Short in Stop Light Switch Circuit     | <ul style="list-style-type: none"> <li>• Stop light switch</li> <li>• Harness or connector between ECM and stop light switch circuit</li> <li>• ECM</li> </ul>         |
| P1565/ 32<br>(DI-658)       | Short in Cruise Control Switch Circuit | <ul style="list-style-type: none"> <li>• Cruise control switch</li> <li>• Harness or connector between ECM and cruise control switch circuit</li> <li>• ECM</li> </ul> |
| P1566/ 54<br>(DI-661)       | Input Signal Circuit                   | <ul style="list-style-type: none"> <li>• ECM</li> </ul>                                                                                                                |