


PARTS LOCATION

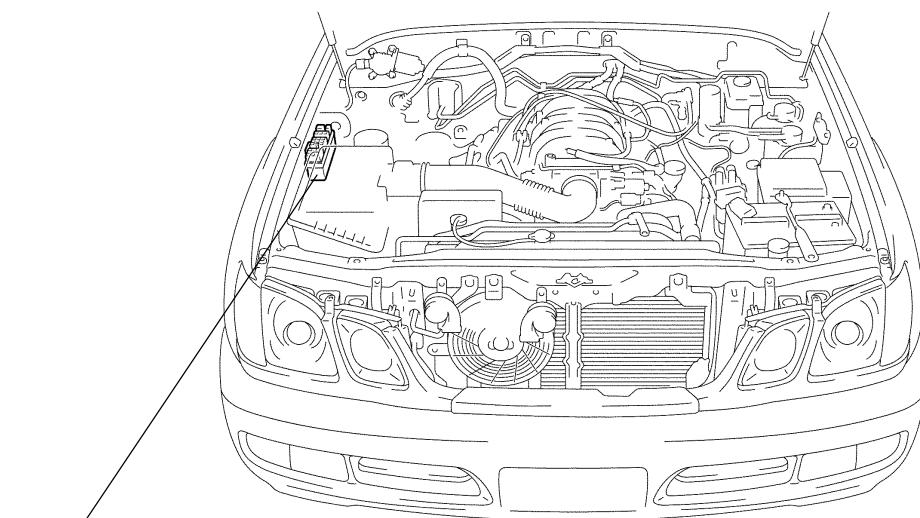

DLC1

Cruise Control MAIN Indicator

Cruise Control Switch

ECM

Driver Side Junction Block

- IGN Fuse
- STOP Fuse
- GAUGE Fuse

Stop Light Switch

Ignition Switch

DLC3

I07465