

|            |                 |                                        |
|------------|-----------------|----------------------------------------|
| <b>DTC</b> | <b>B0135/73</b> | <b>Short in P/T Squib (LH) Circuit</b> |
|------------|-----------------|----------------------------------------|

## CIRCUIT DESCRIPTION


The P/T squib (LH) circuit consists of the airbag sensor assembly and seat belt pretensioner (LH). It causes the seat belt pretensioner (LH) to activate when the seat belt pretensioner (LH) activation conditions are satisfied.

For details of the function of each component, see OPERATION on page [RS-2](#).

DTC B0135/73 is recorded when a short is detected in the P/T squib (LH) circuit.

| DTC No.  | DTC Detecting Condition                                                                                                                                                                                      | Trouble Area                                                                                                                              |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| B0135/73 | <ul style="list-style-type: none"> <li>• Short circuit between PL+ wire harness and PL- wire harness of squib</li> <li>• P/T squib (LH) malfunction</li> <li>• Airbag sensor assembly malfunction</li> </ul> | <ul style="list-style-type: none"> <li>• Seat belt pretensioner (LH)</li> <li>• Airbag sensor assembly</li> <li>• Wire harness</li> </ul> |


## WIRING DIAGRAM

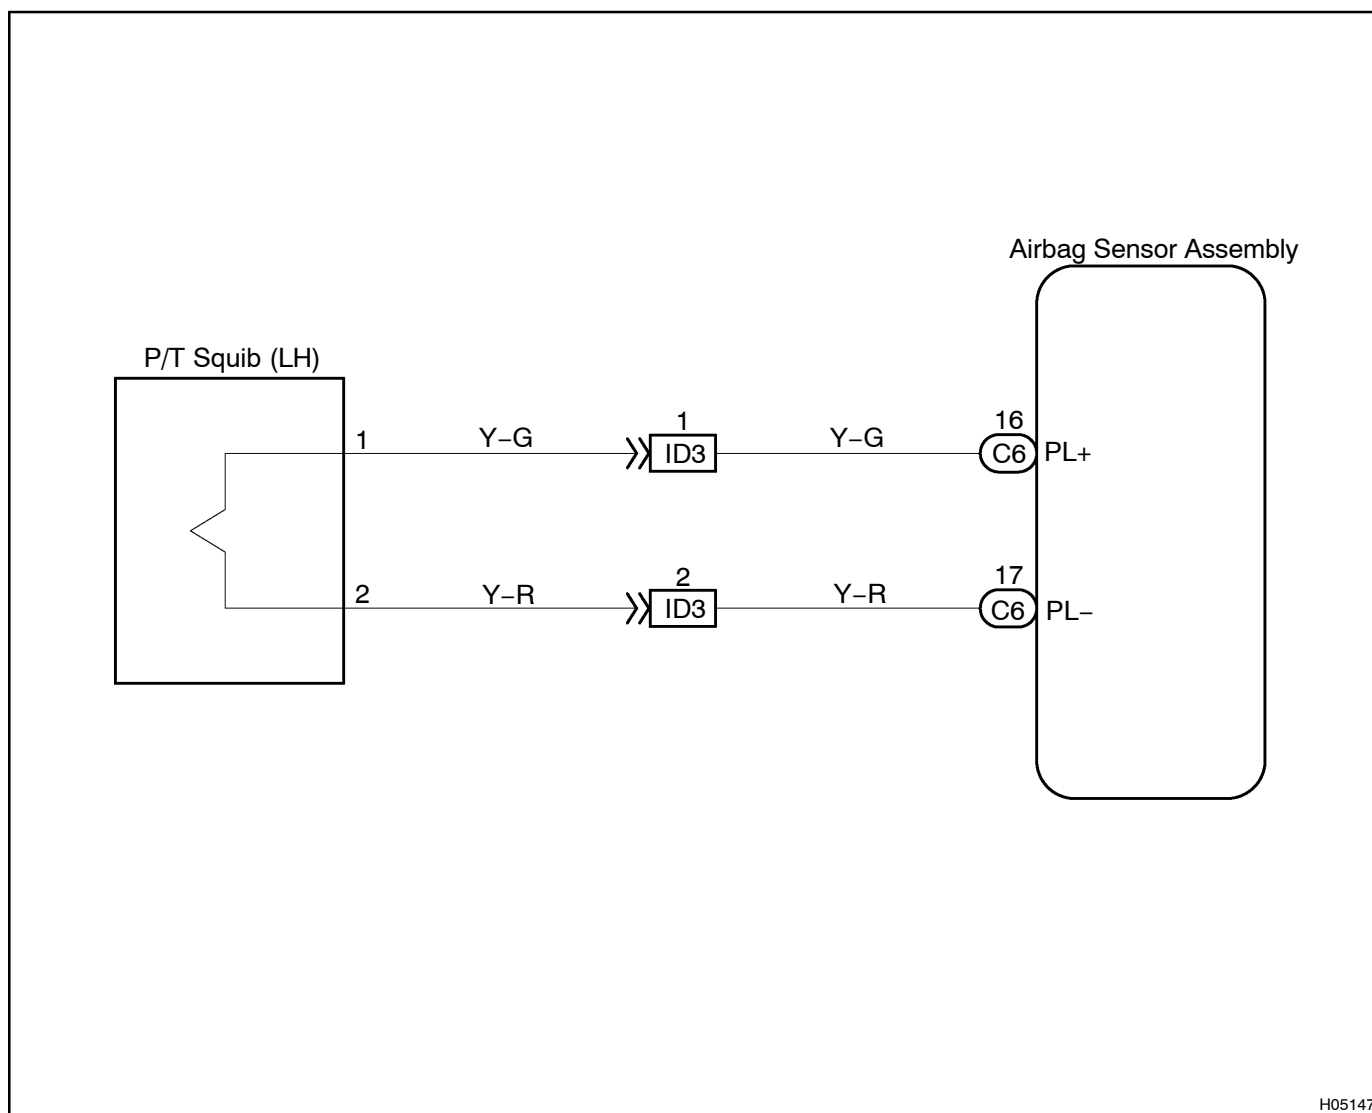


H05147

## INSPECTION PROCEDURE

 **1** Prepare for inspection. (See step 1 on page [DI-533](#))



**2** Check P/T squib (LH) circuit.

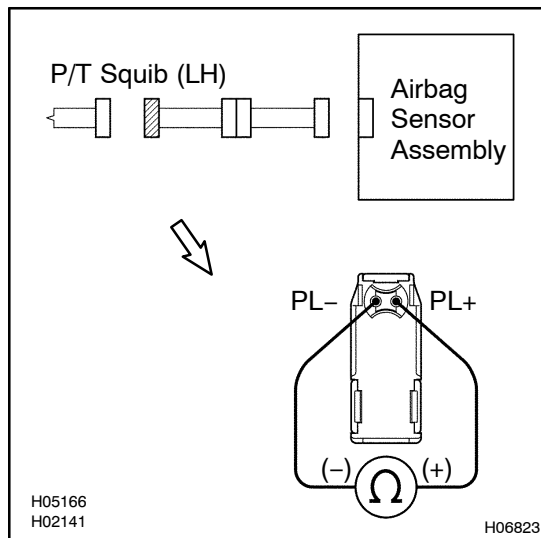**PREPARATION:**

Release airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the airbag sensor assembly and the seat belt pretensioner (LH).  
(See page [DI-432](#))

**CHECK:**

For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assembly, measure the resistance between PL+ and PL-.

**OK:**


**Resistance: 1 MΩ or Higher**

**NG**

**Go to step 5.**

**OK**

### 3 Check airbag sensor assembly.

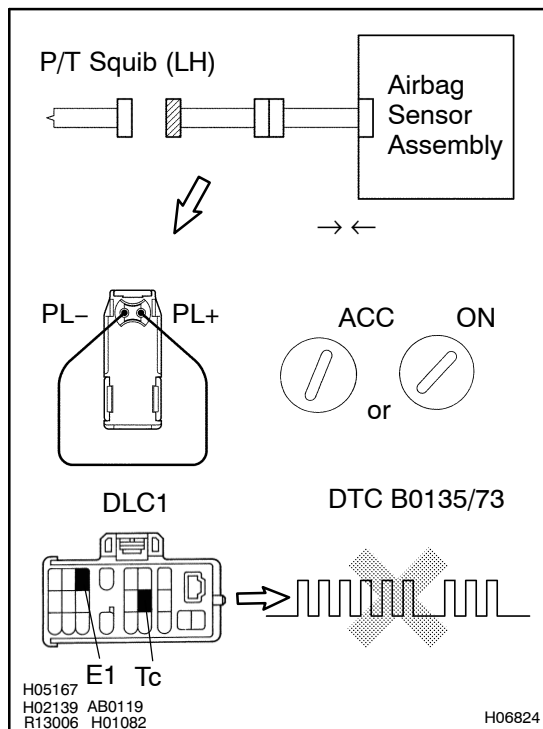

#### PREPARATION:

- Connect the connector to the airbag sensor assembly.
- Using a service wire, connect PL+ and PL- of the connector (on the seat belt pretensioner side) between the airbag sensor assembly and the seat belt pretensioner (LH).
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

#### CHECK:

- Turn ignition switch to ACC or ON and wait at least for 20 seconds.
- Clear DTC stored in memory.  
(See page [DI-432](#))
- Turn ignition switch to LOCK, and wait at least for 20 seconds.
- Turn ignition switch to ACC or ON, and wait at least for 20 seconds.
- Check DTC.  
(See page [DI-432](#))

#### OK:

**DTC B0135/73 is not output.**


#### HINT:

Codes other than code B0135/73 may be output at this time, but they are not relevant to this check.

**NG**

**Replace airbag sensor assembly.**

**OK**

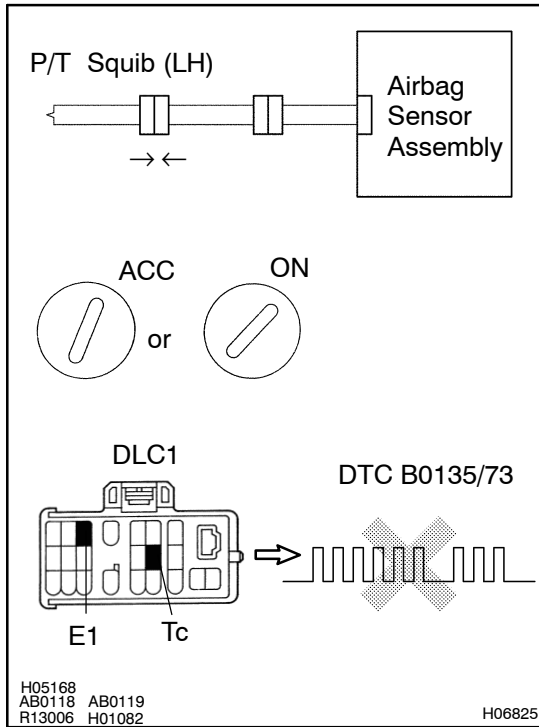**4 Check P/T squib (LH).****PREPARATION:**

- Turn ignition switch to LOCK.
- Disconnect negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the seat belt pretensioner (LH) connector.
- Connect negative (-) terminal cable to the battery, and wait at least for 2 seconds.

**CHECK:**

- Turn ignition switch to LOCK, and wait at least for 20 seconds.
- Turn ignition switch to ACC or ON, and wait at least for 20 seconds.
- Clear DTC stored in memory.  
(See page [DI-432](#))
- Turn ignition switch to LOCK, and wait at least for 20 seconds.
- Turn ignition switch to ACC or ON, and wait at least for 20 seconds.
- Check DTC.  
(See page [DI-432](#))


**OK:****DTC B0135/73 is not output.****HINT:**

Codes other than code B0135/73 may be output at this time, but they are not relevant to this check.

**NG****Replace seat belt pretensioner (LH).****OK**

From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.

## 5 Check floor wire harness.

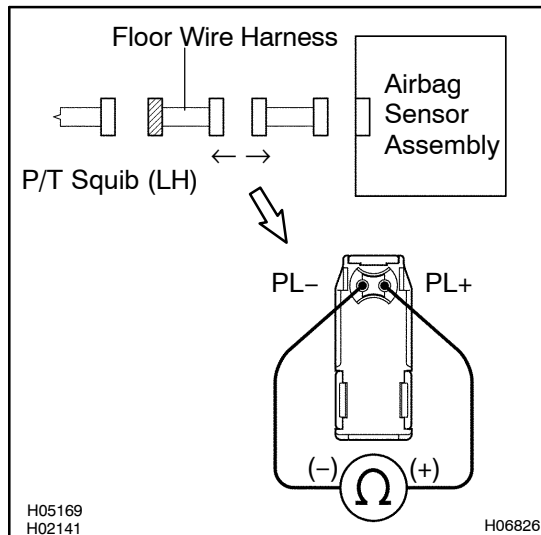

### PREPARATION:

- Disconnect floor wire harness connector on the airbag sensor assembly side.
- Release airbag activation prevention mechanism of the floor wire harness connector on the airbag sensor assembly side. (See page [DI-432](#))

### CHECK:

For the connector (on the floor wire harness side) between the seat belt pretensioner and the floor wire harness, measure the resistance between PL+ and PL-.

### OK:


**Resistance: 1 MΩ or Higher**

**NG**

**Replace floor wire harness.**

**OK**

## 6 Check harness between airbag sensor assembly and floor wire harness.

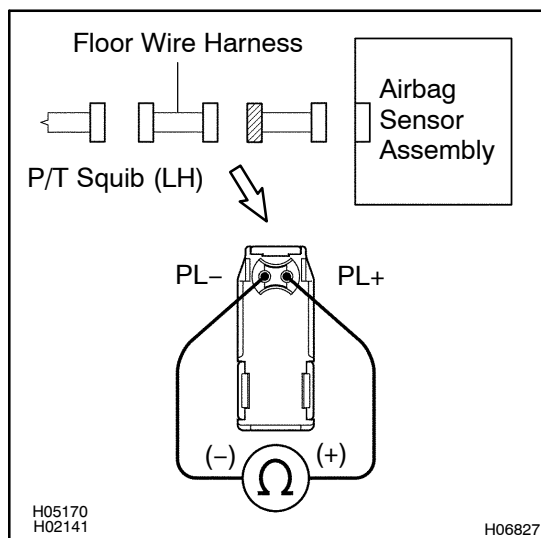

### PREPARATION:

Release airbag activation prevention mechanism of the airbag sensor assembly connector. (See page [DI-432](#))

### CHECK:

For the connector (on the floor wire harness side) between the airbag sensor assembly and floor wire harness, measure the resistance between PL+ and PL-.

### OK:

**Resistance: 1 MΩ or Higher**

**NG**

**Replace harness and connector between airbag sensor assembly and floor wire harness.**

**OK**

**From the results of the above inspection, the malfunctioning part can now be considered normal. To make sure of this, use the simulation method to check.**