


## TERMINALS OF ECU

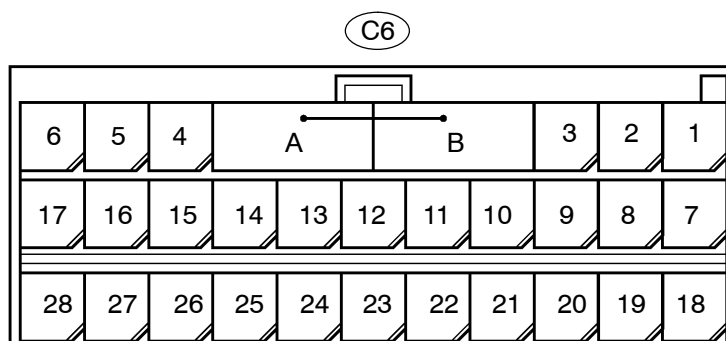

H01318

| No.     | Symbol | Terminal Name                        |
|---------|--------|--------------------------------------|
| A       | –      | Electrical Connector Check Mechanism |
| B       | –      | Electrical Connector Check Mechanism |
| C6 – 3  | LA     | SRS Warning Light                    |
| C6 – 5  | IG2    | Power Source (IGN Fuse)              |
| C6 – 6  | ACC    | Power Source (CIG Fuse)              |
| C6 – 7  | PR–    | Squib (Seat Belt Pretensioner, RH)   |
| C6 – 8  | PR+    | Squib (Seat Belt Pretensioner, RH)   |
| C6 – 9  | SR+    | Front Airbag Sensor (RH)             |
| C6 – 10 | P+     | Squib (Passenger)                    |
| C6 – 11 | P–     | Squib (Passenger)                    |
| C6 – 12 | SIL    | Diagnosis                            |
| C6 – 13 | D–     | Squib (Driver)                       |
| C6 – 14 | D+     | Squib (Driver)                       |
| C6 – 15 | SL+    | Front Airbag Sensor (LH)             |
| C6 – 16 | PL+    | Squib (Seat Belt Pretensioner, LH)   |
| C6 – 17 | PL–    | Squib (Seat Belt Pretensioner, LH)   |
| C6 – 19 | Tc     | Diagnosis                            |
| C6 – 20 | SR–    | Front Airbag Sensor (RH)             |
| C6 – 26 | SL–    | Front Airbag Sensor (LH)             |
| C6 – 27 | E1     | Ground                               |
| C6 – 28 | E2     | Ground                               |