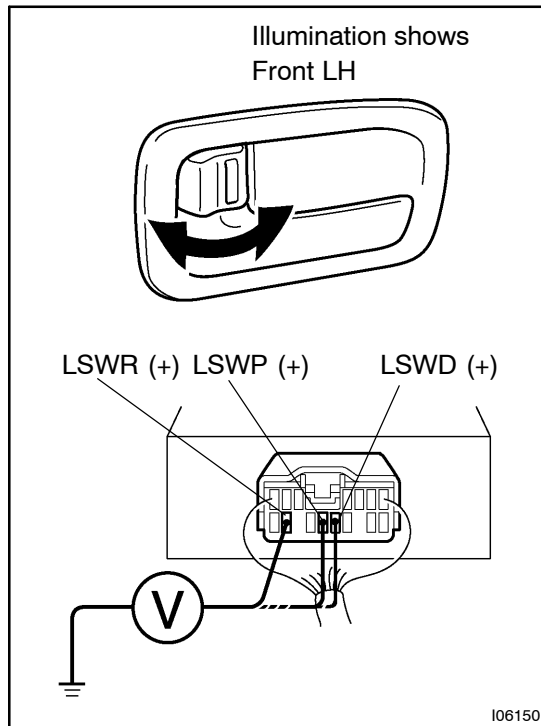


## 106294

## INSPECTION PROCEDURE

- |          |                                                                                                                 |
|----------|-----------------------------------------------------------------------------------------------------------------|
| <b>1</b> | <b>Check voltage between terminals LSWD, LSWP and LSWR of wireless door lock ECU connector and body ground.</b> |
|----------|-----------------------------------------------------------------------------------------------------------------|

**PREPARATION:**

Remove the wireless door lock ECU from instrument panel brace.

**CHECK:**

Measure voltage between terminals LSWD, LSWP and LSWR of wireless door lock ECU connector and body ground, when the respective door lock knobs are pushed to the lock side.

**OK:**

**Voltage 10 – 14 V**

**OK**

**Proceed to next circuit inspection shown in problem symptom table (See page [DI-581](#)).**

**NG**

**Check and repair harness and connector between wireless door lock ECU and door unlock detection switch.**