 
 
 
 
 
 
 


 
 
 
 
 
 
 
SUSPENSION AND AXLE

 
 
 
 
 
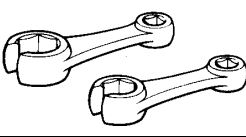 
 
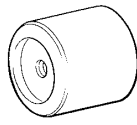 
 
 
 
SST (Special Service Tools)

PP1E8-01

 
 
 
 
 
 
 
	09023-00100 Union Nut Wrench 10 mm	Rear axle Rear differential AHC pump motor Control valve assembly
	09214-76011 Crankshaft Pulley Replacer	Rear differential
	09223-00010 Cover & Seal Replacer	Front differential
	09240-00020 Wire Gauge Set	Front drive shaft
	09308-00010 Oil Seal Puller	Front differential Rear axle Rear differential
	09308-10010 Oil Seal Puller	Front differential Rear differential
	09315-00022 Clutch Release Bearing Remover & Replacer	Front differential
	09316-20011 Transfer Bearing Replacer	Front drive shaft Front suspension
	09316-60011 Transmission & Transfer Bearing Replacer	Front differential Rear differential
	(09316-00011) Replacer Pipe	
	(09316-00021) Replacer "A"	
	09330-00021 Companion Flange Holding Tool	Front differential Rear differential

 
 
 
 
 
 
PREPARATION – SUSPENSION AND AXLE

	09350-30020 TOYOTA Automatic Transmission Tool Set	Front differential
	(09350-07060) No.1 Snap Ring Expander	
	09502-12010 Differential Bearing Replacer	Front differential
	09504-00011 Differential Side Bearing Adjusting Nut Wrench	Rear differential
	09504-22011 Differential Side Bearing Replacer	Front differential Rear differential (w/ Diff. lock)
	09506-30012 Differential Drive Pinion Rear Bearing Cone Replacer	Front differential
	09506-35010 Differential Drive Pinion Rear Bearing Replacer	Front differential Rear differential
	09521-24010 Drive Shaft Boot Clamping Tool	Front drive shaft
	09521-25011 Rear Axle Shaft Puller	Rear axle
	09521-25021 Rear Axle Shaft Puller Attachment	Rear axle
	09527-17011 Rear Axle Shaft Bearing Remover	Front suspension
	09550-00032 Replacer	Front differential
	09550-60010 Differential Side Bearing Replacer	Rear differential (w/ Diff. lock)

 
 
 
 
 
 
 
 
	09554-30011	Differential Oil Seal Replacer	Front differential
	09556-22010	Drive Pinion Front Bearing Remover	Front differential Rear differential
	09607-60020	Front Wheel Adjusting Nut Wrench	Front axle
	09628-62011	Ball Joint Puller	Front drive shaft Front suspension
	09631-12090	Seal Ring Tool	Rear axle
	09631-22020	Power Steering Hose Nut 14 x 17 mm Wrench Set	Height control accumulator Pump attenuator
	09631-32020	Seal Ring Tool	Front suspension
	09649-17010	Steering Knuckle Tool	Rear differential (w/ LSD)
	09709-29018	LSPV Gauge Set	AHC system
	09710-14013	Rear Suspension Bushing Tool Set	Rear suspension
	09710-22021	Front Suspension Bushing Tool Set	Front suspension
	(09710-01071)	Lower Arm Bushing Remover	
	09710-28012	Front Suspension Bushing Tool Set	Front suspension

 
 
 
PREPARATION – SUSPENSION AND AXLE

	(09710-07062) Bushing Replacer	
	(09710-07031) Bushing Replacer	
	09710-28021 Front Suspension Bushing Tool Set	Front suspension
	(09710-08031) Base	
	09710-30021 Suspension Bushing Tool Set	Front suspension
	(09710-03101) Bushing Replacer	
	09710-30050 Suspension Arm Bushing Replacer	Rear differential
	09726-35011 Front Lower Arm Bushing Remover & Replacer	Front suspension
	(09726-05021) Gate	
	09726-36010 Lower Control Arm Bushing Replacer	Front suspension
	09726-40010 Lower Control Shaft Bearing Replacer	Rear differential
	09751-36011 Brake Line Union Nut 10 x 12 mm Wrench	Height control accumulator Pump attenuator
	09830-36010 Front Mounting Cushion Remover & Replacer	Front suspension

	09922-10010 Variable Open Wrench	Damping force control actuator
	09950-00020 Bearing Remover	Front drive shaft Front differential Rear differential
	09950-00030 Bearing Remover Attachment	Front suspension Rear differential
	09950-30010 Puller A Set	Front differential Rear differential
	(09951-03010) Upper Plate	
	(09953-03010) Center Bolt	
	(09954-03010) Arm	
	(09955-03030) Lower Plate 130	
	(09956-03020) Adapter 18	
	(09956-03040) Adapter 22	
	09950-40011 Puller B Set	Front suspension Front differential Rear differential
	(09951-04010) Hanger 150	
	(09952-04010) Slide Arm	

PREPARATION - SUSPENSION AND AXLE

	(09953-04020) Center Bolt 150	
	(09953-04030) Center Bolt 200	
	(09954-04010) Arm 25	
	(09955-04060) Claw No.6	
	(09957-04010) Attachment	
	(09958-04010) Holder	
	09950-60010 Replacer Set	Front suspension Rear differential AHC pump motor
	(09951-00310) Replacer 31	
	(09951-00400) Replacer 40	
	(09951-00410) Replacer 41	
	(09951-00540) Replacer 54	
	(09951-00580) Replacer 58	
	09950-60020 Replacer Set No.2	Front axle Front differential Rear axle Rear differential

	(09951-00710) Replacer 71	
	(09951-00730) Replacer 73	
	(09951-00780) Replacer 78	
	(09951-00810) Replacer 81	
	(09951-00890) Replacer 89	
	(09951-00910) Replacer 91	
	(09951-01030) Replacer 103	
	09950-70010 Handle Set	Front and rear axle Front suspension Rear differential AHC pump motor
	(09951-07100) Handle 100	
	(09951-07150) Handle 150	