 
 
 
 


 
 
 
 
 
 
 
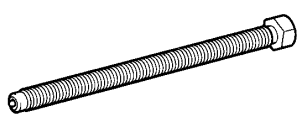 
 
 
 
 
TRANSFER

 
 
 
 
 
 
SST (Special Service Tools)

PP1DV-01

	09223-00010	Cover & Seal Replacer	Center differential
	09316-12010	Transfer Bearing Replacer	Center differential
	09316-20011	Transfer Bearing Replacer	Front extension housing, Rear extension housing, Transfer assembly
	09316-60011	Transmission & Transfer Bearing Replacer	Center differential
	(09316-00011)	Replacer Pipe	Front extension housing, Rear extension housing, Idler gear, Transfer assembly, Center differential, Input shaft
	(09316-00021)	Replacer "A"	Rear extension housing
	(09316-00031)	Replacer "B"	Front extension housing, Rear extension housing, Idler gear, Transfer assembly, Input shaft
	(09316-00041)	Replacer "C"	Transfer assembly, Front extension housing, Rear extension housing
	(09316-00061)	Replacer "E"	Front extension housing
	(09316-00071)	Replacer "F"	Idler gear, Front extension housing
	09325-12010	Transmission Oil Plug	Rear extension housing
	09527-30010	Rear Axle Shaft Bearing Remover	Input shaft

PREPARATION – TRANSFER

	09612-24014	Steering Gear Housing Overhaul Tool Set	Center differential
	(09612-10050)	Steering Rack Shaft Bushing Replacer	Center differential
	09950-00020	Bearing Remover	Idler gear, Center differential, Front extension housing
	09950-00030	Bearing Remover Attachment	Center differential
	09950-40011	Puller B Set	Transfer assembly, Front extension housing, Idler gear
	(09951-04010)	Hanger 150	Idler gear
	(09951-04020)	Hanger 200	Input shaft, Front extension housing
	(09952-04010)	Slide Arm	Input shaft, Idler gear, Front extension housing
	(09953-04030)	Center Bolt 200	Input shaft, Idler gear, Front extension housing
	(09954-04010)	Arm 25	Input shaft, Front extension housing
	(09954-04020)	Arm 100	Front extension housing
	(09955-04010)	Claw No.1	Input shaft
	(09955-04020)	Claw No.2	Front extension housing

	(09955-04050) Claw No.5	Front extension housing
	(09955-04060) Claw No.6	Idler gear
	(09957-04010) Attachment	Transfer assembly, Input shaft, Idler gear, Front extension housing
	(09958-04010) Holder	Input shaft, Idler gear, Front extension housing
	09950-60010 Replacer Set	Input shaft, Idler gear, Center differential
	(09951-00270) Replacer 27	Transfer assembly
	(09951-00320) Replacer 32	Transfer assembly, Center differential
	(09951-00330) Replacer 33	Idler gear
	(09951-00400) Replacer 40	Center differential, Input shaft
	09950-60020 Replacer Set No.2	Transfer assembly
	(09951-00790) Replacer 79	Transfer assembly
	(09951-00890) Replacer 89	Transfer assembly
	09950-70010 Handle Set	Transfer assembly, Front extension housing, Center differential

PREPARATION - TRANSFER

	(09951-07150) Handle 150 Transfer assembly
---	--