

INSPECTION

1. REMOVE FUEL PUMP ECU
2. INSPECT FUEL PUMP ECU (See page [DI-121](#))
3. REINSTALL FUEL PUMP ECU