


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

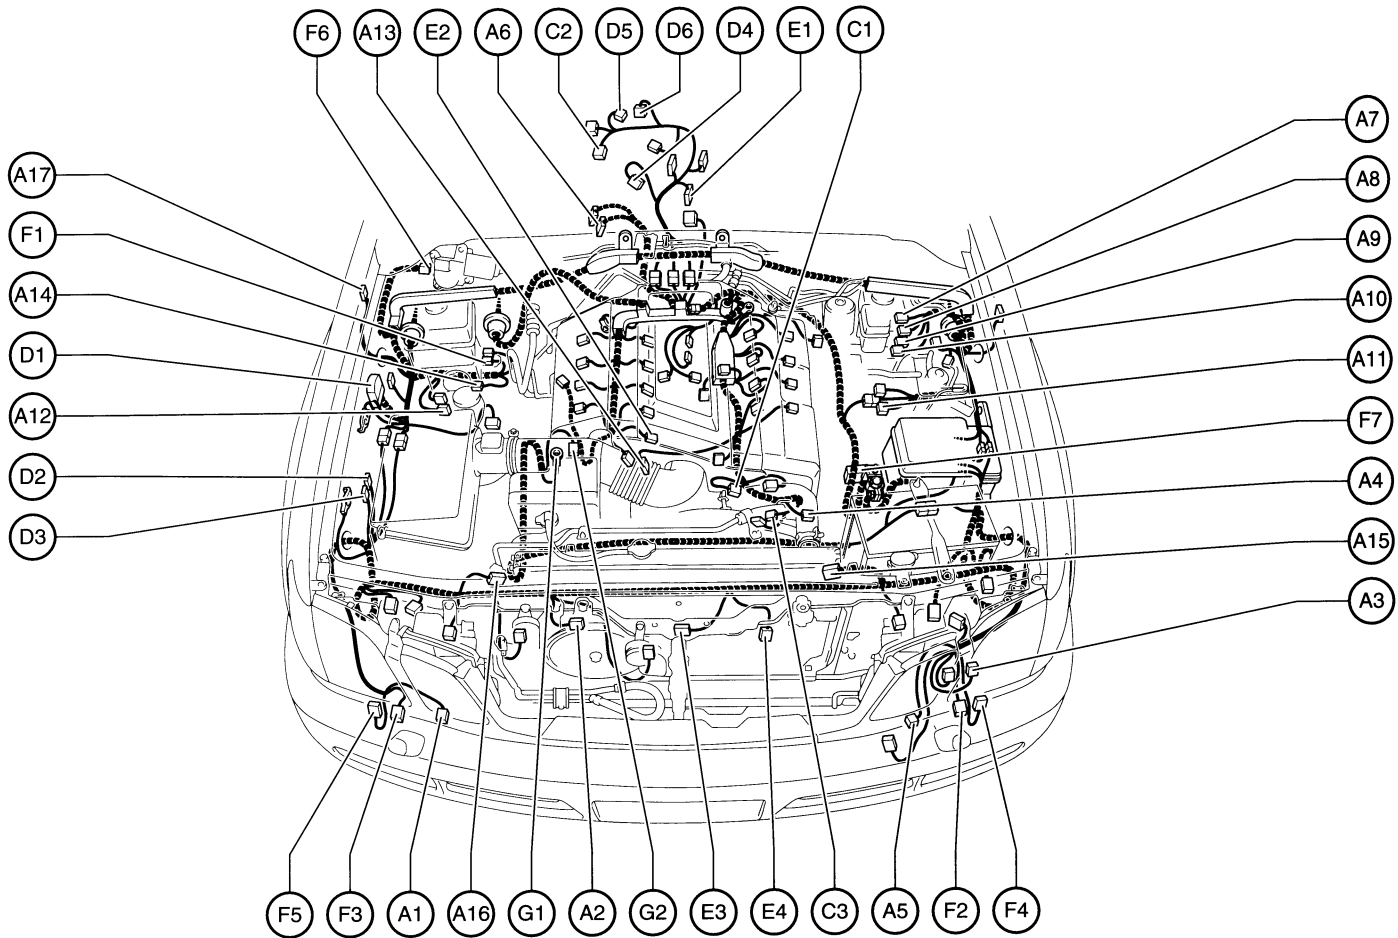

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Condenser Fan Relay
 A 4 A/C Magnetic Clutch and Lock Sensor
 A 5 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A 6 A/T Oil Temp. Sensor
 A 7 ABS Actuator
 A 8 ABS Actuator
 A 9 ABS Actuator
 A 10 ABS Actuator
 A 11 ABS Speed Sensor Front LH
 A 12 ABS Speed Sensor Front RH
 A 13 Accel Position Sensor
 A 14 AHC Pump Motor
 A 15 Airbag Sensor Front LH
 A 16 Airbag Sensor Front RH
 A 17 Auto Antenna Motor

C 1 Camshaft Position Sensor
 C 2 Center Diff. Lock Control Motor
 C 3 Crankshaft Position Sensor


D 1 Data Link Connector 1
 D 2 Daytime Running Light Relay No. 3
 D 3 Daytime Running Light Relay No. 3
 D 4 Detection SW (Center Diff. Lock)
 D 5 Detection SW (Transfer L Position)
 D 6 Detection SW (Transfer Neutral Position)

E 1 Electronically Controlled Transmission Solenoid
 E 2 Engine Coolant Temp. Sensor
 E 3 Engine Hood Courtesy SW
 E 4 Exhaust Gas Sensor

F 1 Fluid Pressure Sensor
 F 2 Front Fog Light LH
 F 3 Front Fog Light RH
 F 4 Front Turn Signal Light LH
 F 5 Front Turn Signal Light RH
 F 6 Front Wiper Motor
 F 7 Fusible Link Block

G 1 Generator
 G 2 Generator

Position of Parts in Engine Compartment

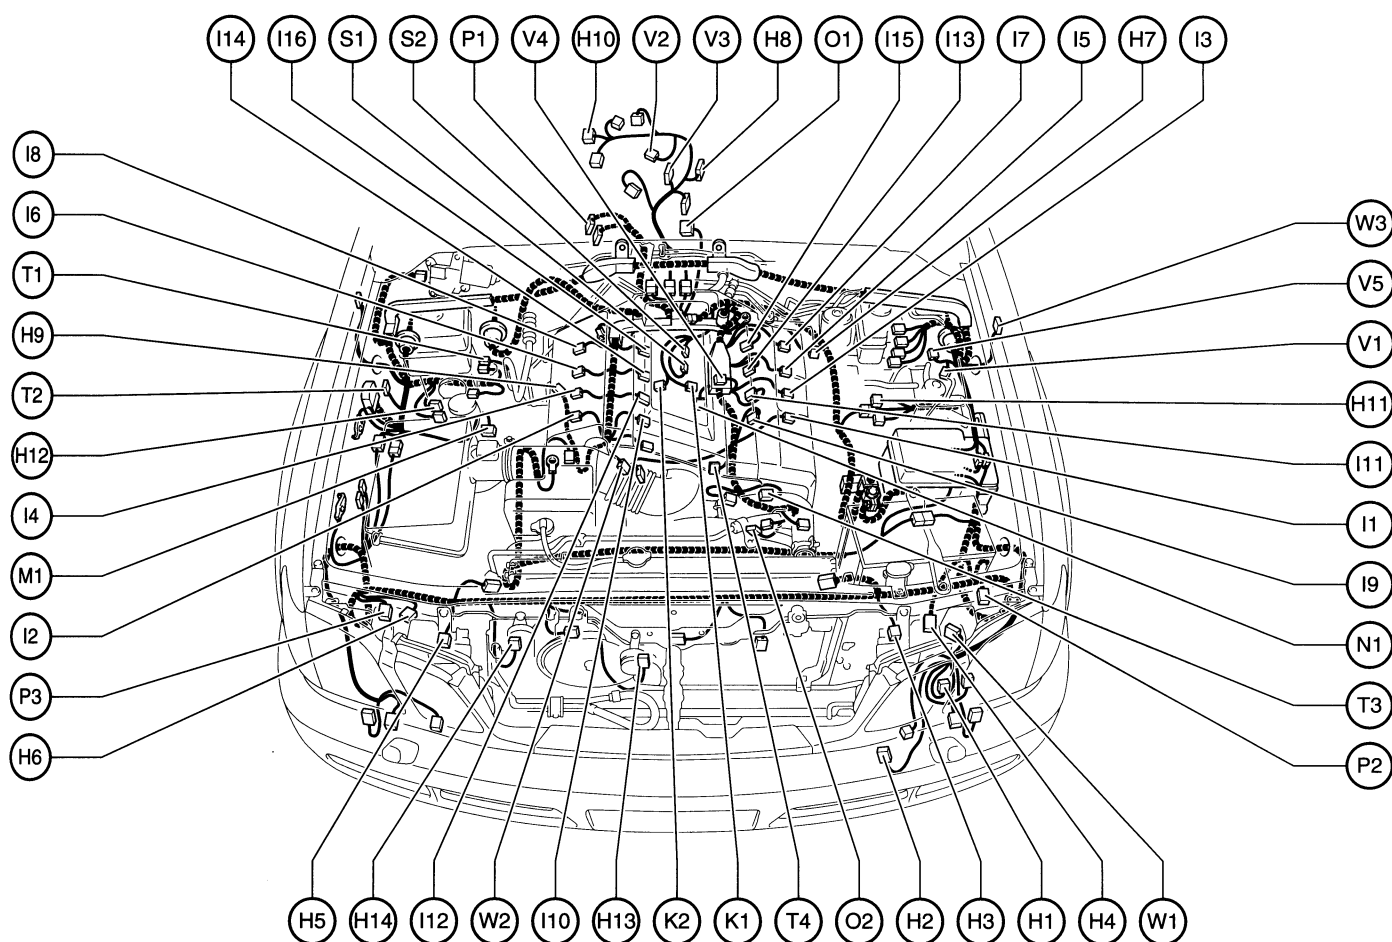

H 1 Headlight Cleaner Control Relay
 H 2 Headlight Cleaner Motor
 H 3 Headlight LH (High)
 H 4 Headlight LH (Low)
 H 5 Headlight RH (High)
 H 6 Headlight RH (Low)
 H 7 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H 9 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H10 Heated Oxygen Sensor (Bank 2 Sensor 2)
 H11 Height Control Sensor Front LH
 H12 Height Control Sensor Front RH
 H13 Horn LH
 H14 Horn RH


I 1 Ignition Coil and Igniter No. 1
 I 2 Ignition Coil and Igniter No. 2
 I 3 Ignition Coil and Igniter No. 3
 I 4 Ignition Coil and Igniter No. 4
 I 5 Ignition Coil and Igniter No. 5
 I 6 Ignition Coil and Igniter No. 6
 I 7 Ignition Coil and Igniter No. 7
 I 8 Ignition Coil and Igniter No. 8
 I 9 Injector No. 1
 I10 Injector No. 2
 I11 Injector No. 3
 I12 Injector No. 4
 I13 Injector No. 5
 I14 Injector No. 6
 I15 Injector No. 7
 I16 Injector No. 8

K 1 Knock Sensor 1
 K 2 Knock Sensor 2

M 1 Mass Air Flow Meter
 N 1 Noise Filter (Ignition)
 O 1 O/D Direct Clutch Speed Sensor
 O 2 Oil Pressure Sender
 P 1 Park/Neutral Position SW, A/T Indicator Light SW and Back-Up Light SW
 P 2 Parking Light and Side Marker Light LH
 P 3 Parking Light and Side Marker Light RH
 S 1 Starter
 S 2 Starter
 T 1 Temp. Sensor (AHC)
 T 2 Theft Deterrent Horn
 T 3 Throttle Control Motor
 T 4 Throttle Position Sensor
 V 1 Vapor Pressure Sensor
 V 2 Vehicle Speed Sensor (Combination Meter)
 V 3 Vehicle Speed Sensor (Electronically Controlled Transmission)
 V 4 VSV (EVAP)
 V 5 VSV (Vapor Pressure Sensor)
 W 1 Washer Motor
 W 2 Water Temp. Sender
 W 3 Wireless Door Lock Buzzer


G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

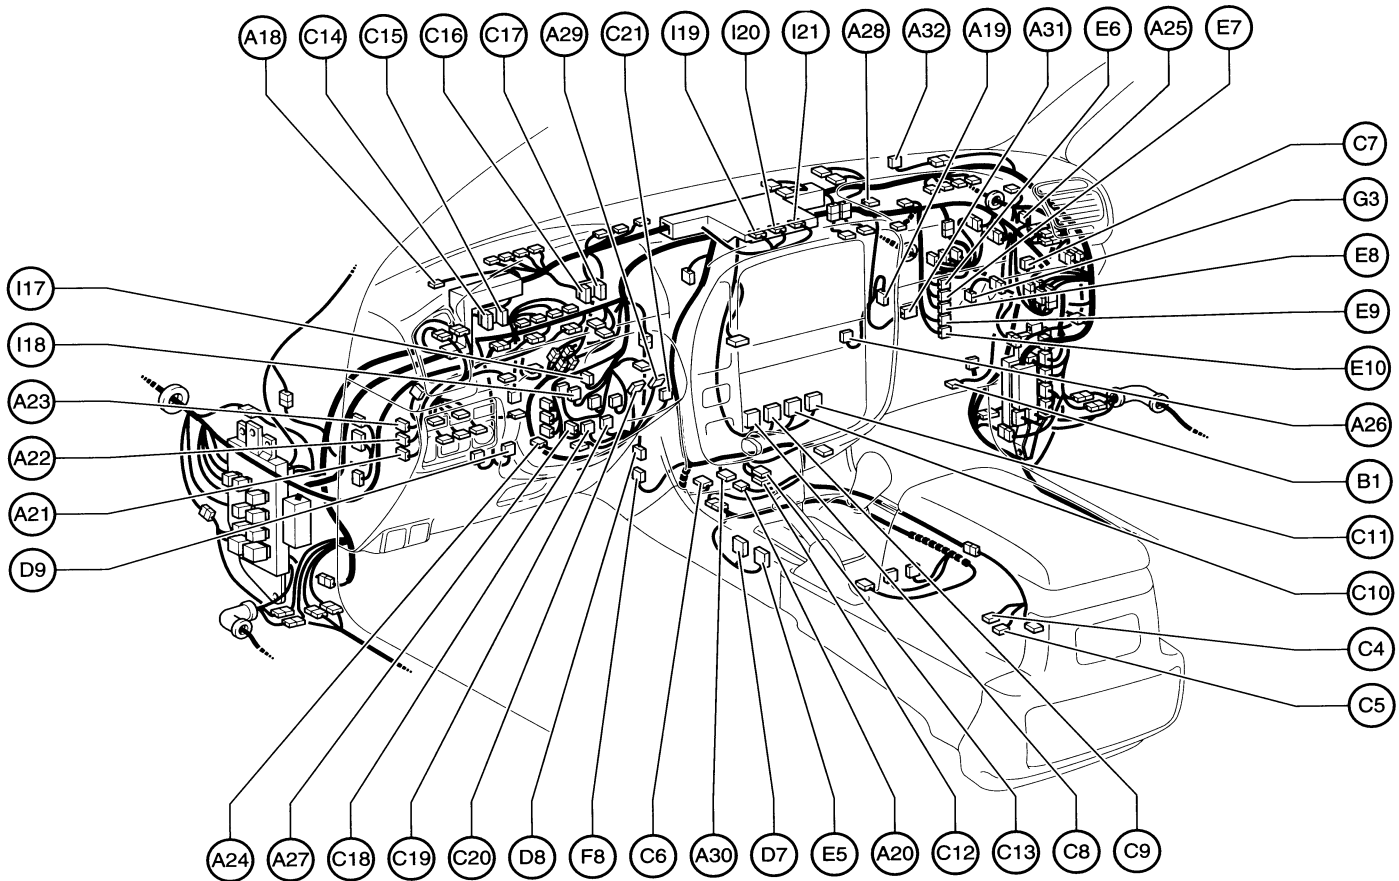

A 18	A/C Solar Sensor	C 16	Combination Meter
A 19	A/C Thermistor	C 17	Combination Meter
A 20	ABS Deceleration Sensor	C 18	Combination SW
A 21	ABS ECU	C 19	Combination SW
A 22	ABS ECU	C 20	Combination SW
A 23	ABS ECU	C 21	Combination SW
A 24	AHC Main Relay		
A 25	Air Inlet Control Servo Motor	D 7	Damping Mode Select SW and Height Control SW
A 26	Air Mix Control Servo Motor	D 8	Data Link Connector 3
A 27	Air Vent Mode Control Servo Motor	D 9	Daytime Running Light Relay (Main)
A 28	Airbag Squib (Front Passenger Airbag Assembly)		
A 29	Airbag Squib (Steering Wheel Pad)	E 5	Electronically Controlled Transmission Pattern Select SW
A 30	Ashtray Illumination	E 6	Engine Control Module
A 31	Auto Antenna Control Relay	E 7	Engine Control Module
A 32	Automatic Light Control Sensor	E 8	Engine Control Module
		E 9	Engine Control Module
B 1	Blower Motor Controller	E 10	Engine Control Module
C 4	Cellular Phone (Hand Set)	F 8	Fuel Control SW
C 5	Cellular Phone (Hand Set)		
C 6	Center Airbag Sensor Assembly	G 3	Glove Box Light
C 7	Center Diff. Lock Control Relay		
C 8	Center ECU		
C 9	Center ECU	I 17	Ignition Key Cylinder Light
C 10	Center ECU	I 18	Ignition SW
C 11	Center ECU	I 19	Instrument ECU
C 12	Cigarette Lighter	I 20	Instrument ECU
C 13	Cigarette Lighter Illumination	I 21	Instrument ECU
C 14	Combination Meter		
C 15	Combination Meter		


Position of Parts in Instrument Panel

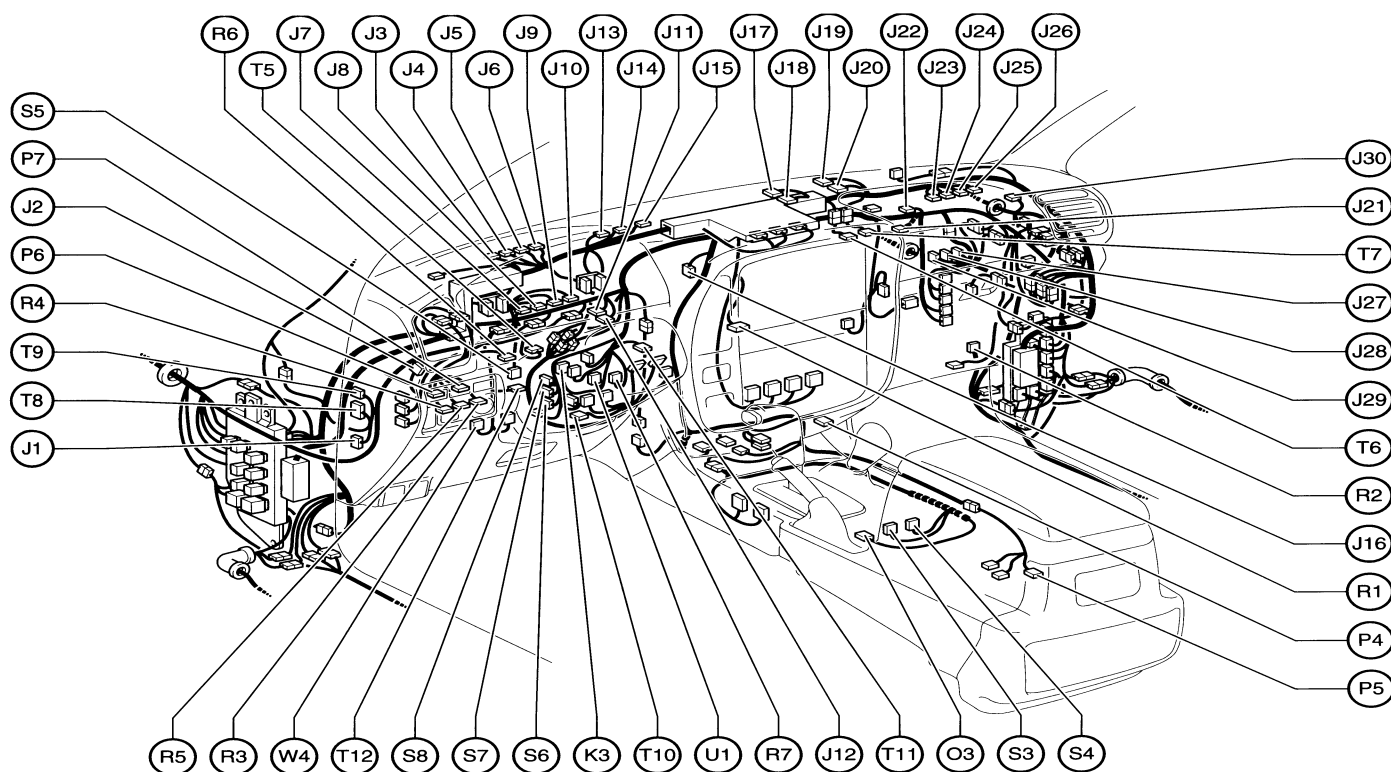

J 1	Junction Connector	P 4	Power Outlet (Front)
J 2	Junction Connector	P 5	Power Outlet (Rear Console Box)
J 3	Junction Connector	P 6	Power Quarter Window SW LH
J 4	Junction Connector	P 7	Power Quarter Window SW RH
J 5	Junction Connector		
J 6	Junction Connector	R 1	Radio and Player
J 7	Junction Connector	R 2	Rear Diff. Lock Control ECU
J 8	Junction Connector	R 3	Rear Diff. Lock SW
J 9	Junction Connector	R 4	Remote Control Mirror SW
J 10	Junction Connector	R 5	Remote Control Mirror SW
J 11	Junction Connector	R 6	Rheostat
J 12	Junction Connector	R 7	Room Temp. Sensor (Front)
J 13	Junction Connector		
J 14	Junction Connector	S 3	Seat Heater SW (Driver's Seat)
J 15	Junction Connector	S 4	Seat Heater SW (Front Passenger's Seat)
J 16	Junction Connector	S 5	Stop Light SW
J 17	Junction Connector	S 6	Suspension Control ECU
J 18	Junction Connector	S 7	Suspension Control ECU
J 19	Junction Connector	S 8	Suspension Control ECU
J 20	Junction Connector		
J 21	Junction Connector	T 5	Telescopic Motor
J 22	Junction Connector	T 6	Theft Deterrent ECU
J 23	Junction Connector	T 7	Theft Deterrent ECU
J 24	Junction Connector	T 8	Tilt and Telescopic ECU
J 25	Junction Connector	T 9	Tilt and Telescopic ECU
J 26	Junction Connector	T 10	Tilt Motor
J 27	Junction Connector	T 11	Transponder Key Amplifier
J 28	Junction Connector	T 12	Turn Signal Flasher
J 29	Junction Connector		
J 30	Junction Connector	U 1	Unlock Warning SW
K 3	Key Interlock Solenoid	W 4	Wireless Door Lock ECU
O 3	O/D Main SW and Shift Lock Control ECU		


G ELECTRICAL WIRING ROUTING

Position of Parts in Body

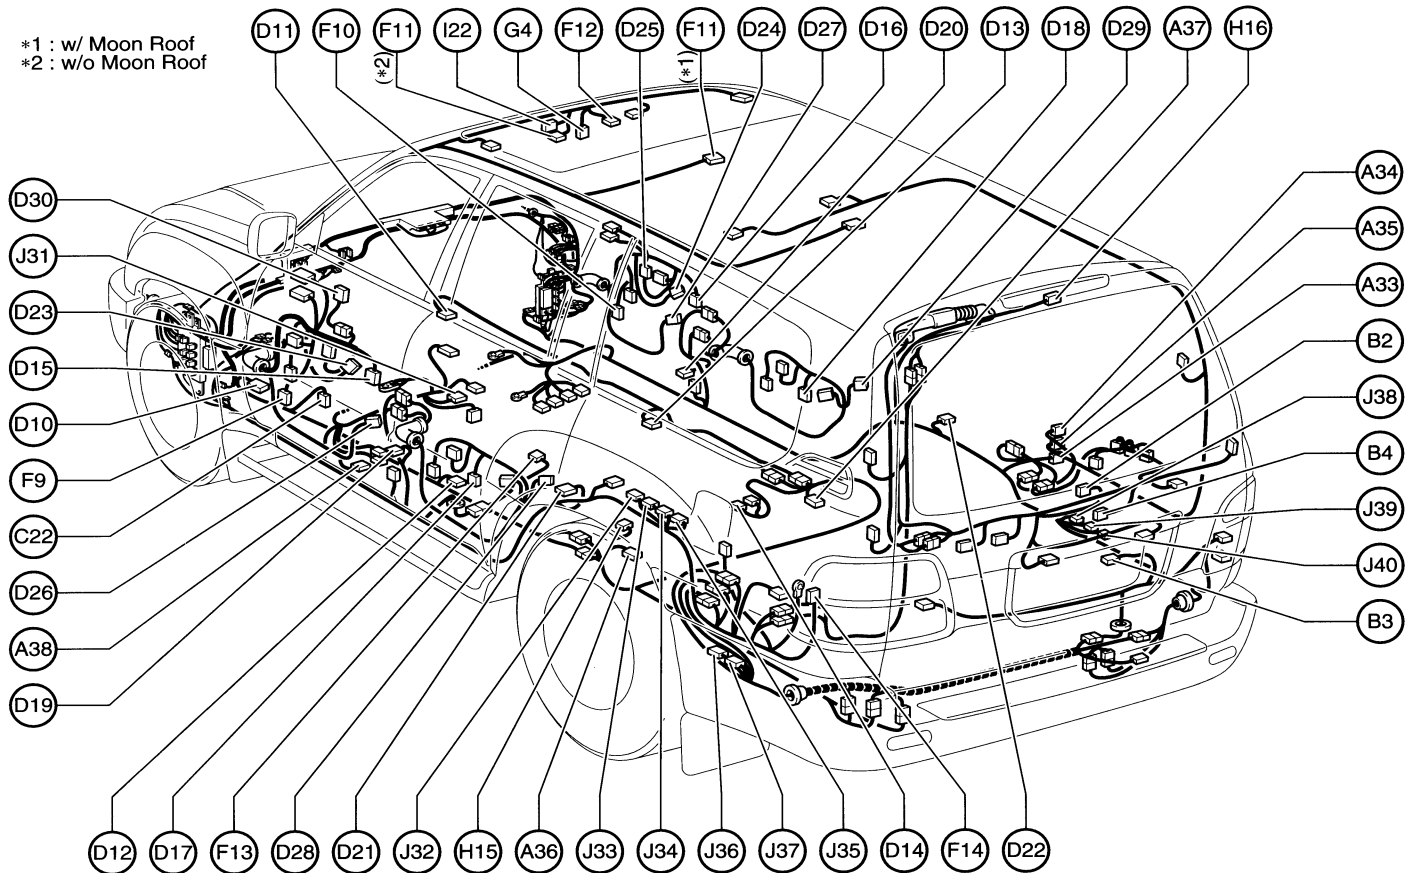

A33	A/C Amplifier	D26	Door Lock Motor and Door Unlock Detection SW Front LH
A34	A/C Amplifier	D27	Door Lock Motor and Door Unlock Detection SW Front RH
A35	A/C Amplifier	D28	Door Lock Motor and Door Unlock Detection SW Rear LH
A36	ABS Speed Sensor Rear LH	D29	Door Lock Motor and Door Unlock Detection SW Rear RH
A37	ABS Speed Sensor Rear RH	D30	Driving Position Memory SW
A38	Accumulator Solenoid		
B 2	Back Door Courtesy SW	F 9	Front Door Speaker LH
B 3	Back Door Key Lock and Unlock SW	F10	Front Door Speaker RH
B 4	Back Door Lock Motor and Back Door Unlock Detection SW	F11	Front Interior Light and Rear Personal Light
		F12	Front Personal Light
		F13	Fuel Pump and Sender
		F14	Fuel Pump Control ECU
C22	Control Valve Assembly	G 4	Garage Door Opener
D10	Damping Force Control Actuator Front LH	H15	Height Control Sensor Rear
D11	Damping Force Control Actuator Front RH	H16	High Mounted Stop Light
D12	Damping Force Control Actuator Rear LH	I22	Inner Mirror
D13	Damping Force Control Actuator Rear RH	J31	Junction Connector
D14	Detection SW (Rear Diff. Lock)	J32	Junction Connector
D15	Door Courtesy Light Front LH	J33	Junction Connector
D16	Door Courtesy Light Front RH	J34	Junction Connector
D17	Door Courtesy Light Rear LH	J35	Junction Connector
D18	Door Courtesy Light Rear RH	J36	Junction Connector
D19	Door Courtesy SW Front LH	J37	Junction Connector
D20	Door Courtesy SW Front RH	J38	Junction Connector
D21	Door Courtesy SW Rear LH	J39	Junction Connector
D22	Door Courtesy SW Rear RH	J40	Junction Connector
D23	Door Key Lock and Unlock SW LH		
D24	Door Key Lock and Unlock SW RH		
D25	Door Lock Control SW RH		

Position of Parts in Body

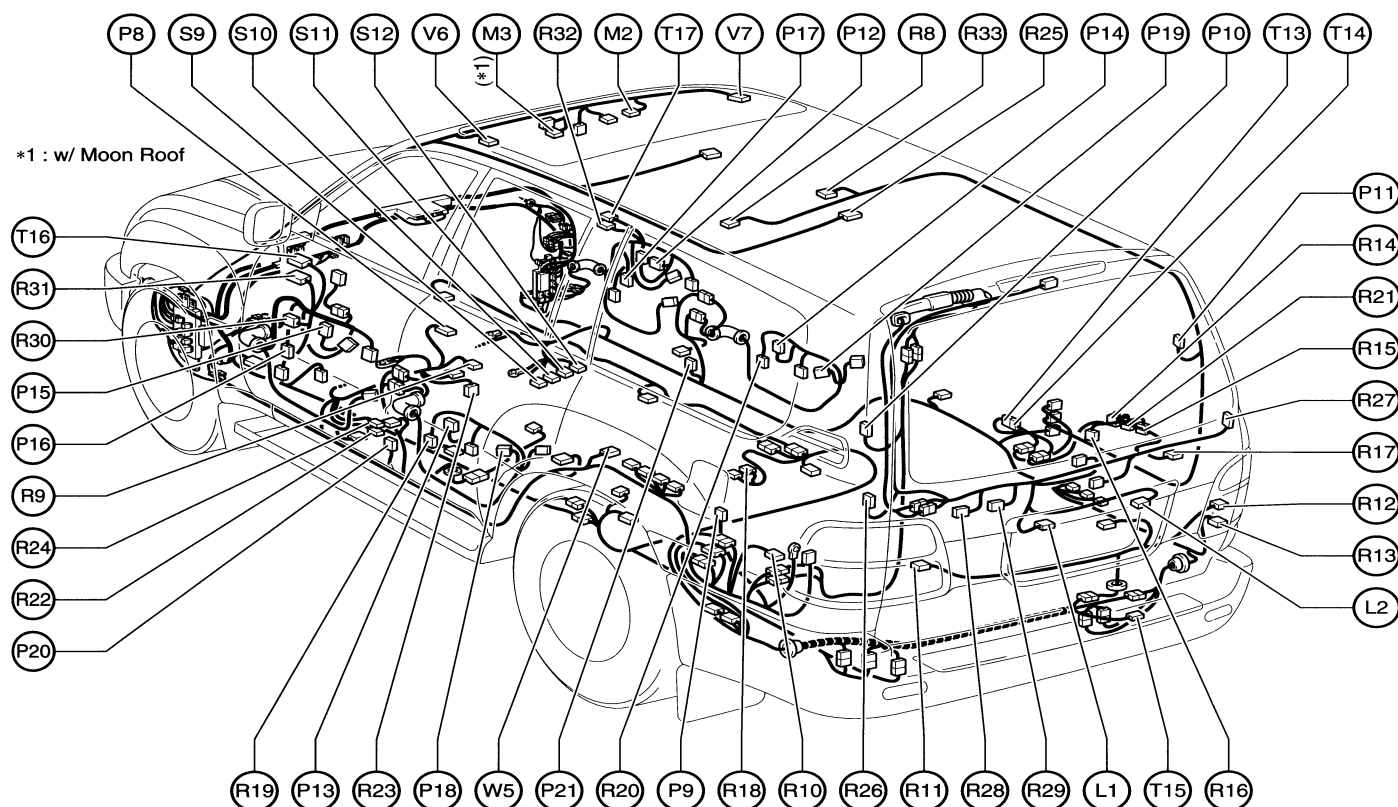

L 1 License Plate Light LH
L 2 License Plate Light RH

M 2 Moon Roof Control ECU
M 3 Moon Roof Control SW

P 8 Parking Brake SW
P 9 Power Outlet (Luggage Compartment)
P10 Power Vent Window Motor LH
P11 Power Vent Window Motor RH
P12 Power Window Control SW Front RH
P13 Power Window Control SW Rear LH
P14 Power Window Control SW Rear RH
P15 Power Window Master SW
P16 Power Window Motor Front LH
P17 Power Window Motor Front RH
P18 Power Window Motor Rear LH
P19 Power Window Motor Rear RH
P20 Pretensioner LH
P21 Pretensioner RH

R 8 Rear A/C Control SW
R 9 Rear Air Mix Control Servo Motor
R10 Rear Combination Light LH
R11 Rear Combination Light LH
R12 Rear Combination Light RH
R13 Rear Combination Light RH
R14 Rear Cooler Blower Motor
R15 Rear Cooler Magnetic Valve
R16 Rear Cooler Power Transistor
R17 Rear Cooler Relay
R18 Rear Diff. Lock Motor

R19 Rear Door Speaker LH
R20 Rear Door Speaker RH
R21 Rear Evaporator Temp. Sensor
R22 Rear Heater Blower Motor
R23 Rear Heater Power Transistor
R24 Rear Inlet Air Temp. Sensor
R25 Rear Interior Light
R26 Rear Window Defogger
R27 Rear Window Defogger
R28 Rear Wiper Motor
R29 Rear Wiper Relay
R30 Remote Control Mirror ECU
R31 Remote Control Mirror LH
R32 Remote Control Mirror RH
R33 Room Temp. Sensor (Rear)

S 9 Stereo Component Amplifier
S10 Stereo Component Amplifier
S11 Stereo Component Amplifier
S12 Stereo Component Amplifier


T13 Telephone Transceiver and Speaker Relay
T14 Telephone Transceiver and Speaker Relay
T15 Trailer Socket
T16 Tweeter LH
T17 Tweeter RH

V 6 Vanity Light LH
V 7 Vanity Light RH

W 5 Woofer (Speaker)

G ELECTRICAL WIRING ROUTING

Position of Parts in Seats

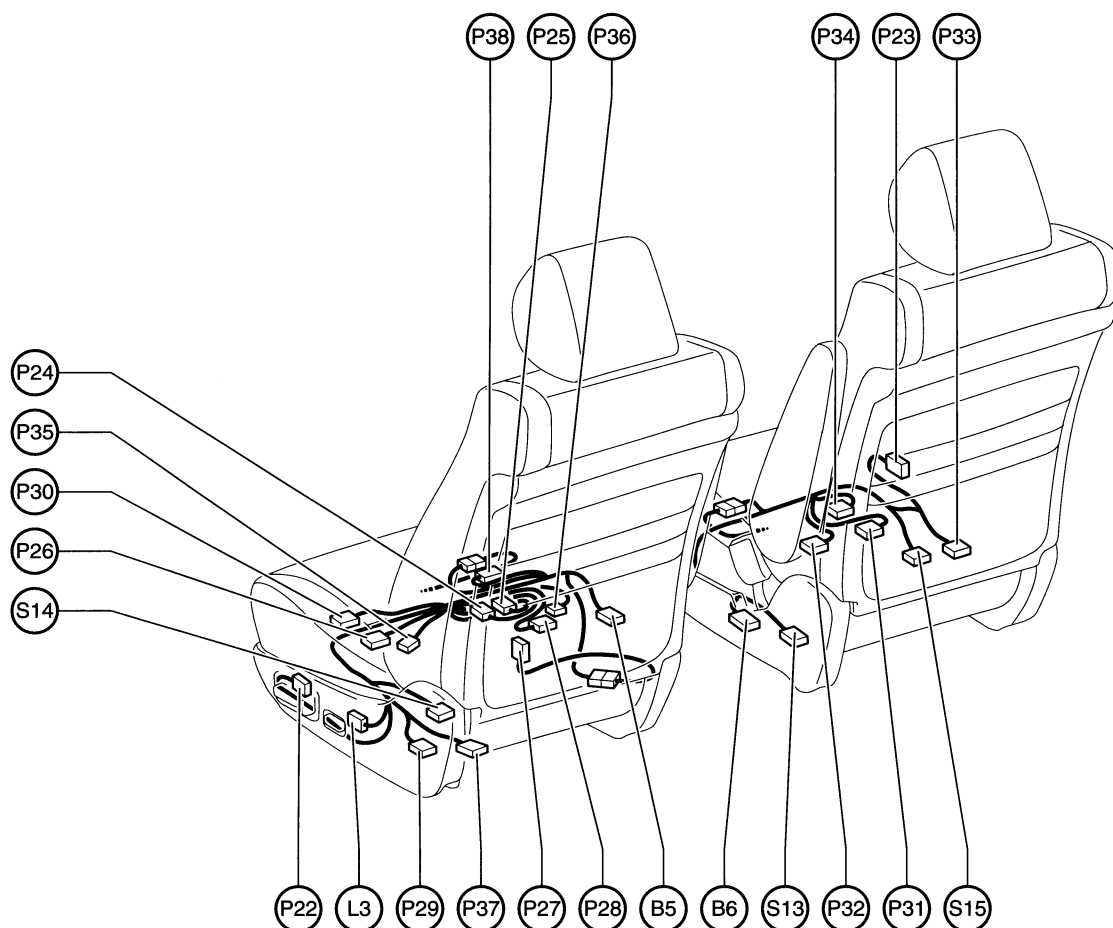

B 5 Buckle SW LH
B 6 Buckle SW RH

L 3 Lumbar Support Control SW (Driver' Seat)

P22 Power Seat Control SW (Driver's Seat)
P23 Power Seat Control SW (Front Passenger's Seat)
P24 Power Seat ECU
P25 Power Seat ECU
P26 Power Seat Motor
(Driver's Seat Front Vertical Control)
P27 Power Seat Motor
(Driver's Seat Lumbar Support Control)
P28 Power Seat Motor
(Driver's Seat Rear Vertical Control)
P29 Power Seat Motor
(Driver's Seat Reclining Control)
P30 Power Seat Motor
(Driver's Seat Slide Control)
P31 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)

P32 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P33 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P34 Power Seat Motor
(Front Passenger's Seat Slide Control)
P35 Power Seat Position Sensor
(Driver's Seat Front Vertical Control)
P36 Power Seat Position Sensor
(Driver's Seat Rear Vertical Control)
P37 Power Seat Position Sensor
(Driver's Seat Reclining Control)
P38 Power Seat Position Sensor
(Driver's Seat Slide Control)

S13 Seat Belt Warning Occupant Detection Sensor
S14 Seat Heater (Driver's Seat)
S15 Seat Heater (Front Passenger's Seat)

