



G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

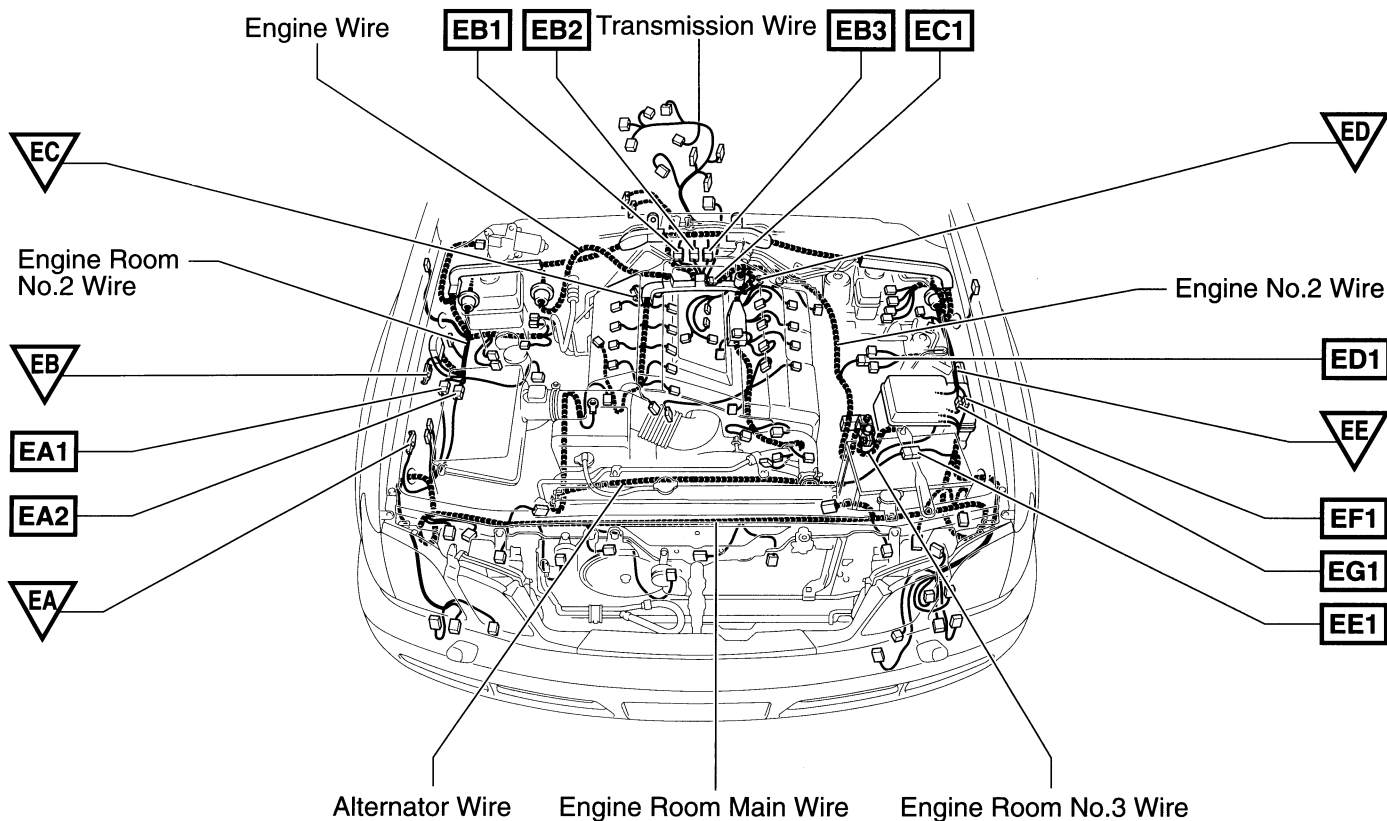

○ : Location of Splice Points

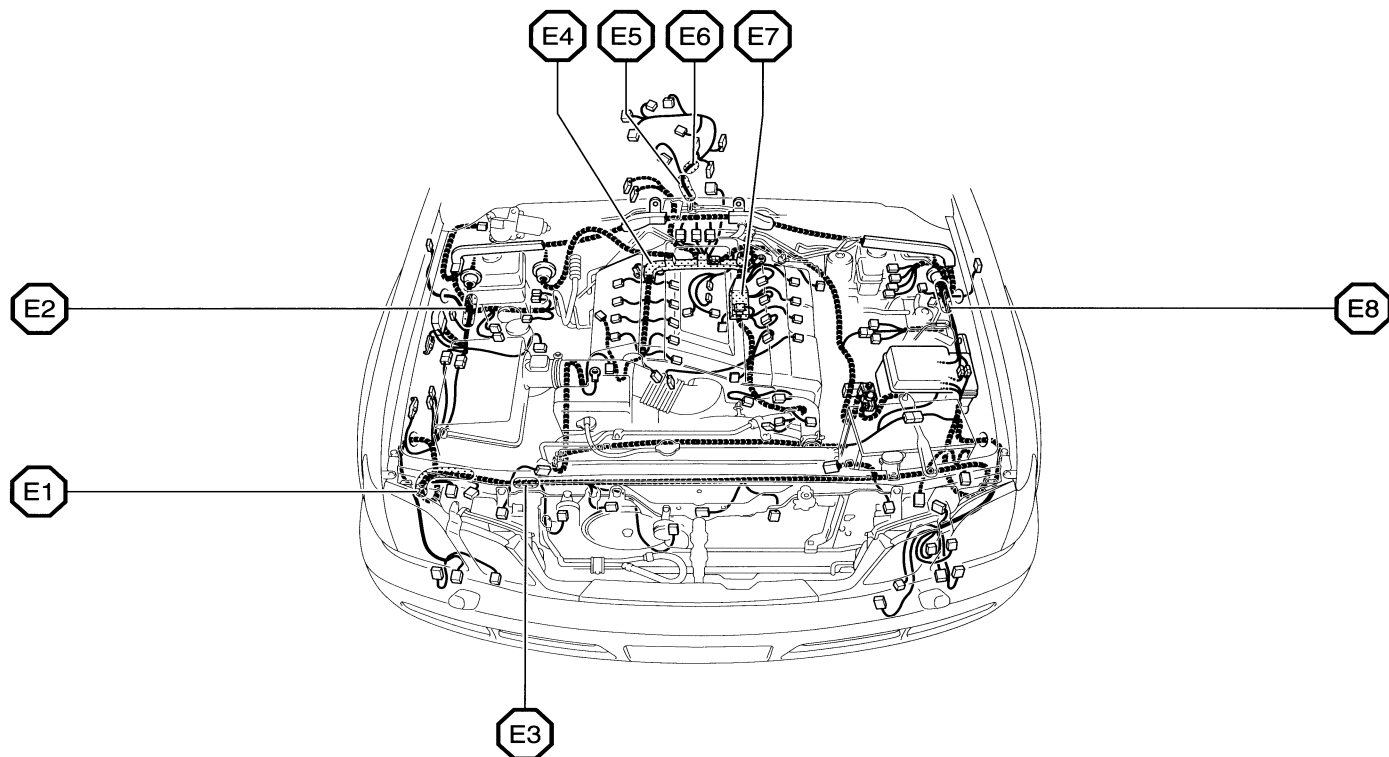


Connector Joining Wire Harness and Wire Harness

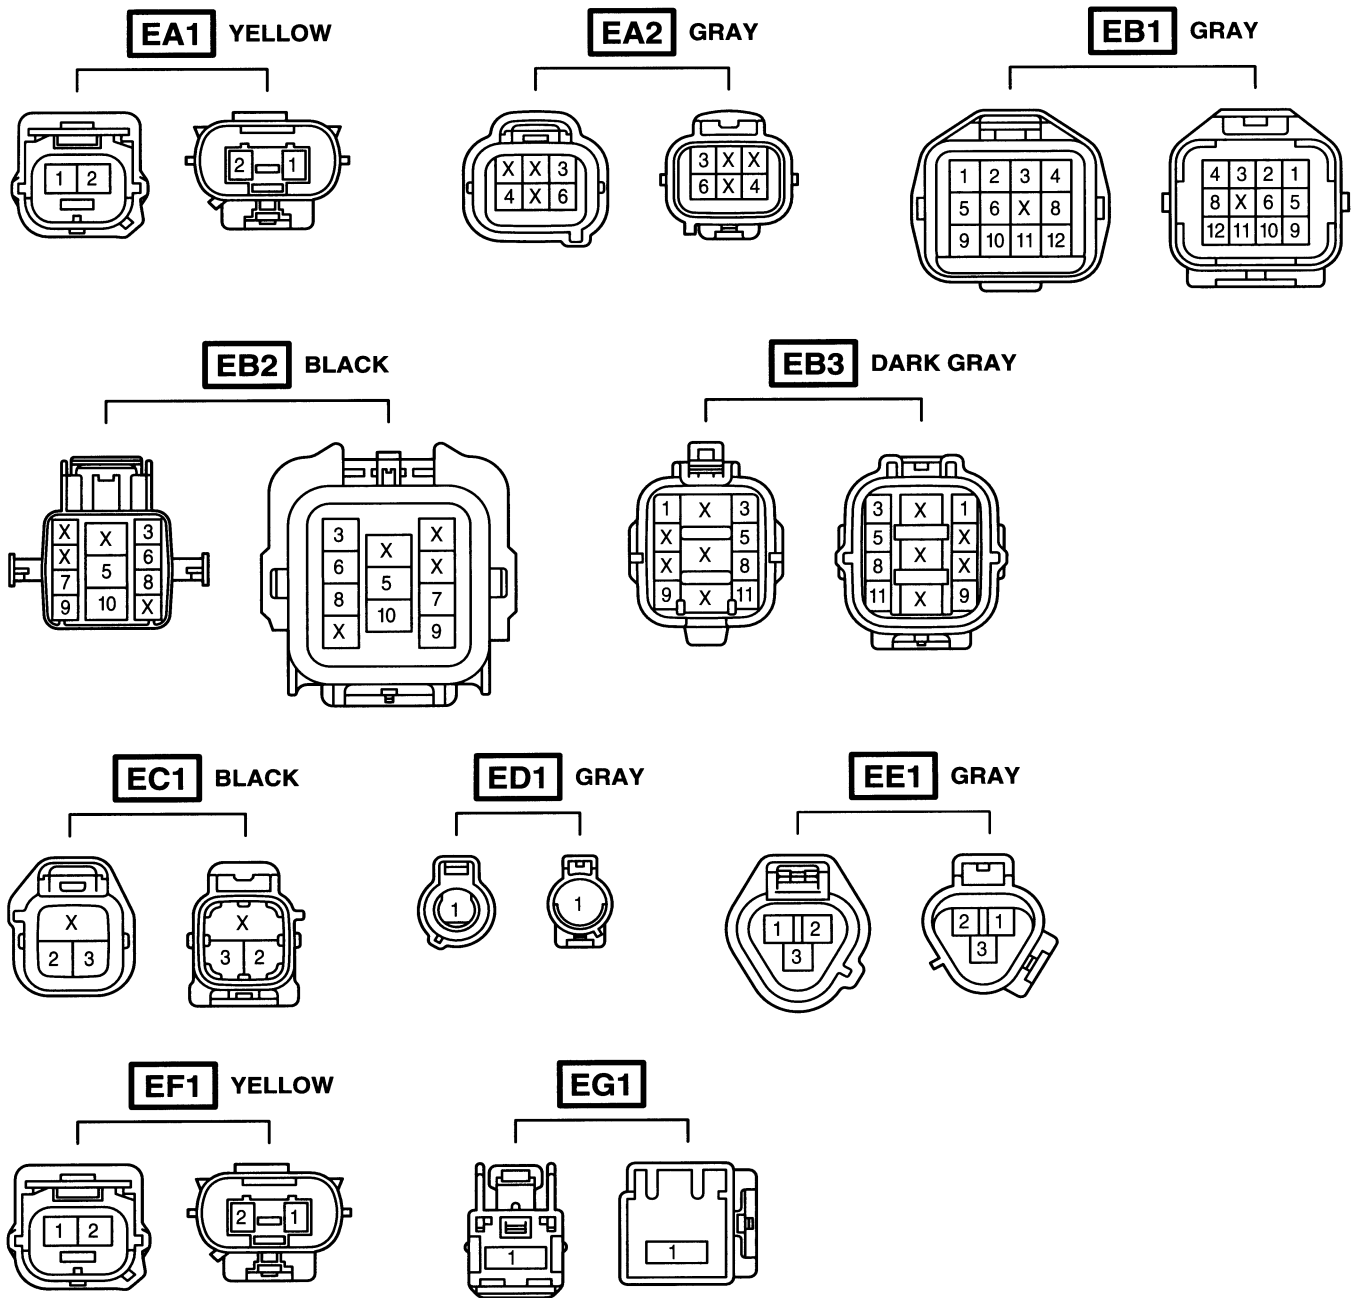


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No. 2 Wire (Engine Compartment Right)
EA2	
EB1	
EB2	Engine Wire and Transmission Wire (On the Transmission)
EB3	
EC1	Engine No. 2 Wire and Engine Wire (On the Transmission)
ED1	Engine No. 2 Wire and Engine Room No. 2 (Near the Engine Room J/B)
EE1	Engine Room Main Wire and Alternator Wire (Near the Battery)
EF1	Engine Room No. 2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
EG1	Engine Room No. 2 Wire and Engine Room No. 3 Wire (Under the Engine Room J/B)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

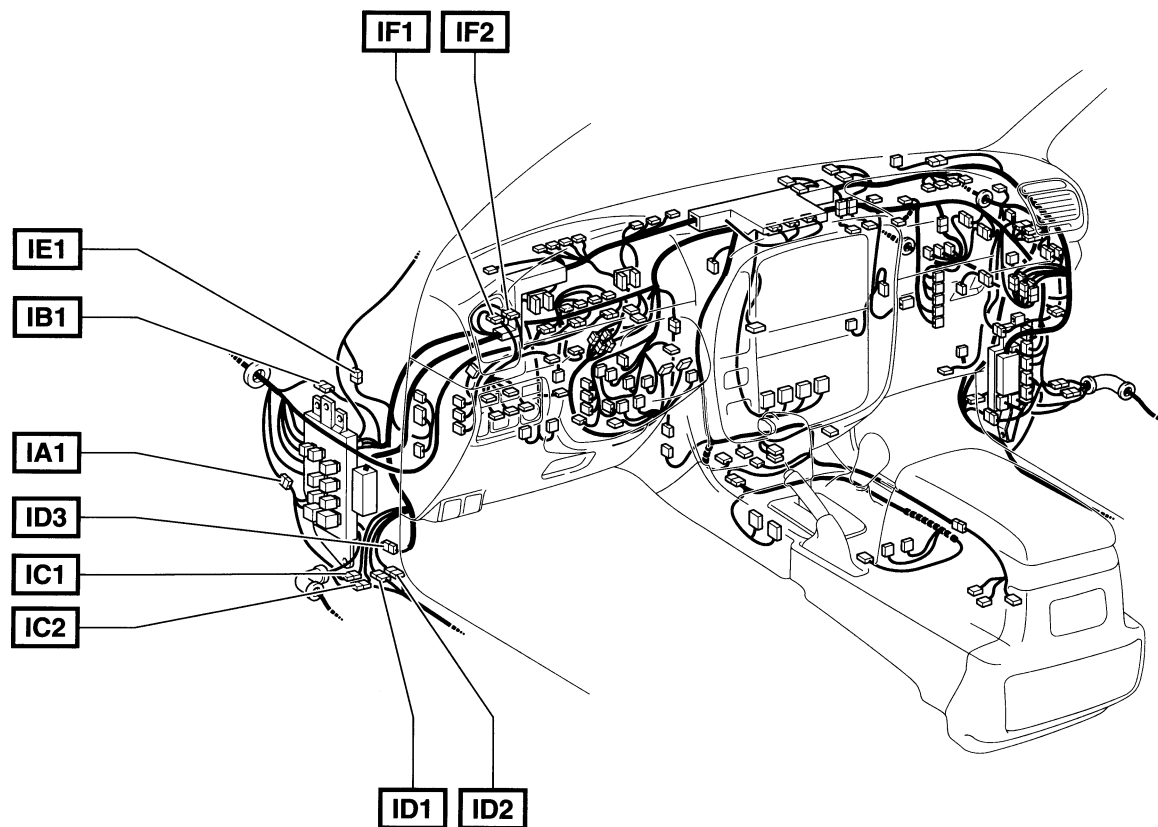

▽ : Location of Ground Points

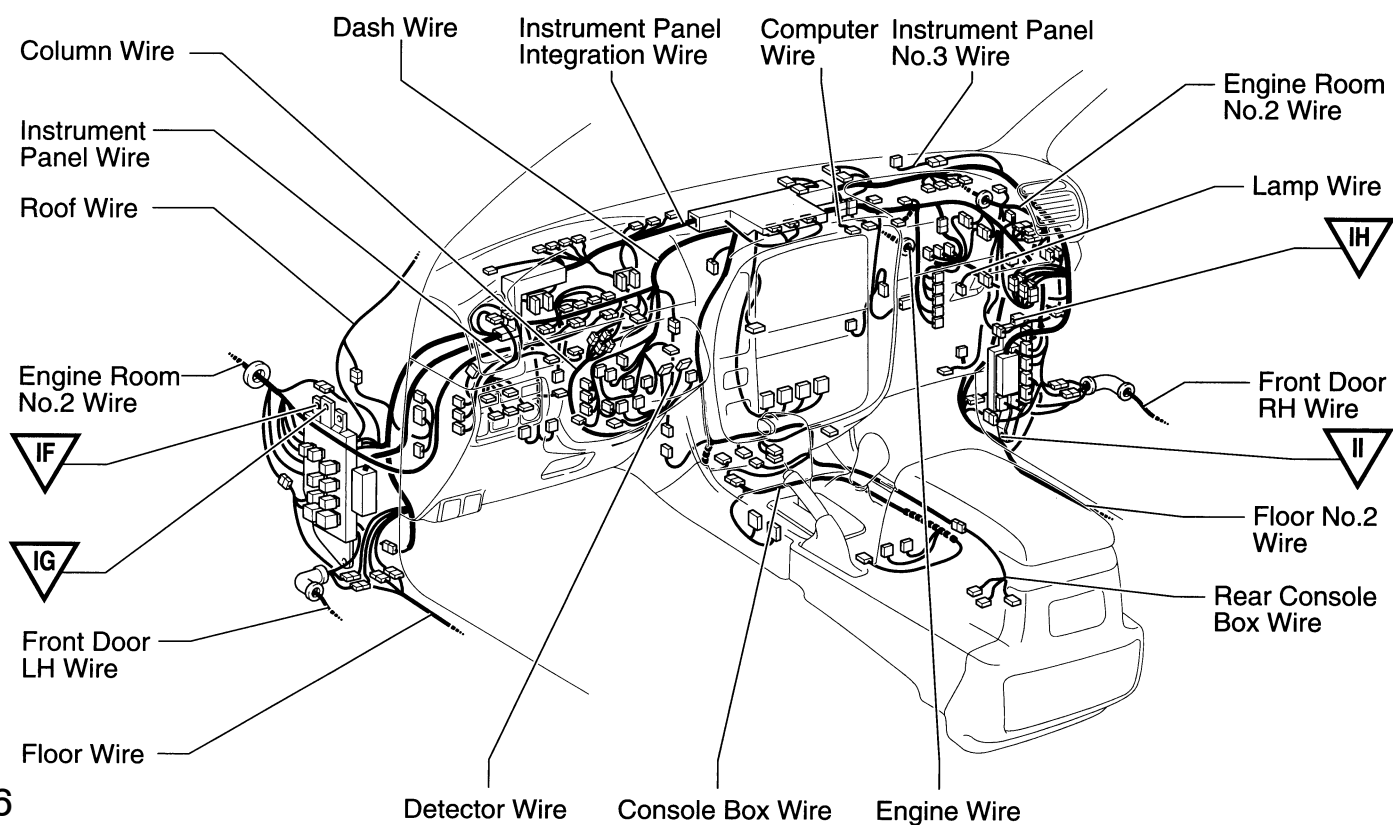


Connector Joining Wire Harness and Wire Harness

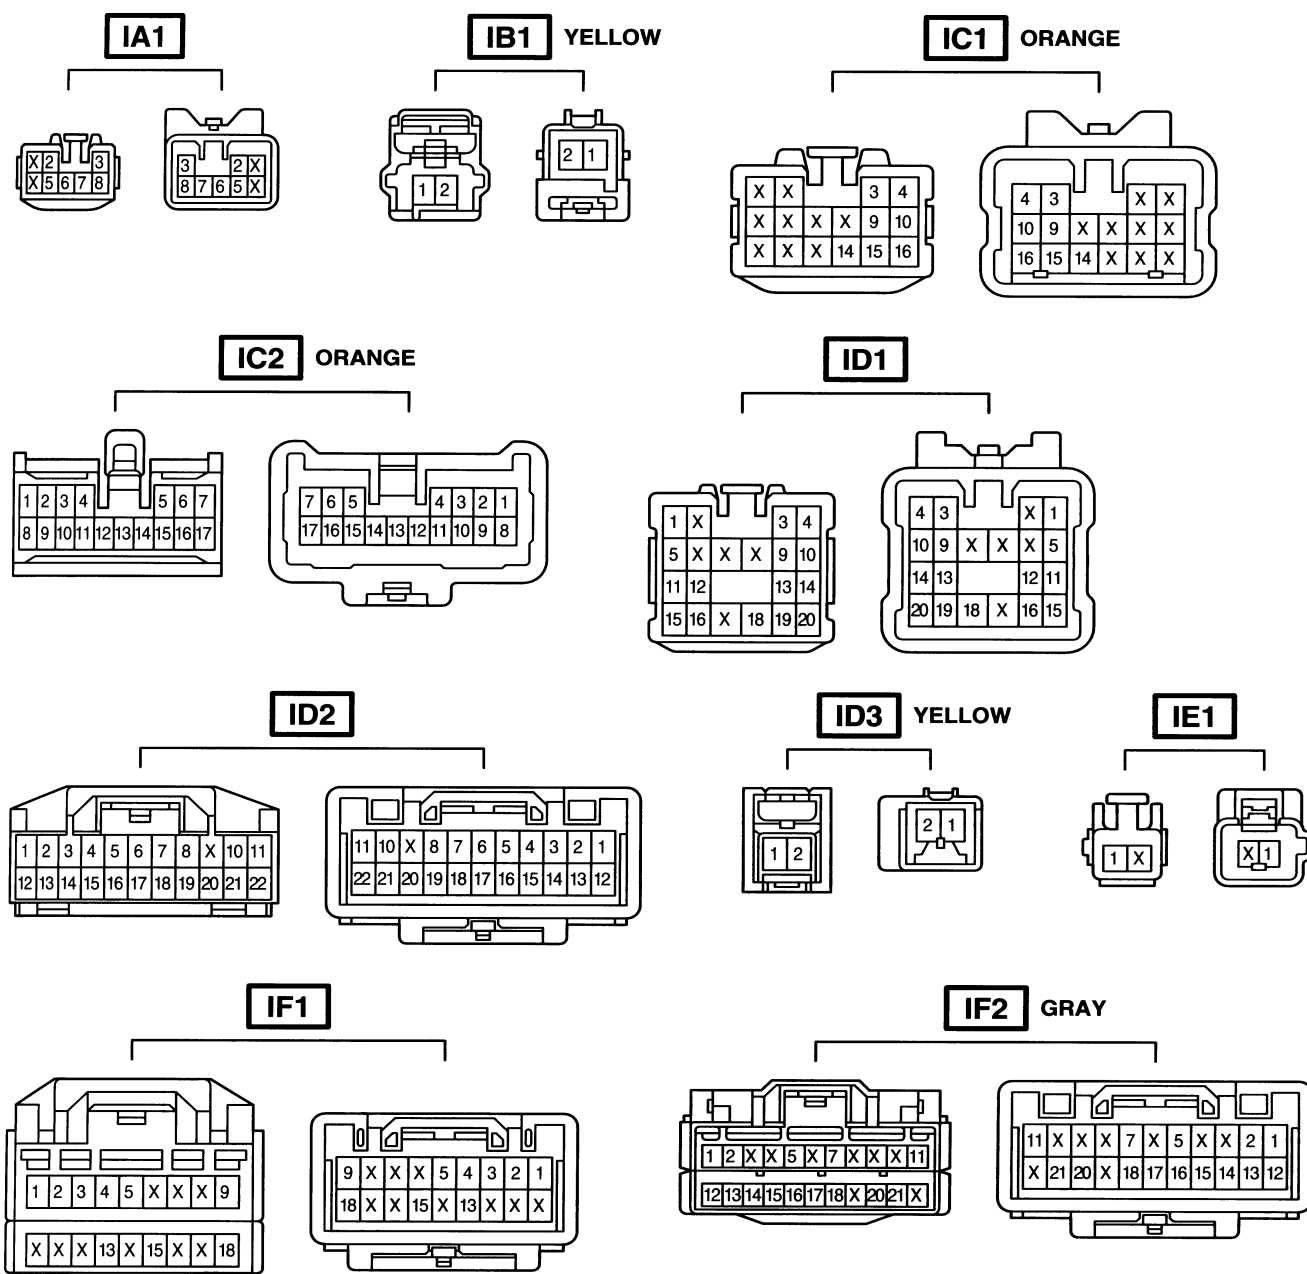


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Floor Wire and Engine Room No. 2 Wire (Left Kick Panel)
IB1	Engine Room No. 2 Wire and Dash Wire (Left Kick Panel)
IC1	Front Door LH Wire and Dash Wire (Left Kick Panel)
IC2	
ID1	Dash Wire and Floor Wire (Left Kick Panel)
ID2	
ID3	
IE1	Dash Wire and Roof Wire (Left Kick Panel)
IF1	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

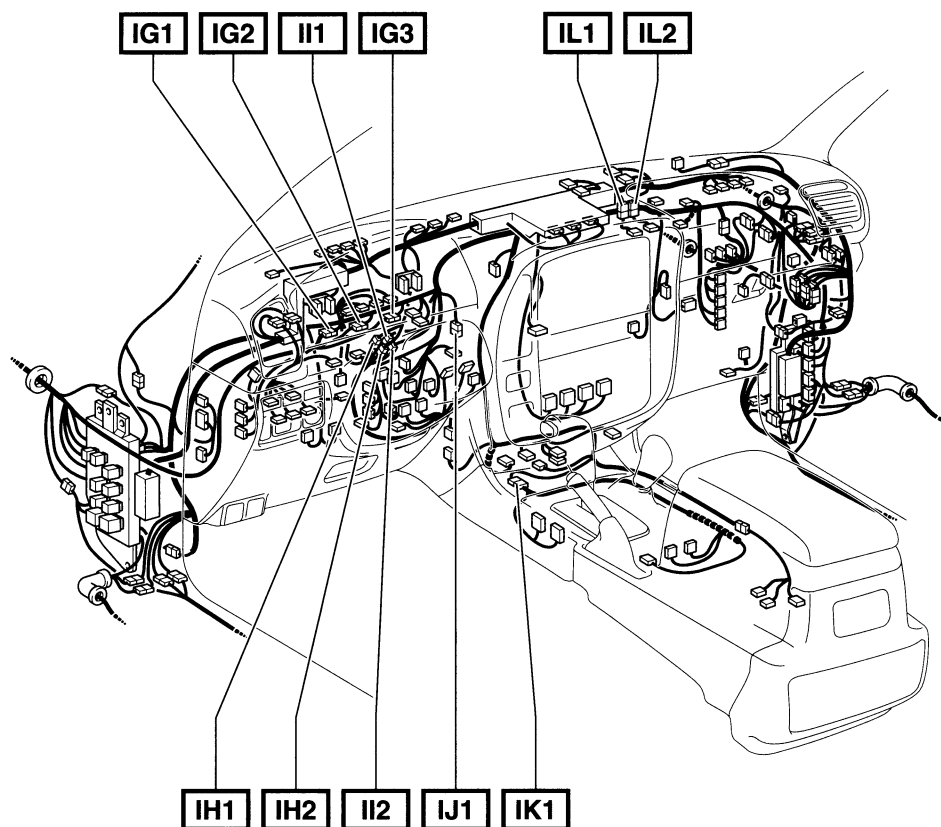

○ : Location of Splice Points

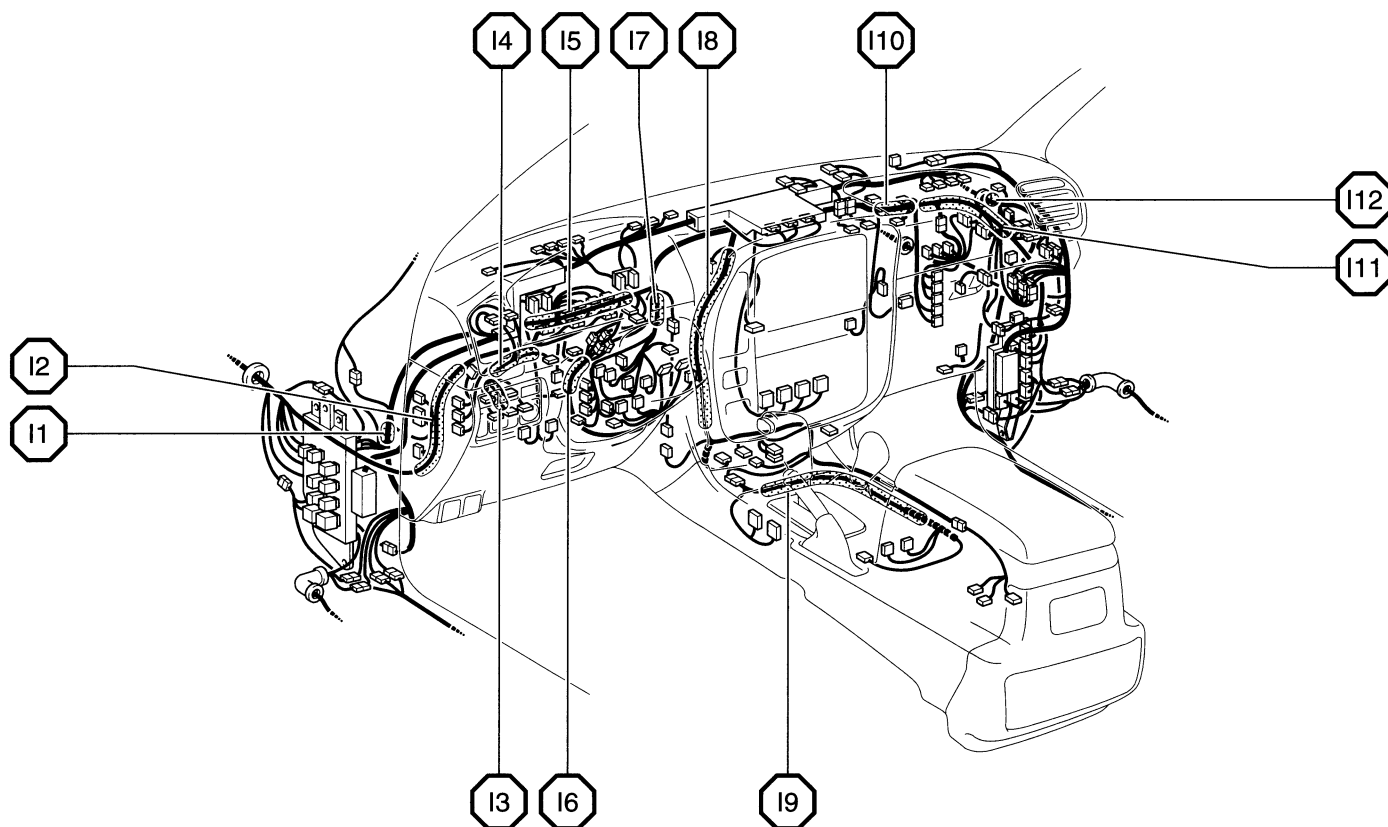


Connector Joining Wire Harness and Wire Harness

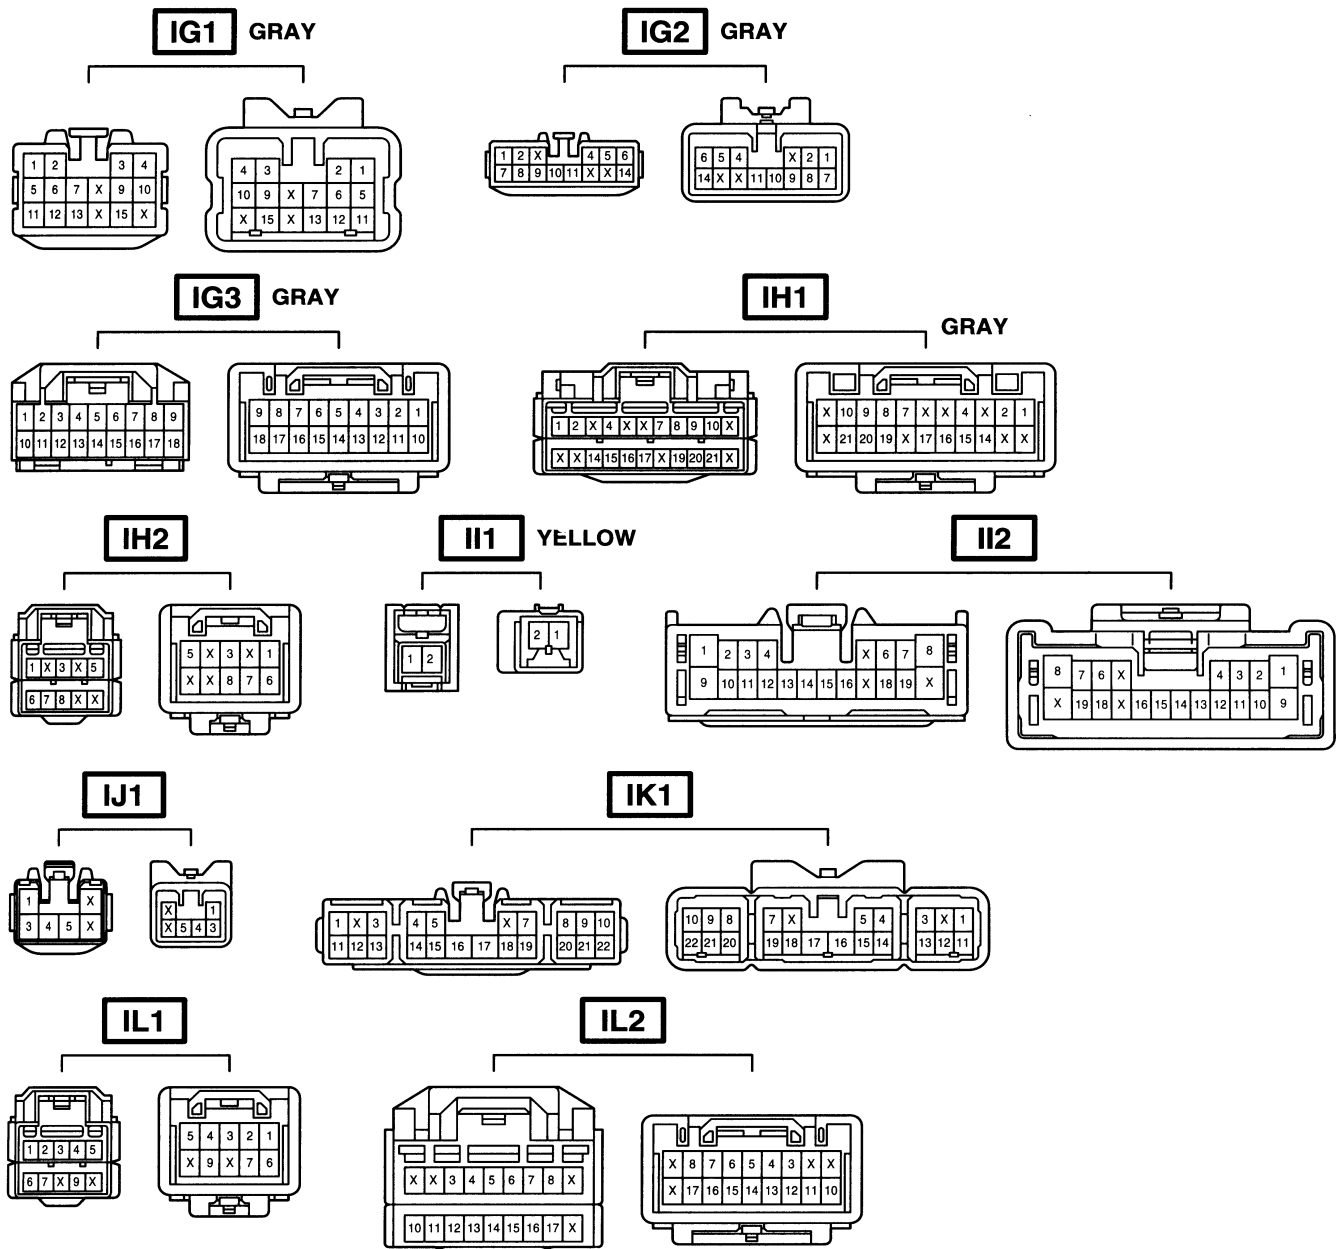

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Engine Room No. 2 Wire and Dash Wire (Behind the Combination Meter)
IG2	
IG3	
IH1	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IH2	
II1	Dash Wire and Column Wire (Near the Ignition SW)
II2	Column Wire and Dash Wire (Near the Ignition SW)
IJ1	Dash Wire and Detector Wire (Instrument Panel Center)
IK1	Console Box Wire and Dash Wire (Left Side of Front Console)
IL1	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IL2	


G ELECTRICAL WIRING ROUTING

 : Location of Connector Joining Wire Harness and Wire Harness

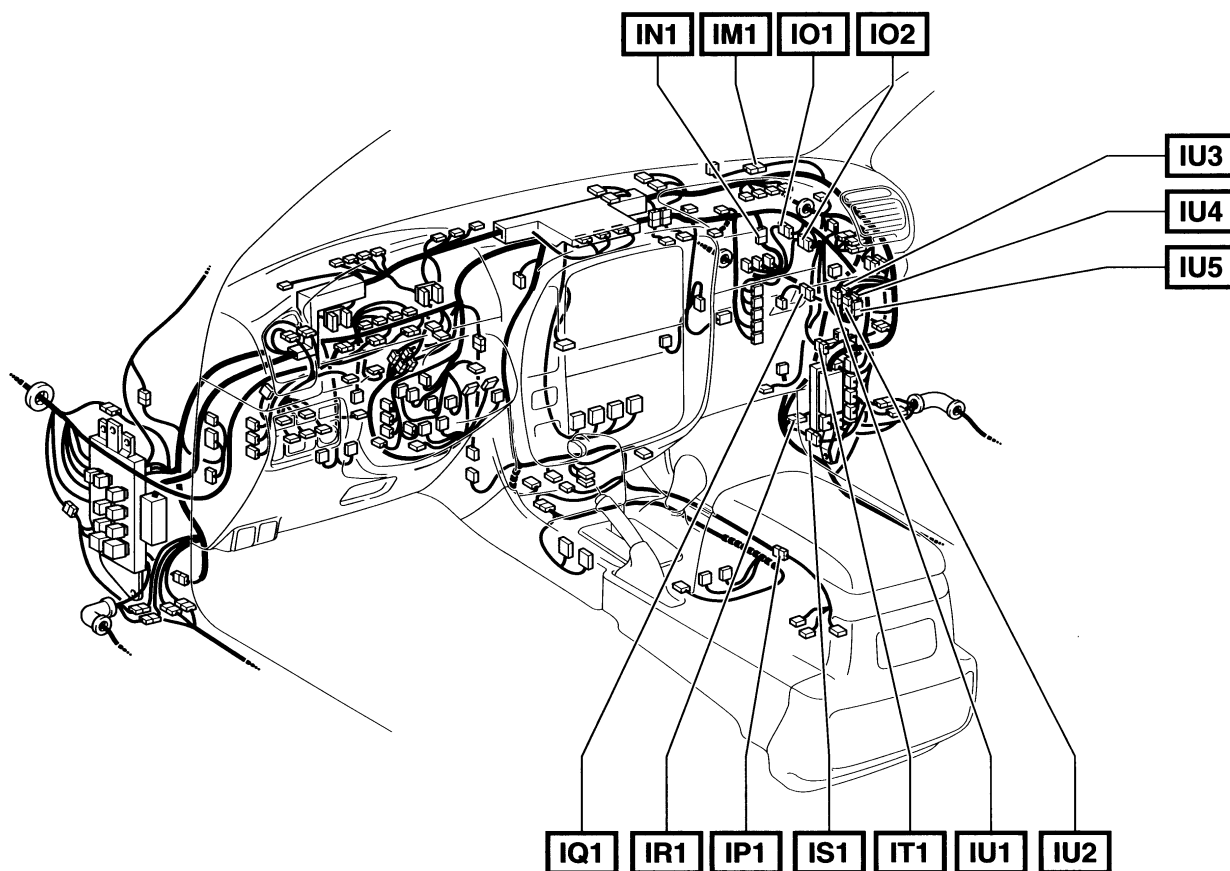


Code	Joining Wire Harness and Wire Harness (Connector Location)
IM1	Instrument Panel Integration Wire and Instrutment Panel No. 3 Wire (Right Side of Instrument Panel)
IN1	Engine Wire and Dash Wire (Behind the Glove Box)
IO1	
IO2	
IP1	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IR1	Engine Room No. 2 Wire and Floor No. 2 Wire (Right Kick Panel)
IS1	Dash Wire and Floor No. 2 Wire (Right Kick Panel)
IT1	Engine Room No. 2 Wire and Dash Wire (Right Kick Panel)
IU1	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2	
IU3	
IU4	
IU5	

Connector Joining Wire Harness and Wire Harness

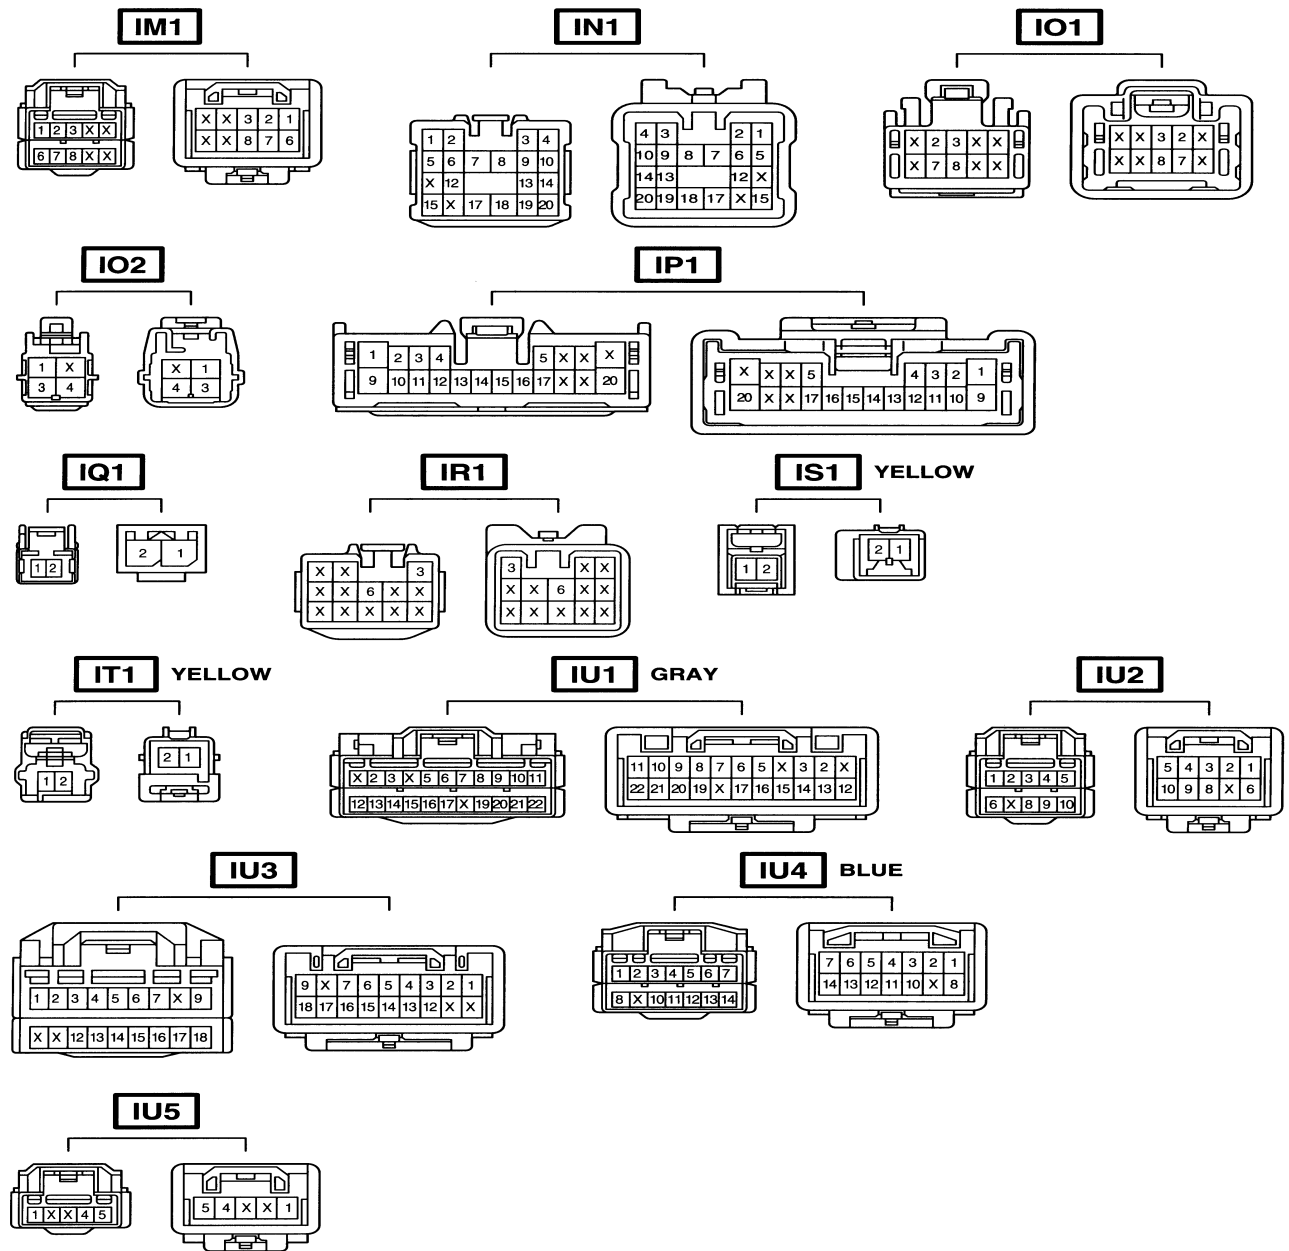


G ELECTRICAL WIRING ROUTING

 : Location of Connector Joining Wire Harness and Wire Harness

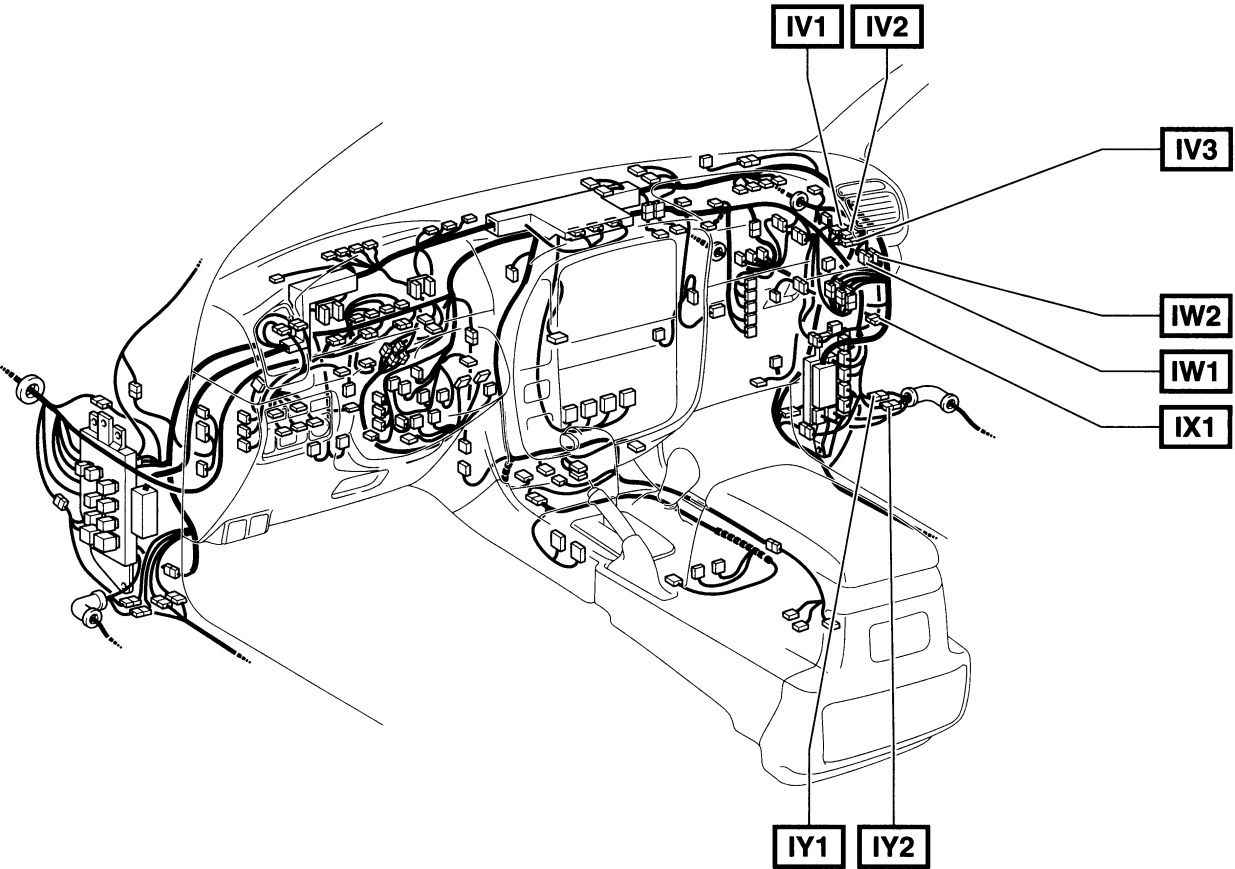


Code	Joining Wire Harness and Wire Harness (Connector Location)
IV1	Dash Wire and Floor No. 2 Wire (Behind the Glove Box)
IV2	
IV3	
IW1	Engine Room No. 2 Wire and Dash Wire (Behind the Glove Box)
IW2	
IX1	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IY1	Front Door RH Wire and Dash Wire (Right Kick Panel)
IY2	

Connector Joining Wire Harness and Wire Harness

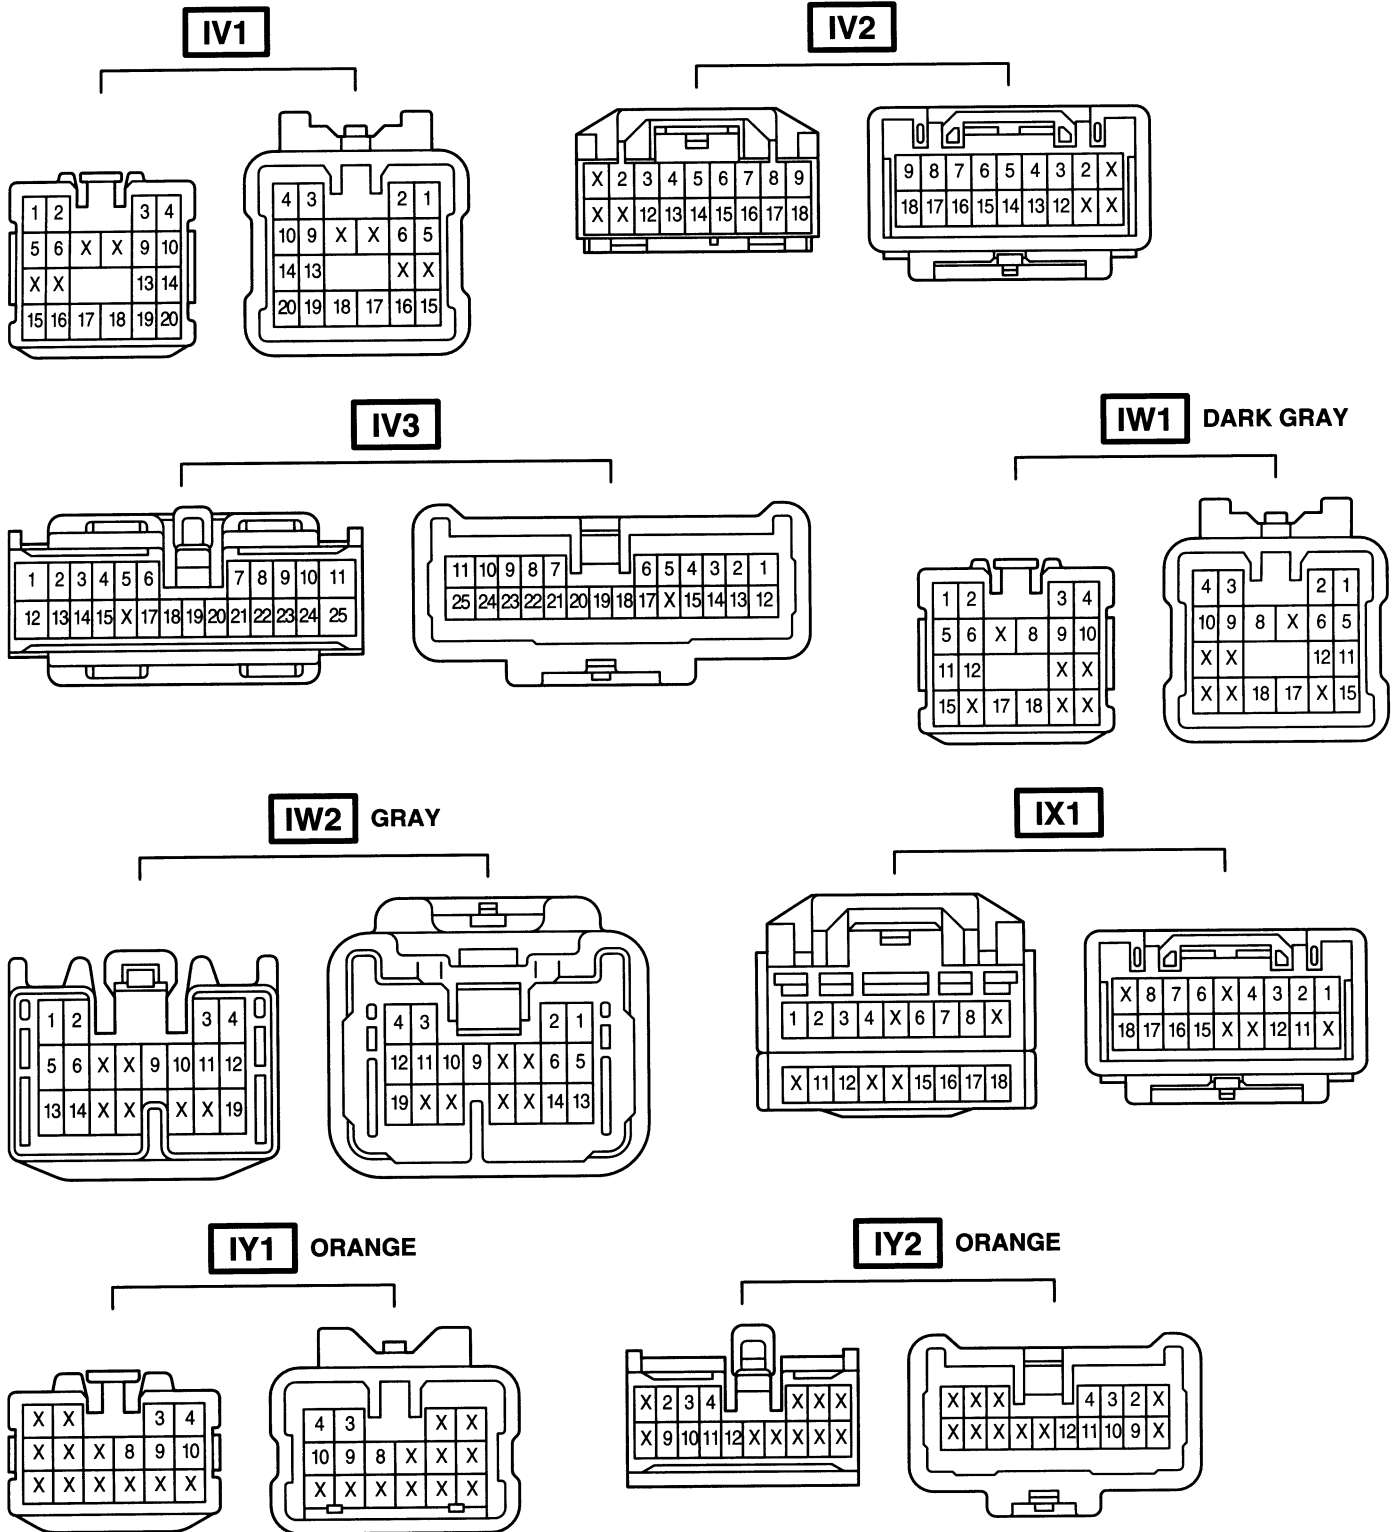


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

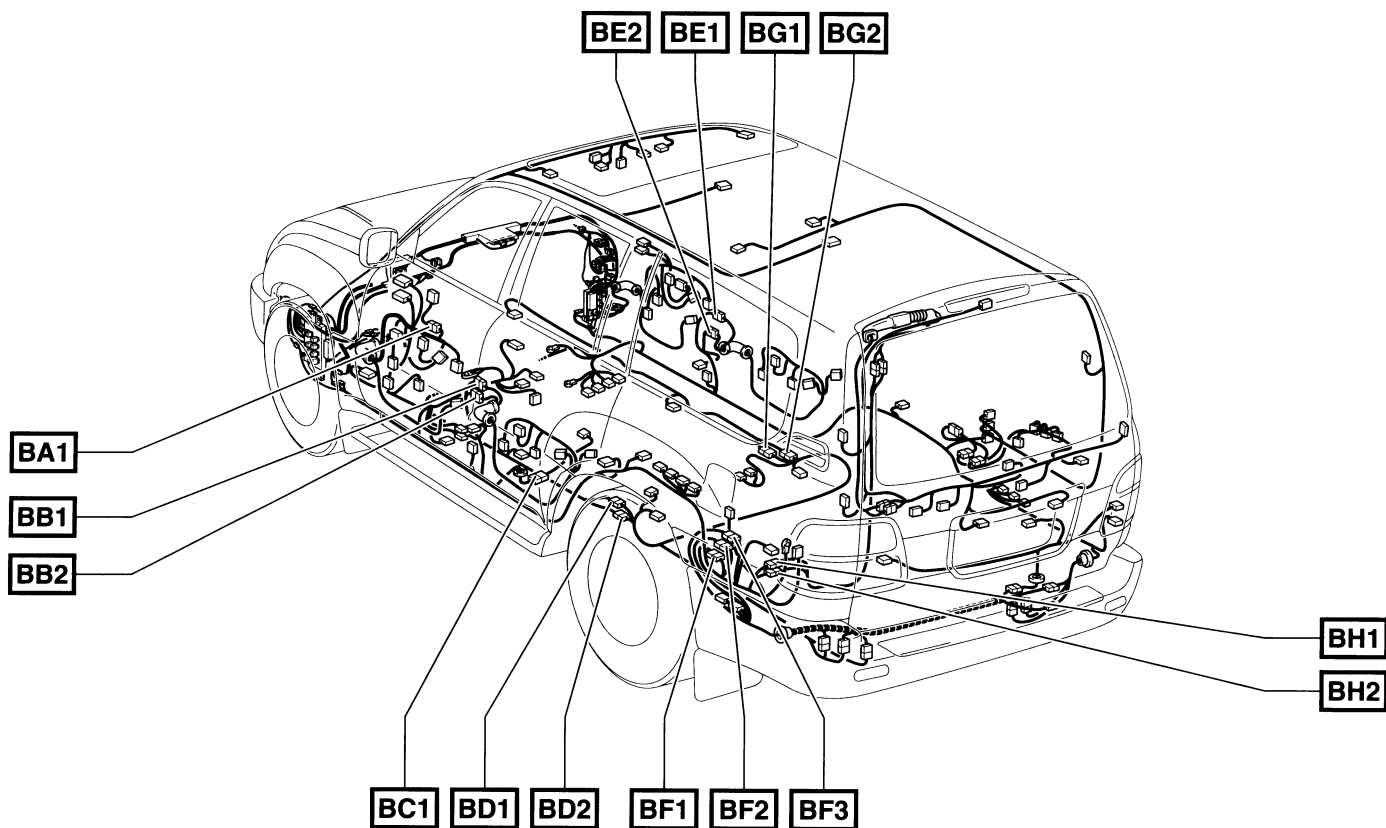

▽ : Location of Ground Points

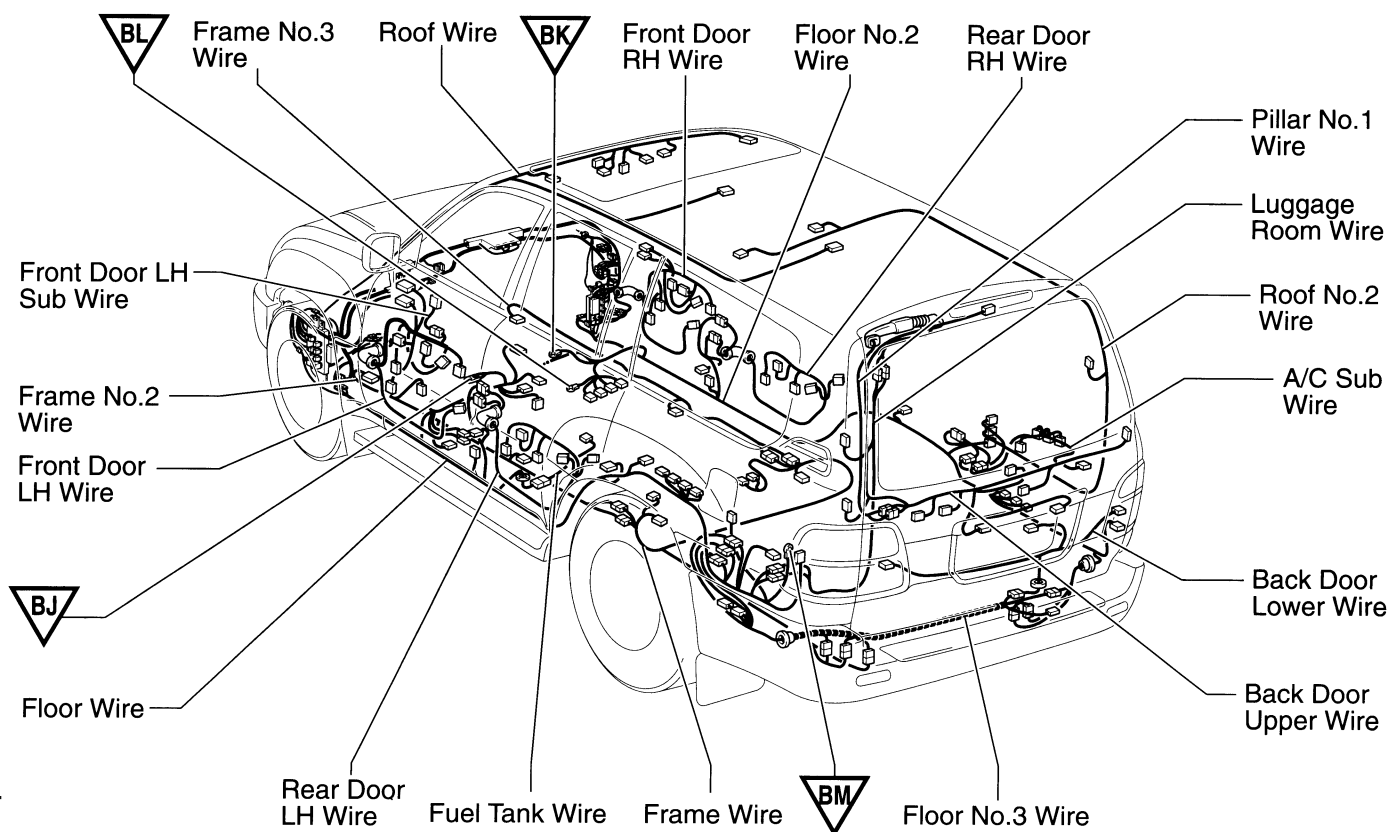


Connector Joining Wire Harness and Wire Harness

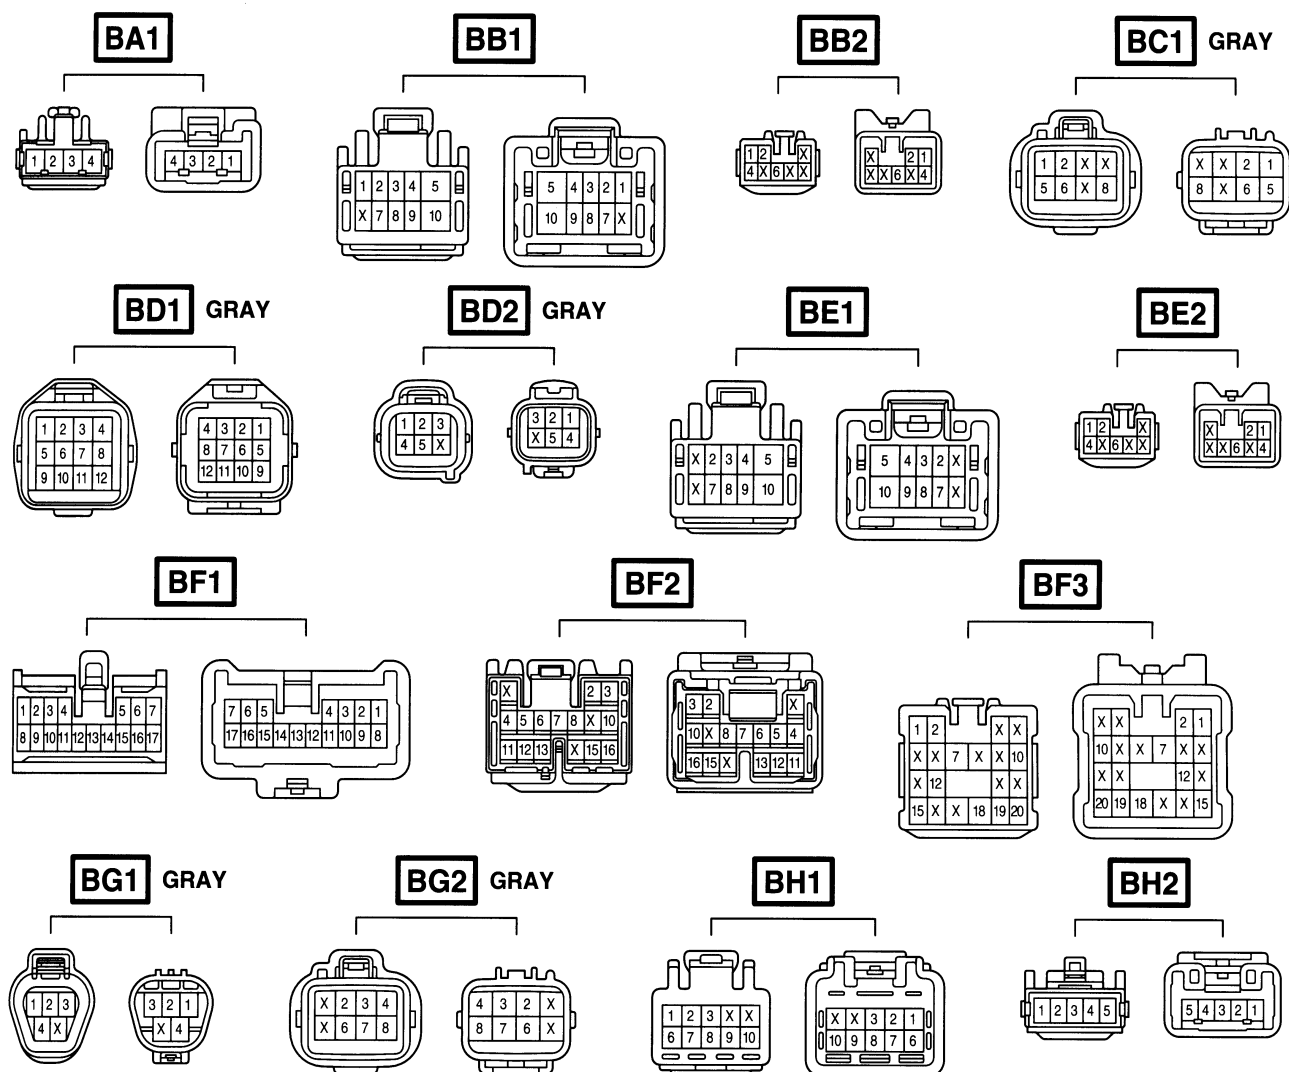


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Front Door LH Wire and Front Door LH Sub Wire (Front Door LH)
BB1	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BB2	
BC1	Floor Wire and Fuel Tank Wire (Near the Fuel Tank)
BD1	Frame No. 2 Wire and Frame Wire (Near the Left Rear Suspension Support)
BD2	
BE1	Rear Door RH Wire and Floor No. 2 Wire (Right Side of Center Pillar)
BE2	
BF1	
BF2	Floor No. 3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BF3	
BG1	Frame No. 3 Wire and Frame Wire (Near the Right Rear Suspension Support)
BG2	
BH1	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BH2	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

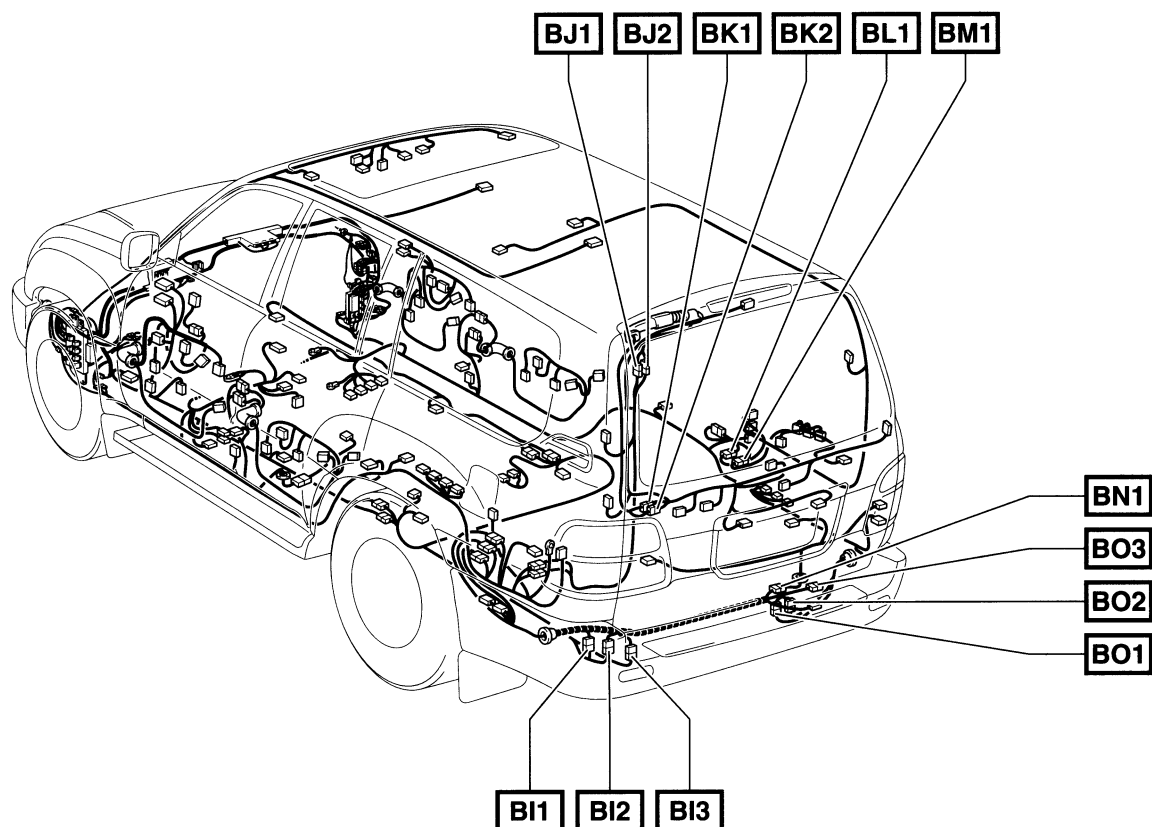

○ : Location of Splice Points

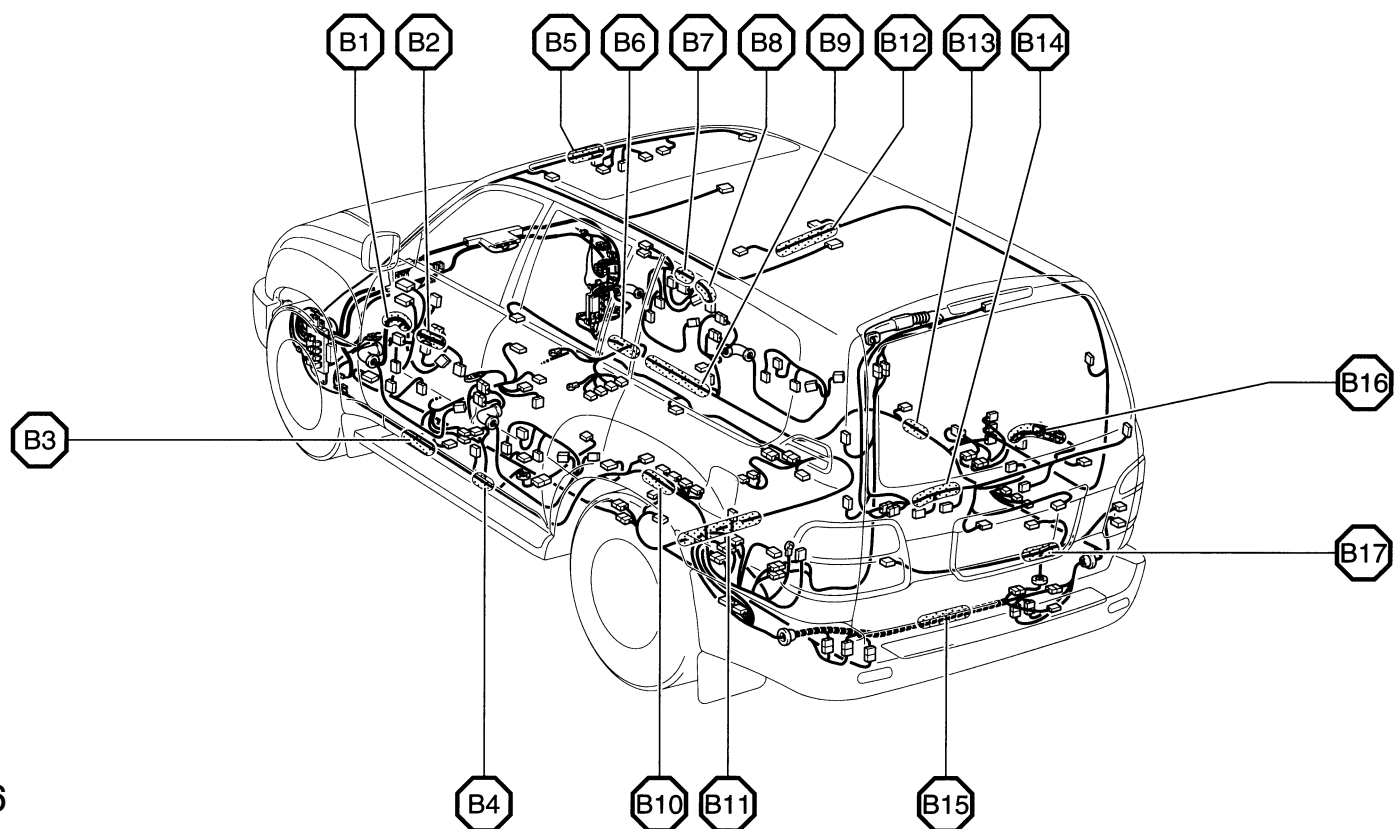


Connector Joining Wire Harness and Wire Harness

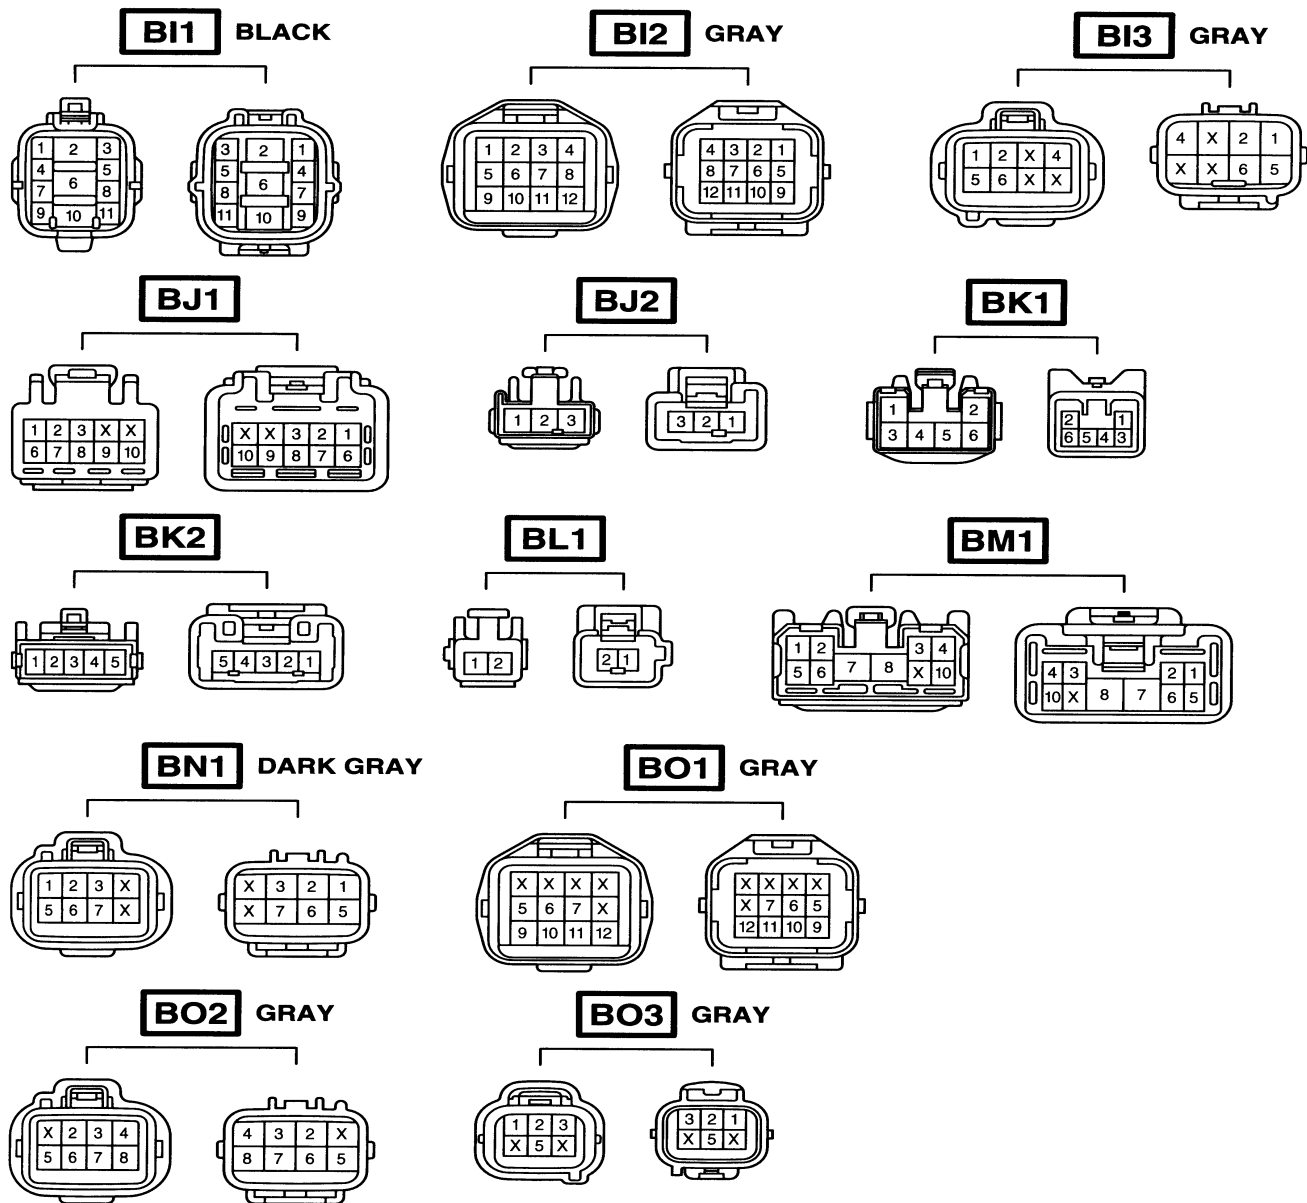


Code	Joining Wire Harness and Wire Harness (Connector Location)
B11	Frame Wire and Floor No. 3 Wire (Left Side of Rear Floor Crossmember)
B12	
B13	
BJ1	Pillar No. 1 Wire and Luggage Room Wire (Left Rear Side of Roof Panel)
BJ2	
BK1	Pillar No. 1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2	
BL1	Roof No. 2 Wire and Floor No. 2 Wire (Right Side Rear Quarter Panel)
BM1	Floor No. 2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)
BN1	Back Door Lower Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)
BO1	Floor No. 2 and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)
BO2	
BO3	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

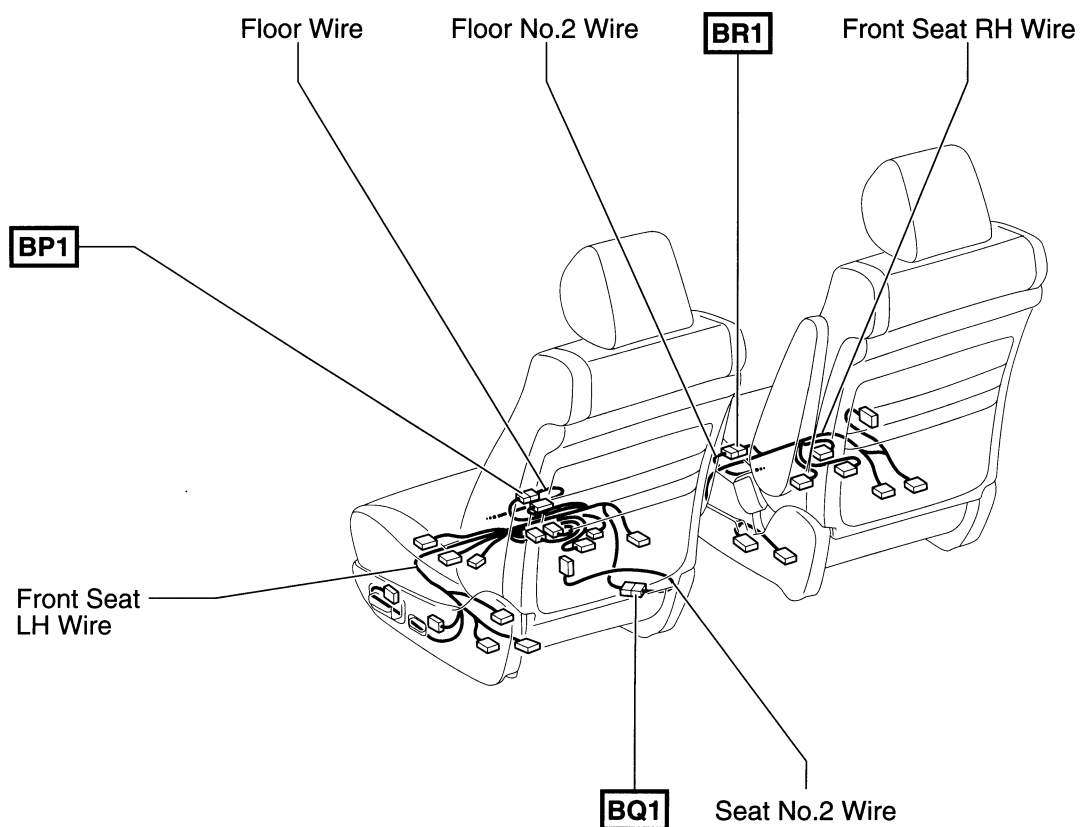

○ : Location of Splice Points

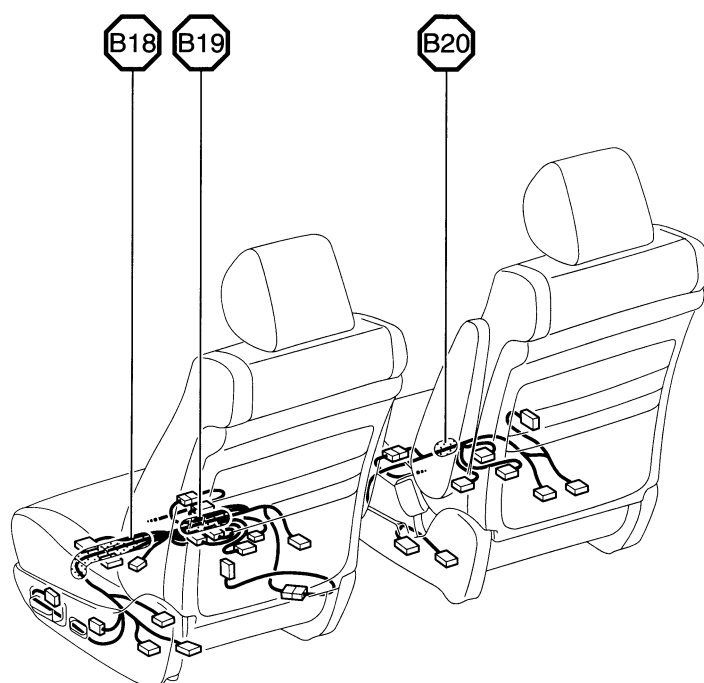


Connector Joining Wire Harness and Wire Harness

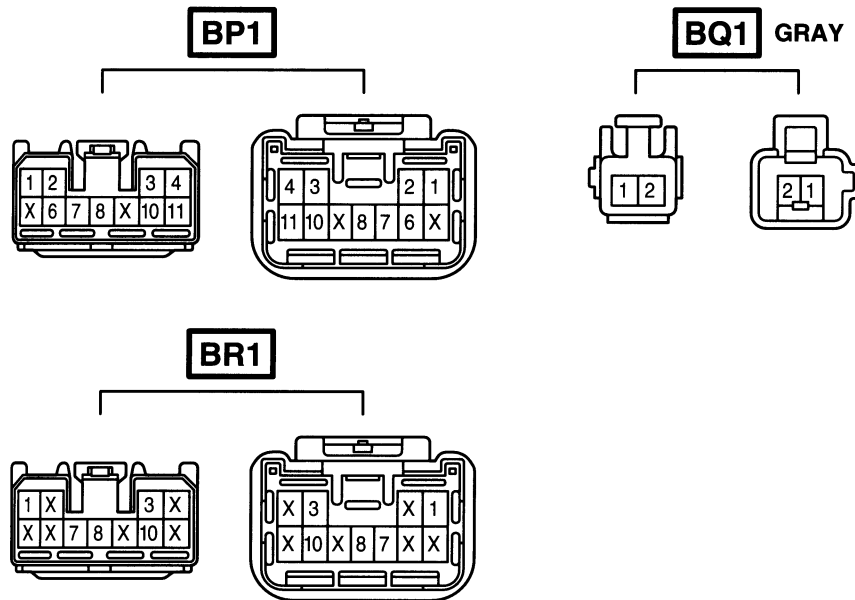

Code	Joining Wire Harness and Wire Harness (Connector Location)
BP1	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BQ1	Seat No. 2 Wire and Front Seat LH Wire (Rear Side Under the Driver's Seat)
BR1	Floor No. 2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)

NOTICE

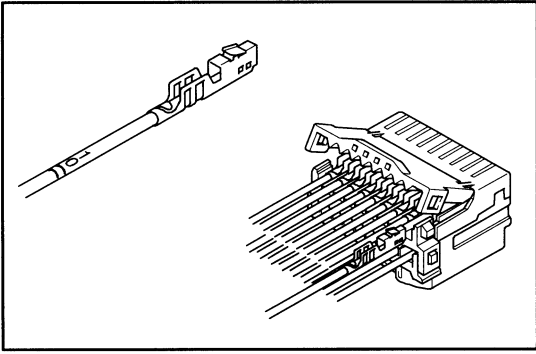

WIRE COLOR AND TERMINAL NUMBER

In some parts of the instrumental panel wiring harness, the same wire color (i.e. SB: Sky Blue) is used for all the wiring to a specific connector.

In order to identify the wiring, the terminal number is printed on the wiring

Install the wiring to the connector position with the same terminal number.

Some early production Vehicles may not have these terminal numbers printed.