




I GROUND POINT


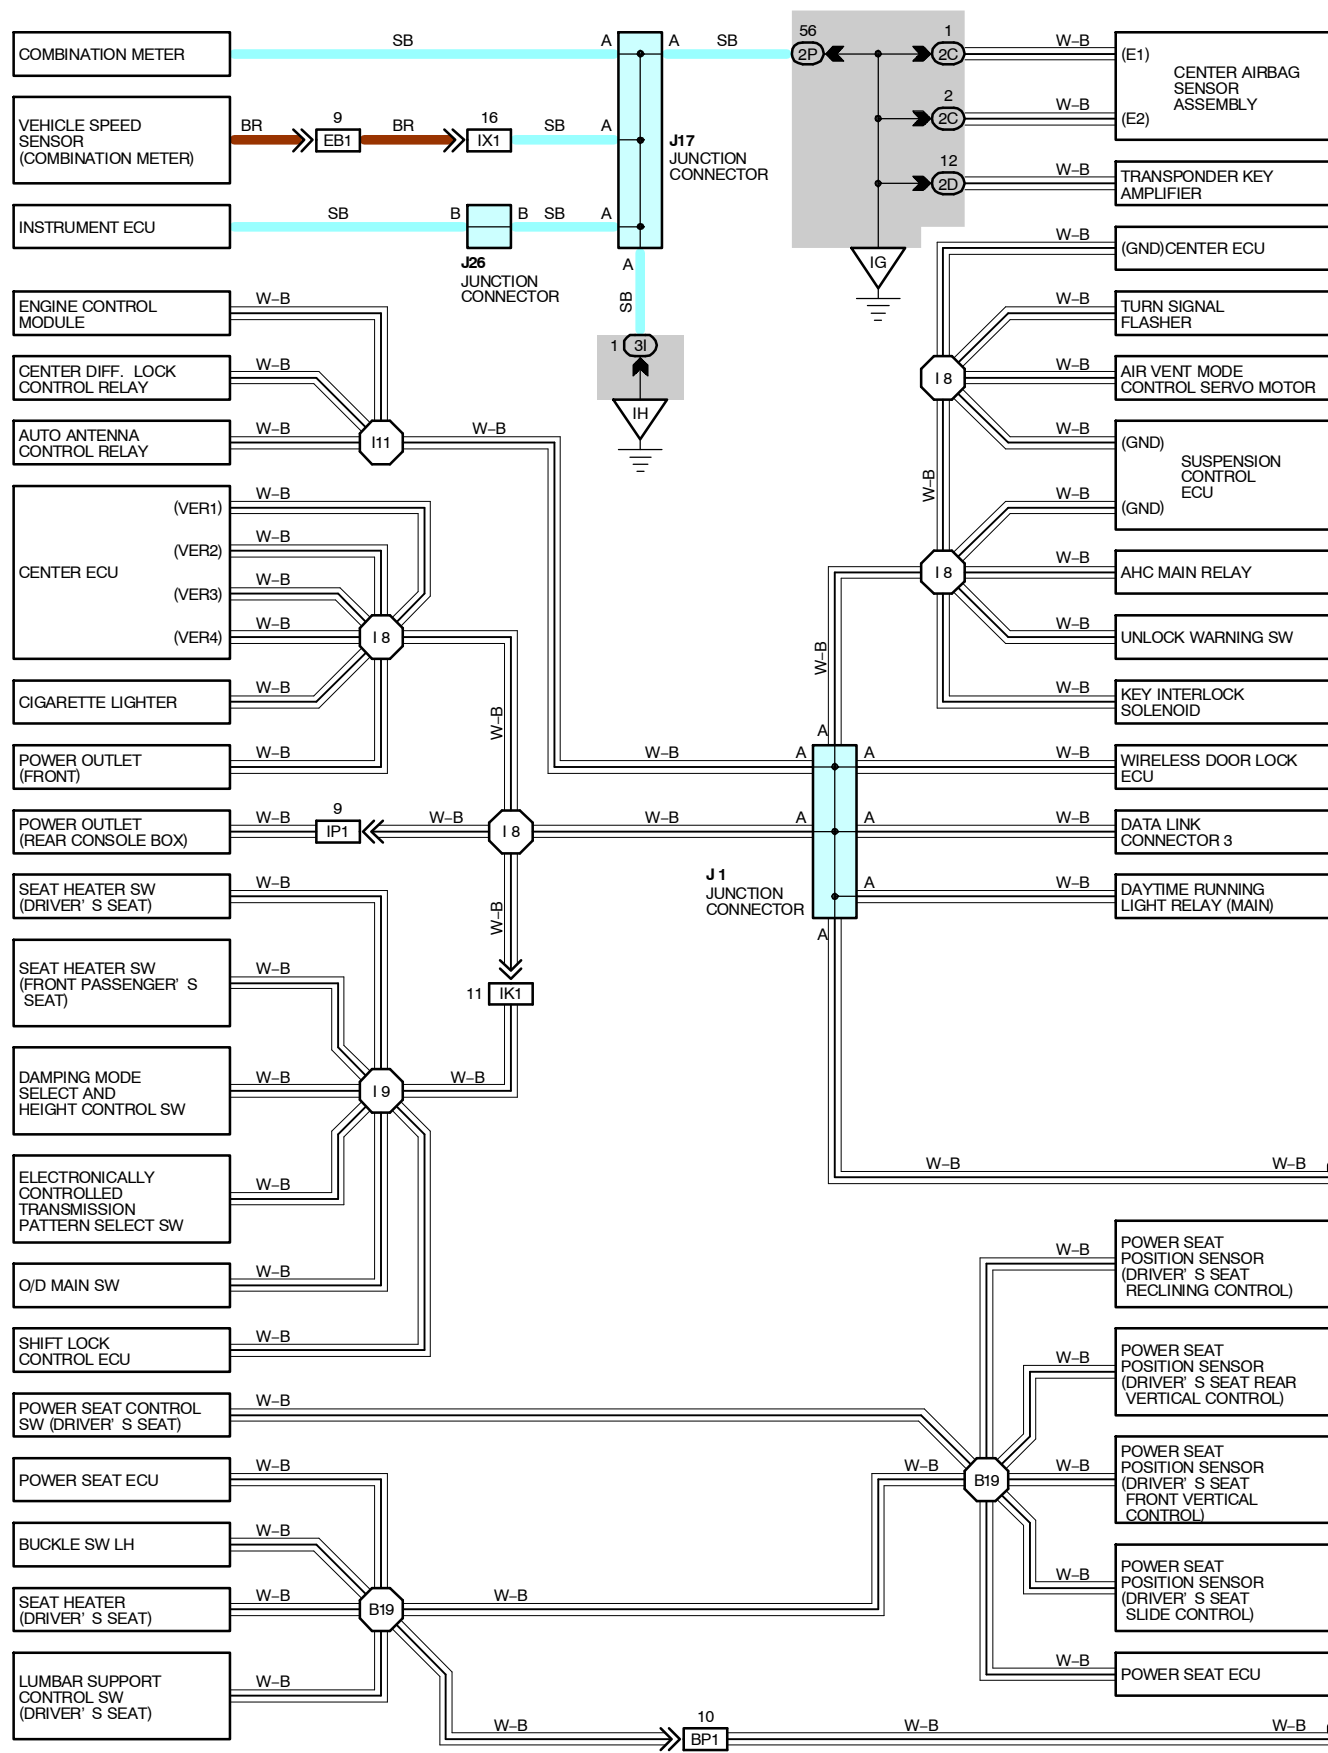


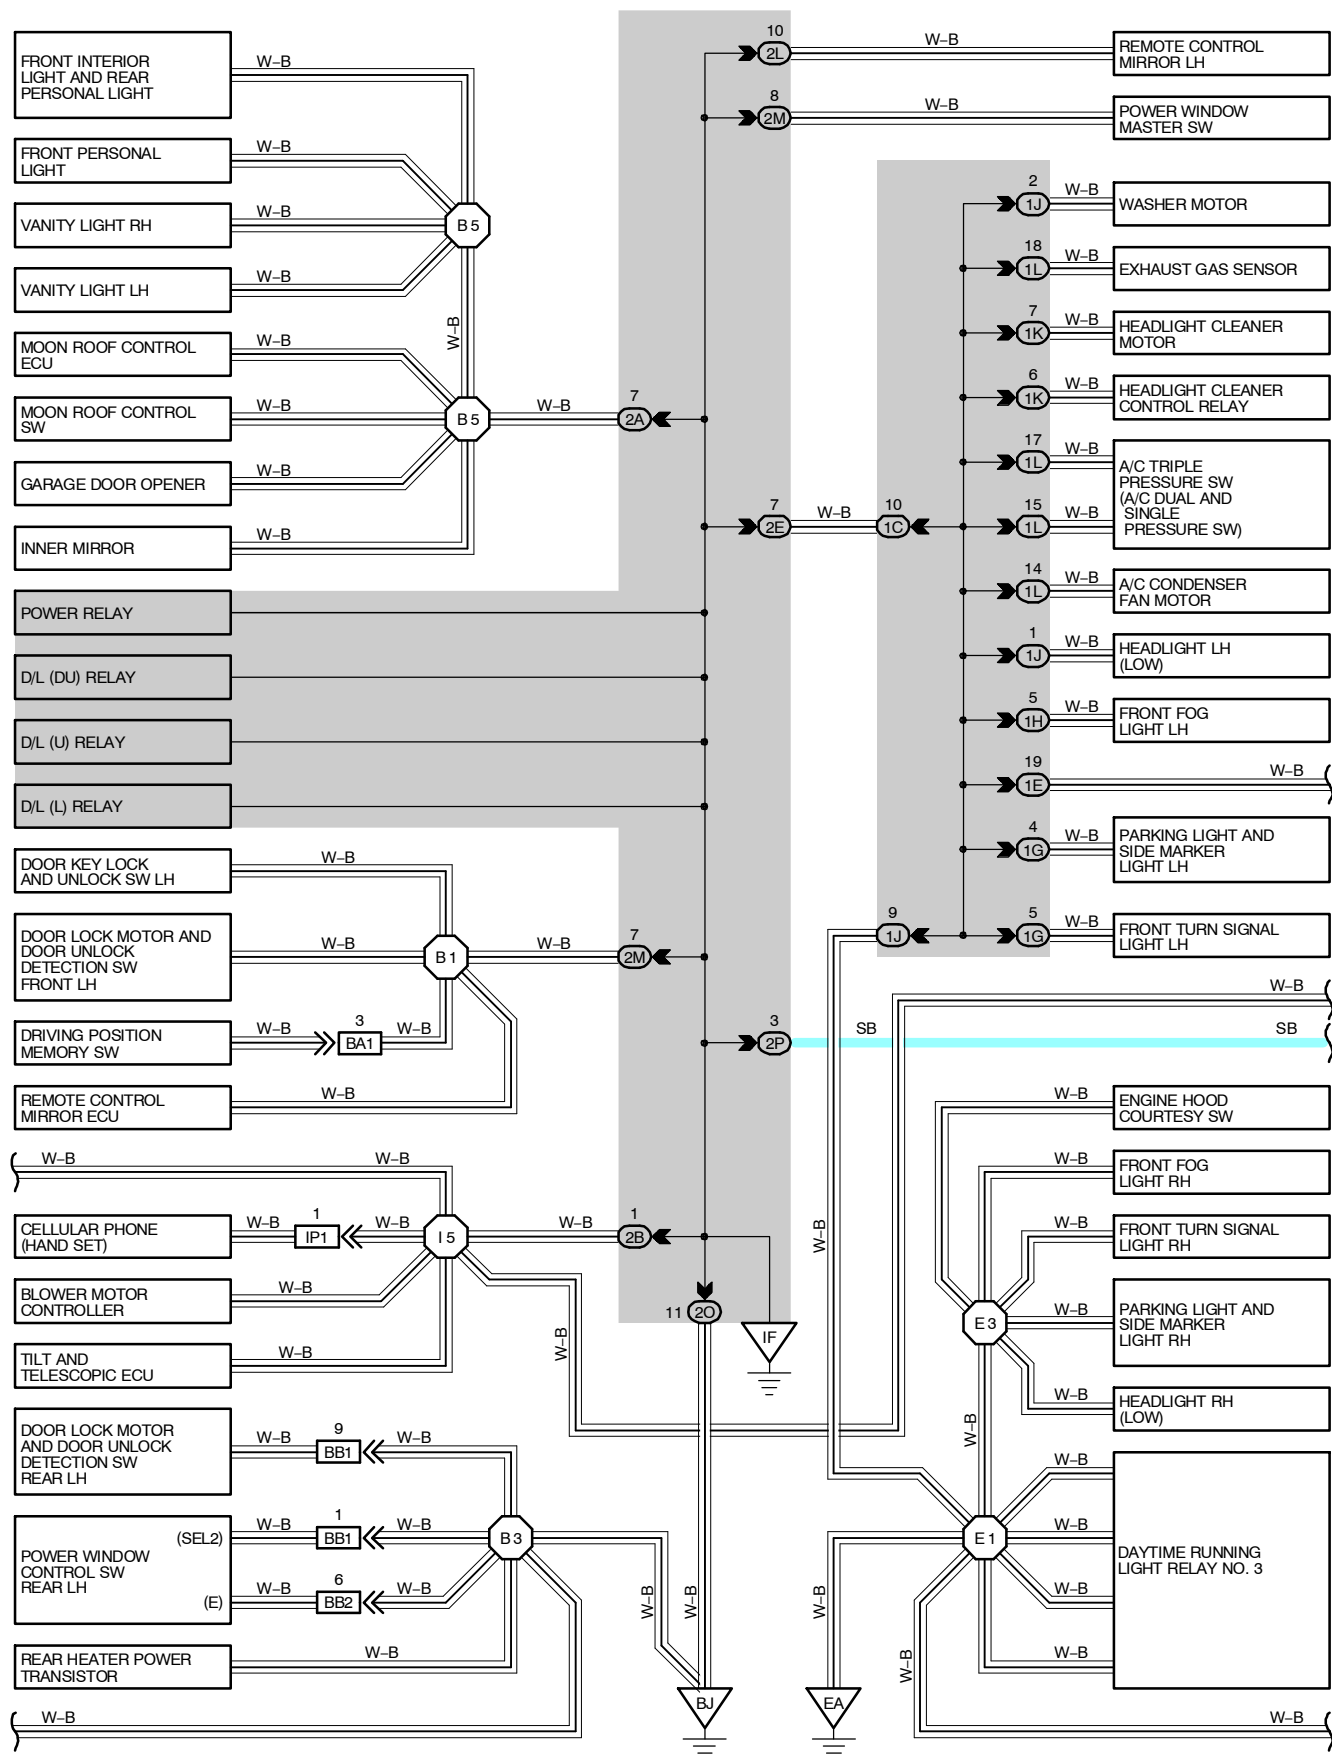

I GROUND POINT

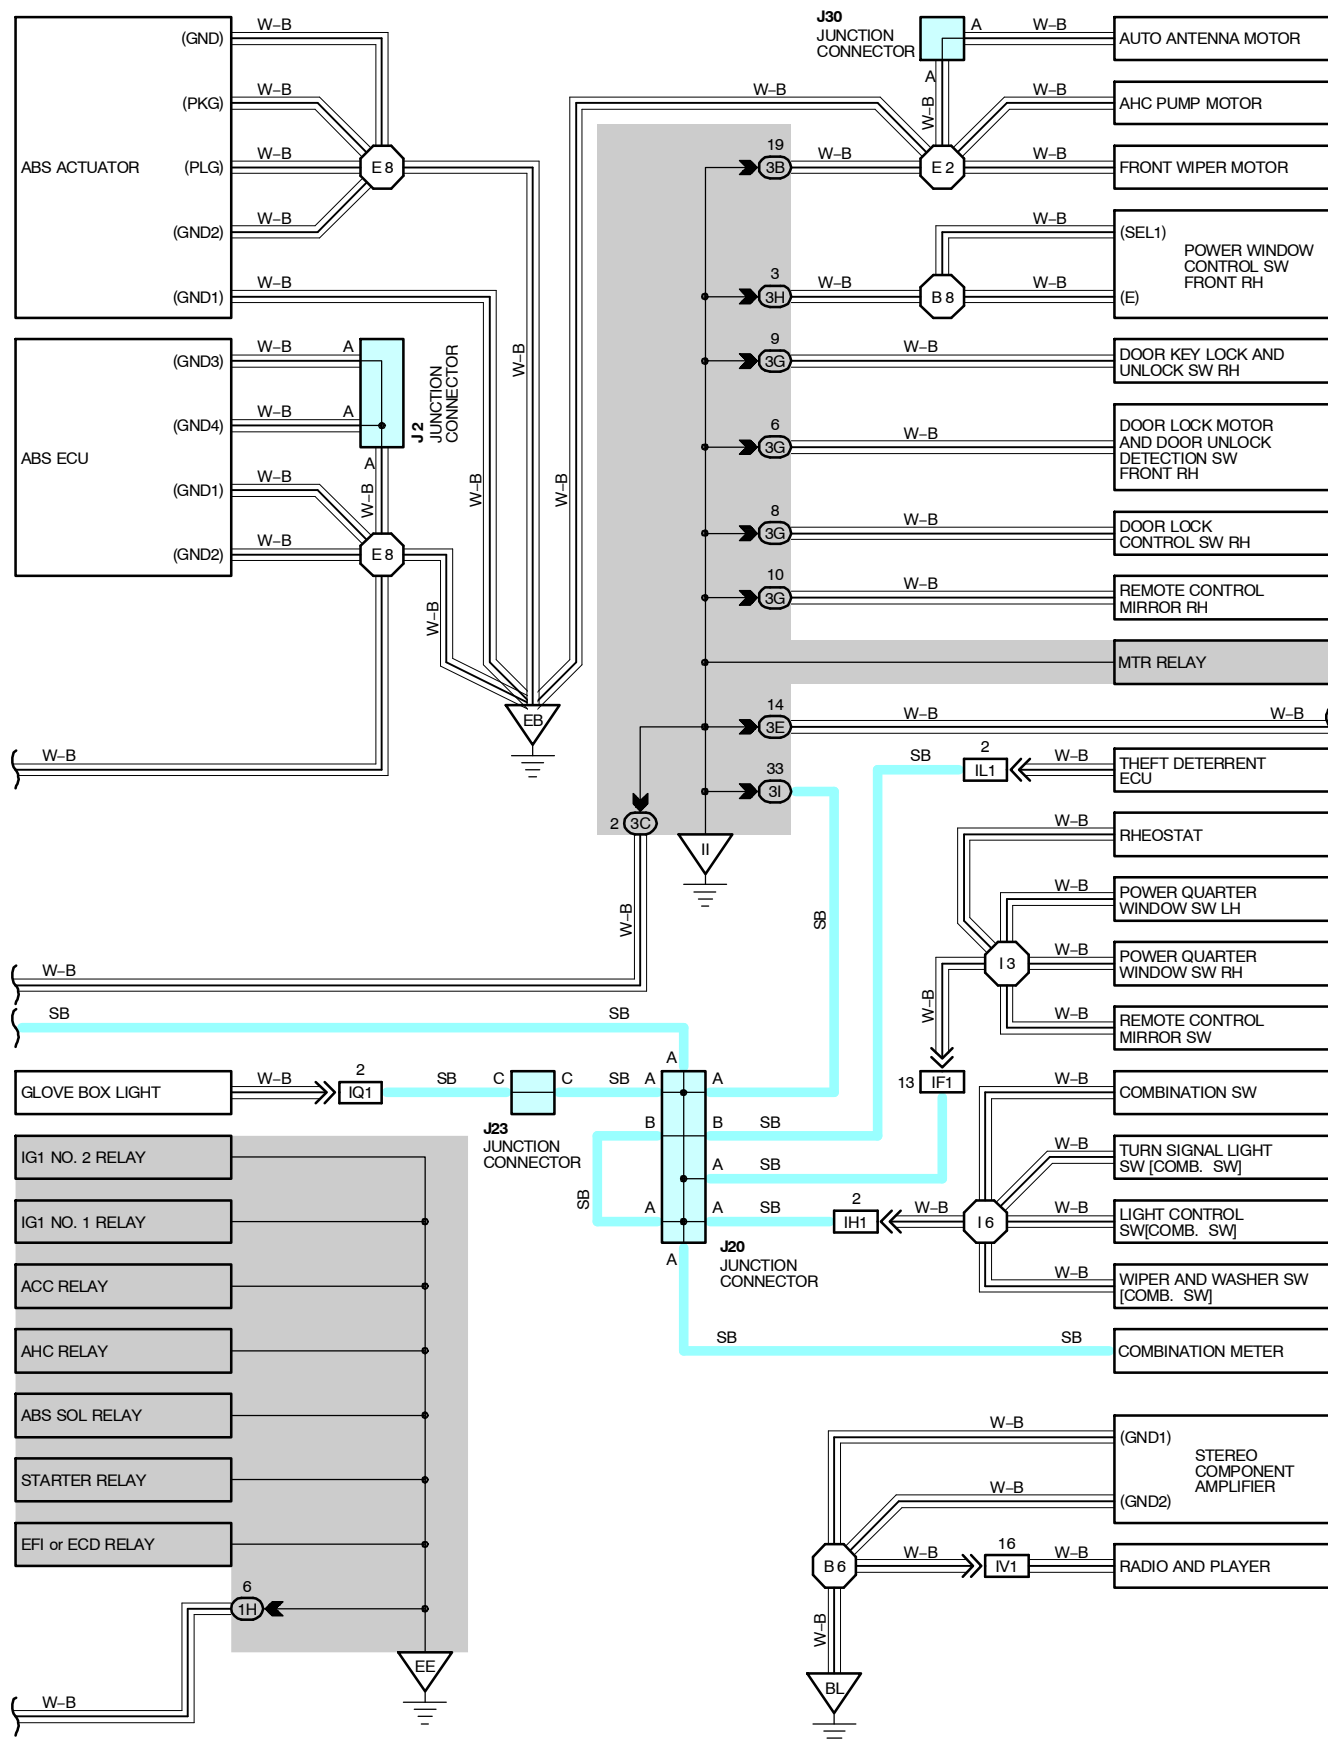

I GROUND POINT

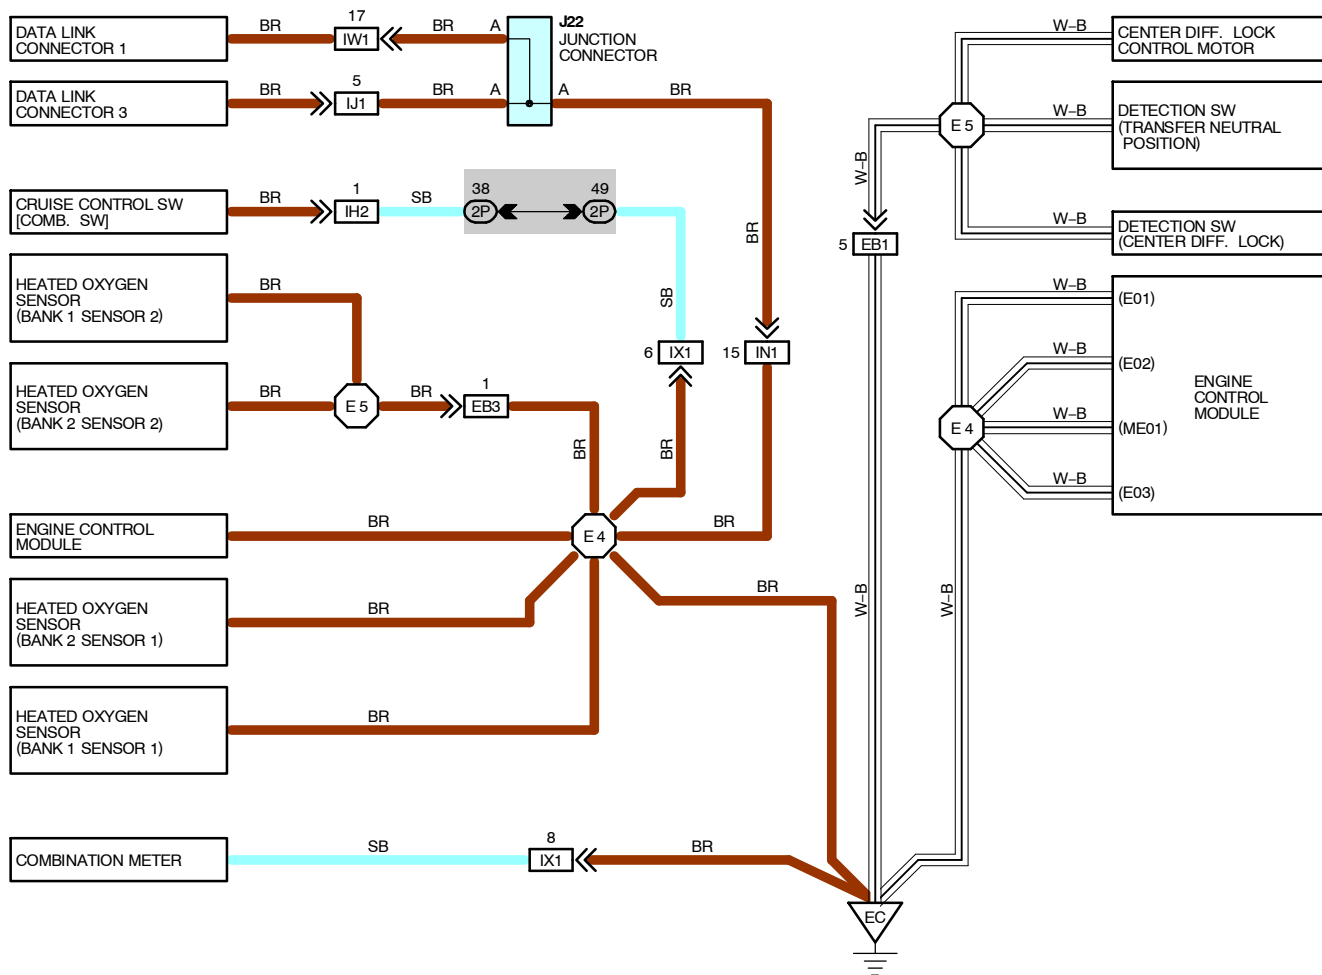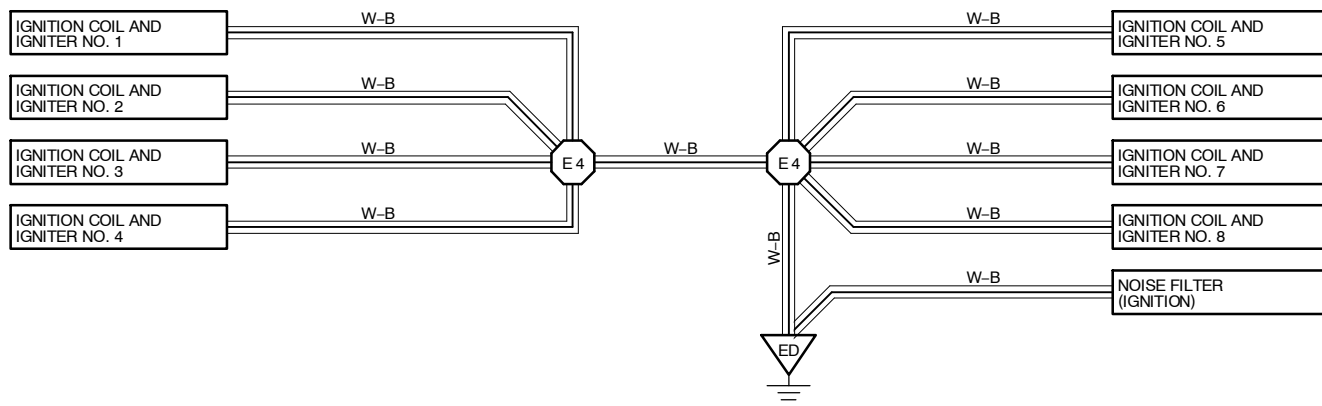

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	39	J22	39	J32	40
J2	39	J23	39	J39	40
J17	39	J26	39		
J20	39	J30	39		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	21	Engine Room No. 2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1G	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1H		
1J		
1K		
1L		
2A	24	Roof Wire and Cowl Side J/B LH (Left Kick Panel)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2C		
2D		
2E	24	Engine Room No. 2 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	24	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M		
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	30	Engine Room No. 2 Wire and Cowl Side J/B RH (Right Kick Panel)
3C	30	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E	30	Floor No. 2 Wire and Cowl Side J/B RH (Right Kick Panel)
3G	30	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3H		
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

I GROUND POINT

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	44	Engine Wire and Transmission Wire (On the Transmission)
EB3		
IF1	46	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IH2		
IJ1	48	Dash Wire and Detector Wire (Instrument Panel Center)
IK1	48	Console Box Wire and Dash Wire (Left Side of Front Console)
IL1	48	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IN1	50	Engine Wire and Dash Wire (Behind the Glove Box)
IP1	50	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	50	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IV1	52	Dash Wire and Floor No. 2 Wire (Behind the Glove Box)
IW1	52	Engine Room No. 2 Wire and Dash Wire (Behind the Glove Box)
IX1	52	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BA1	54	Front Door LH Wire and Front Door LH Sub Wire (Front Door LH)
BB1	54	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BB2		
BD1	54	Frame No. 2 Wire and Frame Wire (Near the Left Rear Suspension Support)
BE1	54	Rear Door RH Wire and Floor No. 2 Wire (Right Side of Center Pillar)
BE2		
BF3	54	Floor No. 3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BG1	54	Frame No. 3 Wire and Frame Wire (Near the Right Rear Suspension Support)
BH1	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BI2	56	Frame Wire and Floor No. 3 Wire (Left Side of Rear Floor Crossmember)
BI3		
BJ1	56	Pillar No. 1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BK1	56	Pillar No. 1 Wire and Back Door Upper Wire (Left Side of Back Door)
BM1	56	Floor No. 2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)
BN1	56	Back Door Lower Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)
BO3	56	Floor No. 2 Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)
BP1	58	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BR1	58	Floor No. 2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)

: GROUND POINTS


Code	See Page	Ground Points Location
EA	44	Front Right Side of Fender Apron
EB		
EC	44	Rear Bank of Right Cylinder Head
ED	44	Rear Bank of Left Cylinder Head
EE	44	Front Left Side of Fender Apron
IF	46	Set Bolt of Cowl Side J/B LH
IG		
IH	46	Set Bolt of Cowl Side J/B RH
II		
BJ	54	Under the Driver's Seat
BK	54	Front Side Under the Front Passenger's Seat
BL	54	Rear Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel



: SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	44	Engine Room Main Wire	B3	56	Floor Wire
E2	44	Engine Room No. 2 Wire	B5	56	Roof Wire
E3	44	Engine Room Main Wire	B6	56	Floor No. 2 Wire
E4	44	Engine Wire	B8	56	Front Door RH Wire
E5	44	Transmission Wire	B9	56	Floor No. 2 Wire
E8	44	Engine Room No. 2 Wire	B10	56	Floor Wire
I3	48	Instrument Panel Wire	B11	56	Frame Wire
I5	48	Dash Wire	B13	56	Floor No. 2 Wire
I6	48	Column Wire	B14	56	Back Door Upper Wire
I8	48	Dash Wire	B15	56	Floor No. 3 Wire
I9	48	Console Box Wire	B17	56	Back Door Lower Wire
I11	48	Dash Wire	B19	58	Front Seat LH Wire
B1	56	Front Door LH Wire	B20	58	Front Seat RH Wire

 J1




(Hint : See Page 7)

 J2




(Hint : See Page 7)

J17

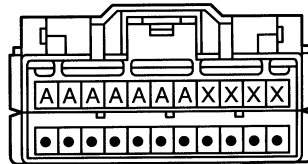


(Hint : See Page 7)

J20
GRAY

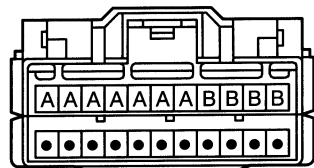


(Hint : See Page 7)

 J22




(Hint : See Page 7)

J23
BLUE

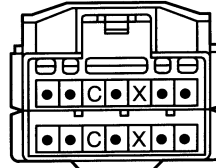


(Hint : See Page 7)

J26

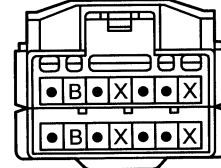


(Hint : See Page 7)

 J30




(Hint : See Page 7)

 J32



(Hint : See Page 7)

 J39



(Hint : See Page 7)