


AUTO ANTENNA

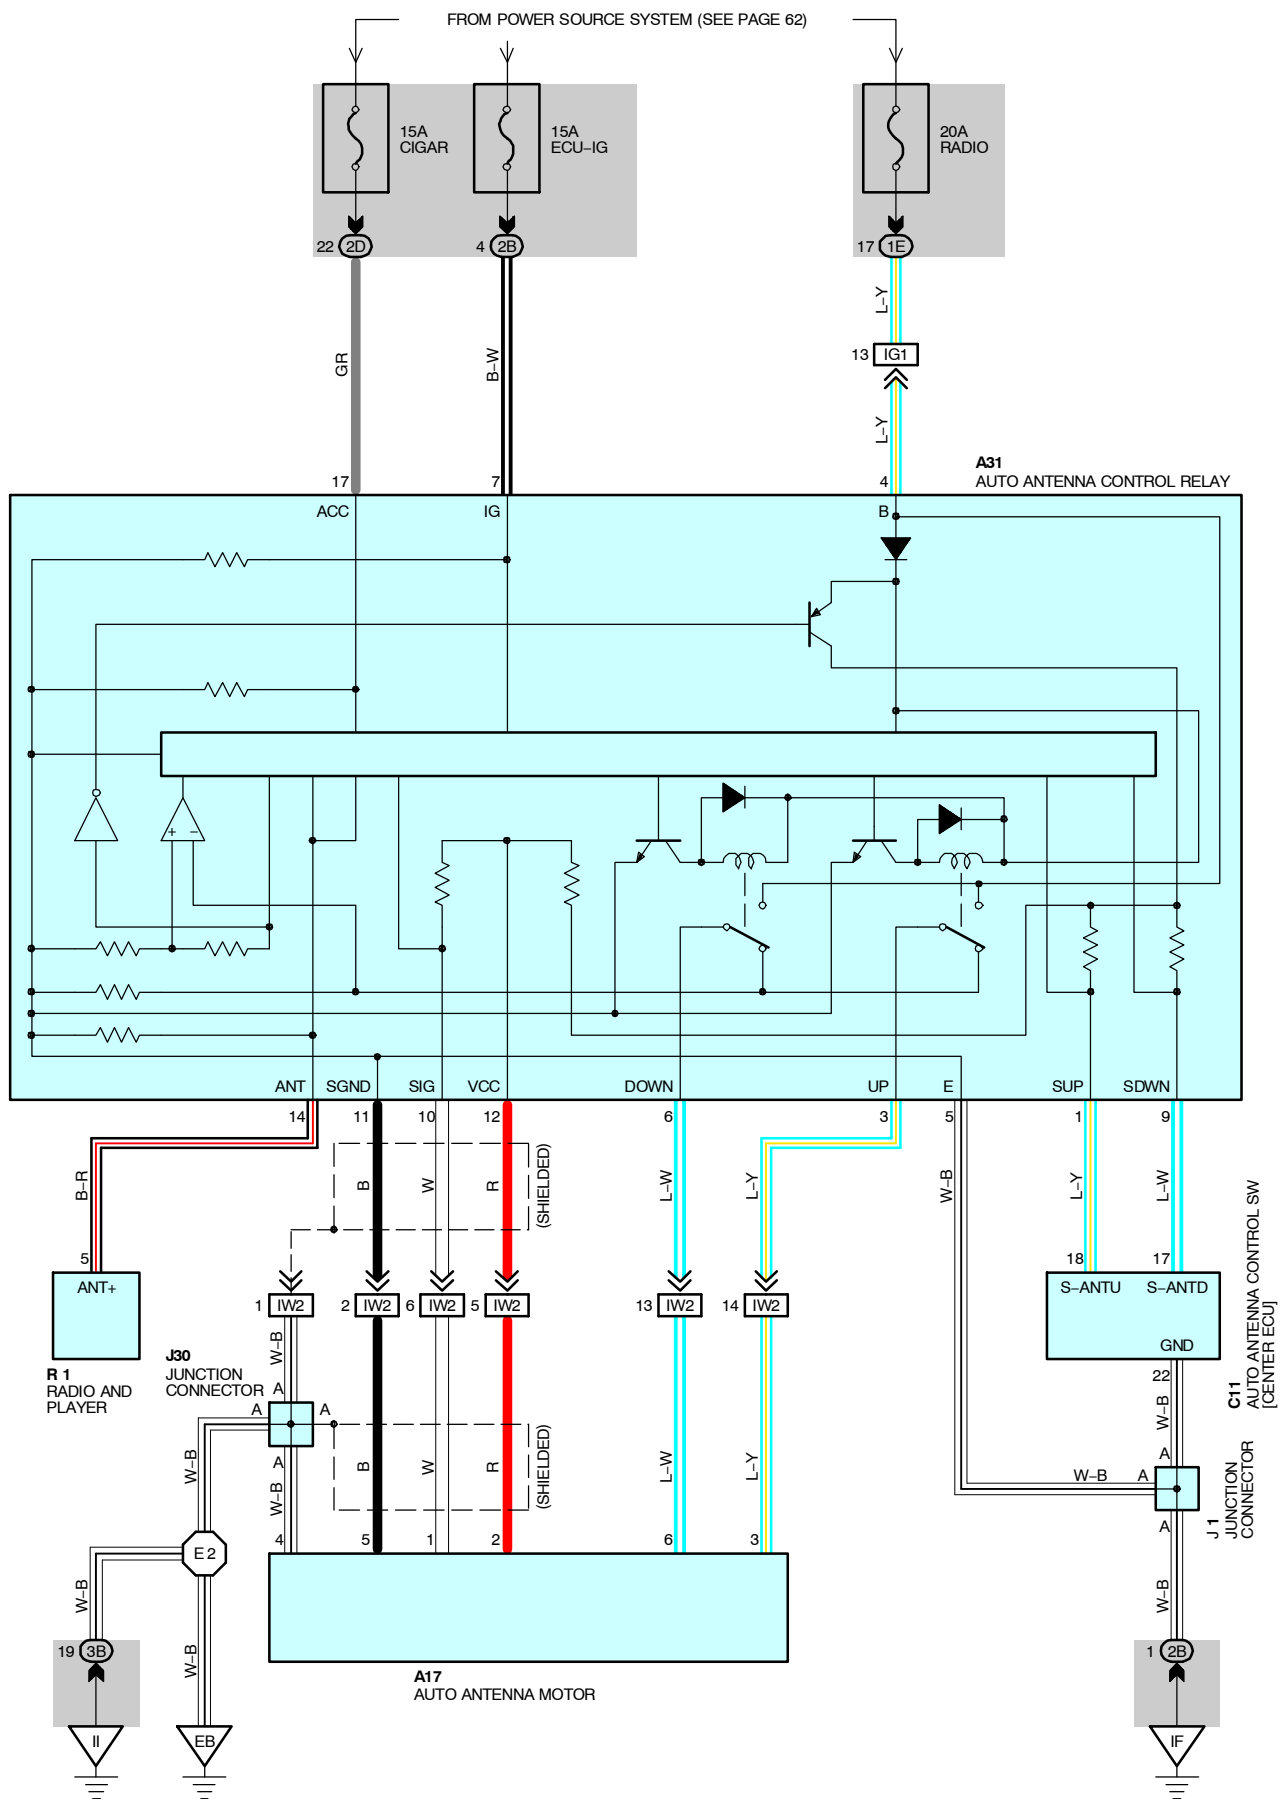

SERVICE HINTS

A31 AUTO ANTENNA CONTROL RELAY

- 4-GROUND : Always approx. 12 volts
- 7-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 17-GROUND : Approx. 12 volts with ignition SW at **ACC** or **ON** position
- 5-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A17	36	C11	38	J30	39
A31	38	J1	39	R1	39

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	21	Engine Room No. 2 Wire and Engine Room J/B (Engine Compartment Left)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
3B	30	Engine Room No. 2 Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	48	Engine Room No. 2 Wire and Dash Wire (Behind the Combination Meter)
IW2	52	Engine Room No. 2 Wire and Dash Wire (Behind the Glove Box)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EB	44	Front Right Side of Fender Apron
IF	46	Set Bolt of Cowl Side J/B LH
II	46	Set Bolt of Cowl Side J/B RH


○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	44	Engine Room No. 2 Wire			


A17




A31

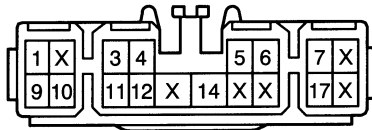

C11

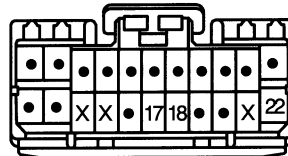


J1

 

(Hint : See Page 7)

 J30



(Hint : See Page 7)

R1

