


FROM POWER SOURCE SYSTEM (SEE PAGE 62)

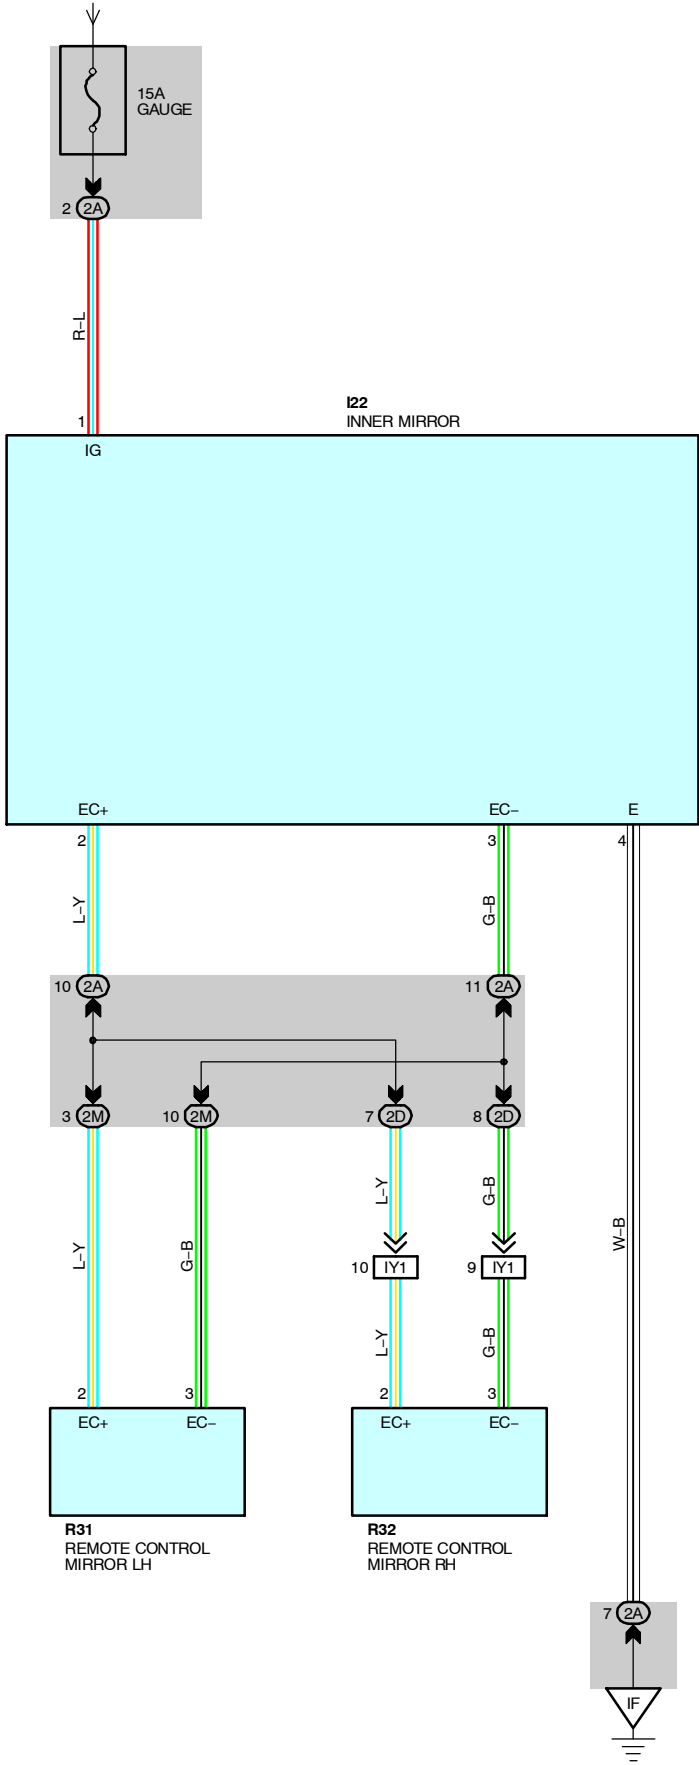

SERVICE HINTS

I22 INNER MIRROR

- 1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 4-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I22	40	R31	41	R32	41

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	24	Roof Wire and Cowl Side J/B LH (Left Kick Panel)
2D	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2M	24	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IY1	52	Front Door RH Wire and Dash Wire (Right Kick Panel)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH

 I22
ORANGE



R31

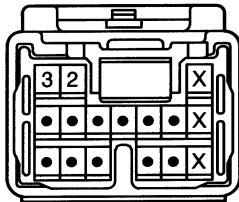

R32

