


FROM POWER SOURCE SYSTEM (SEE PAGE 62)

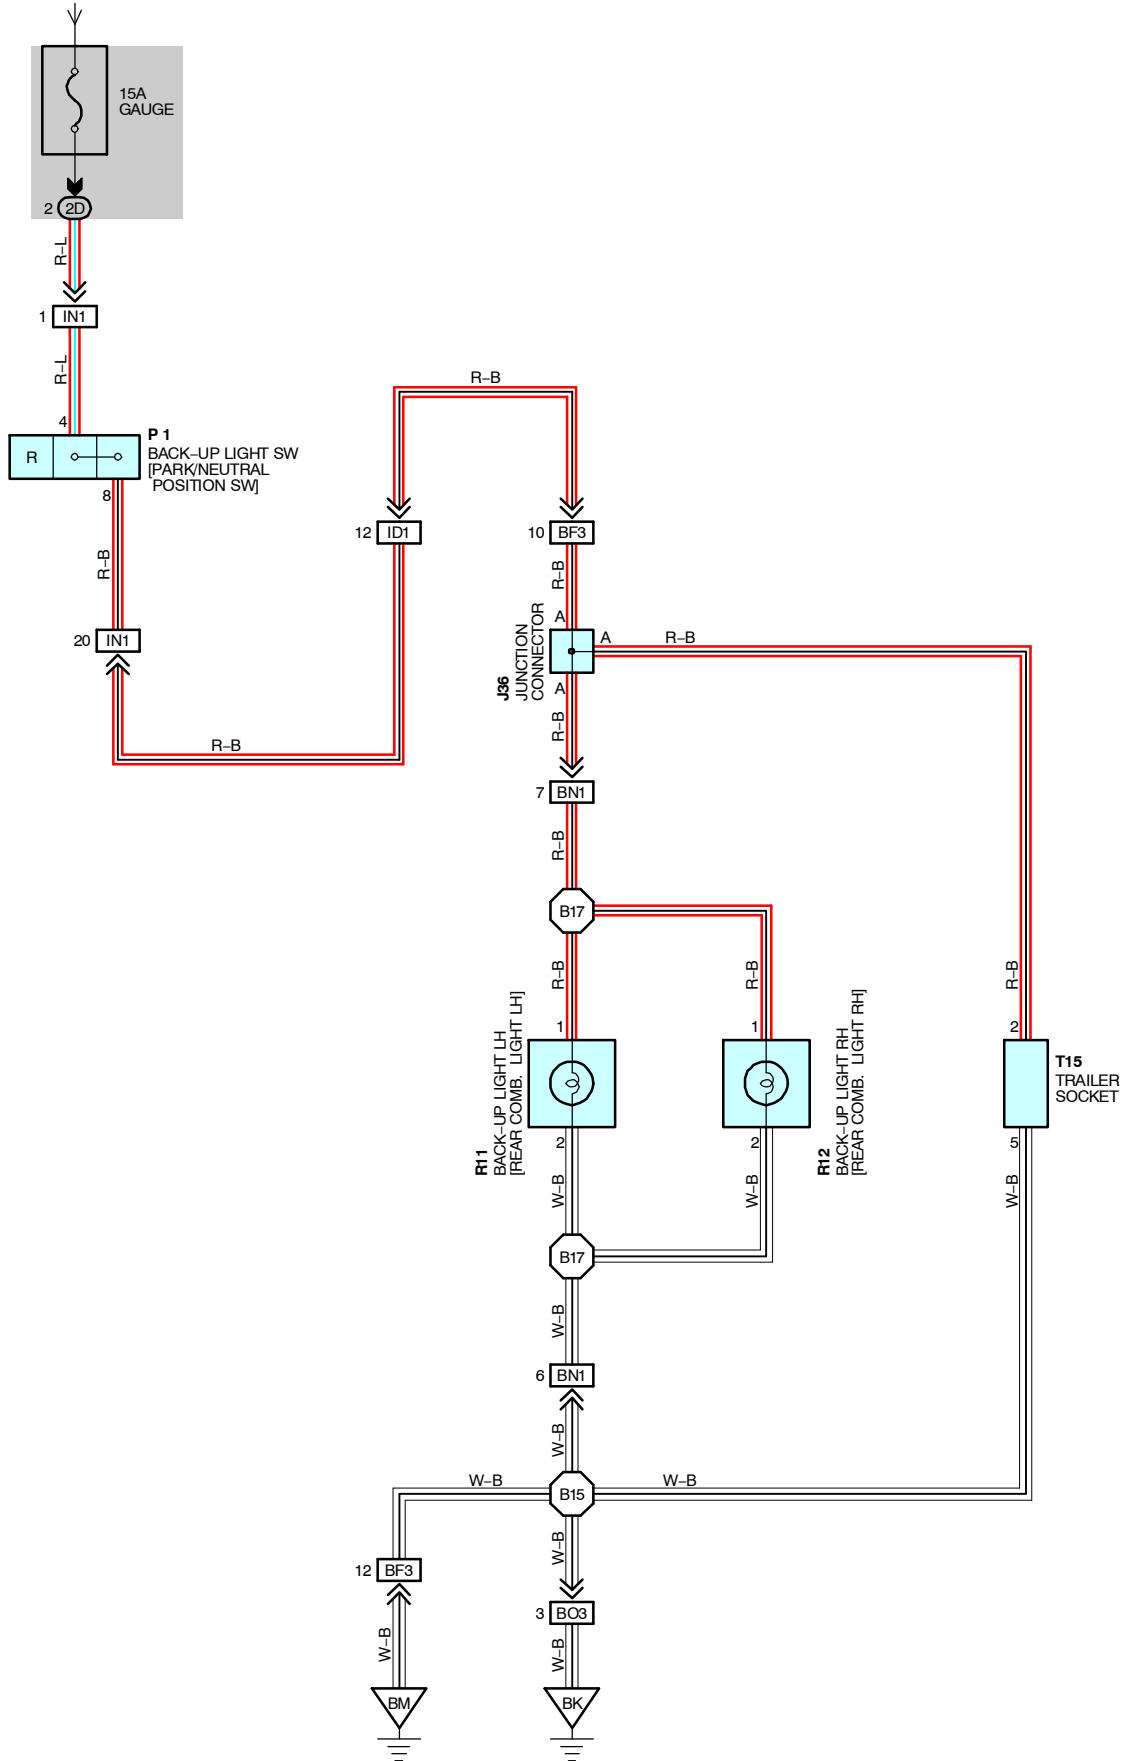

SERVICE HINTS

P1 BACK-UP LIGHT SW (PARK/NEUTRAL POSITION SW)

4-8 : Closed with shift lever at **R** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J36	40	R11	41	T15	41
P1	37	R12	41		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	46	Dash Wire and Floor Wire (Left Kick Panel)
IN1	50	Engine Wire and Dash Wire (Behind the Glove Box)
BF3	54	Floor No. 3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BN1	56	Back Door Lower Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)
BO3	56	Floor No. 2 Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BK	54	Front Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B15	56	Floor No. 3 Wire	B17	56	Back Door Lower Wire

