


FRONT FOG LIGHT

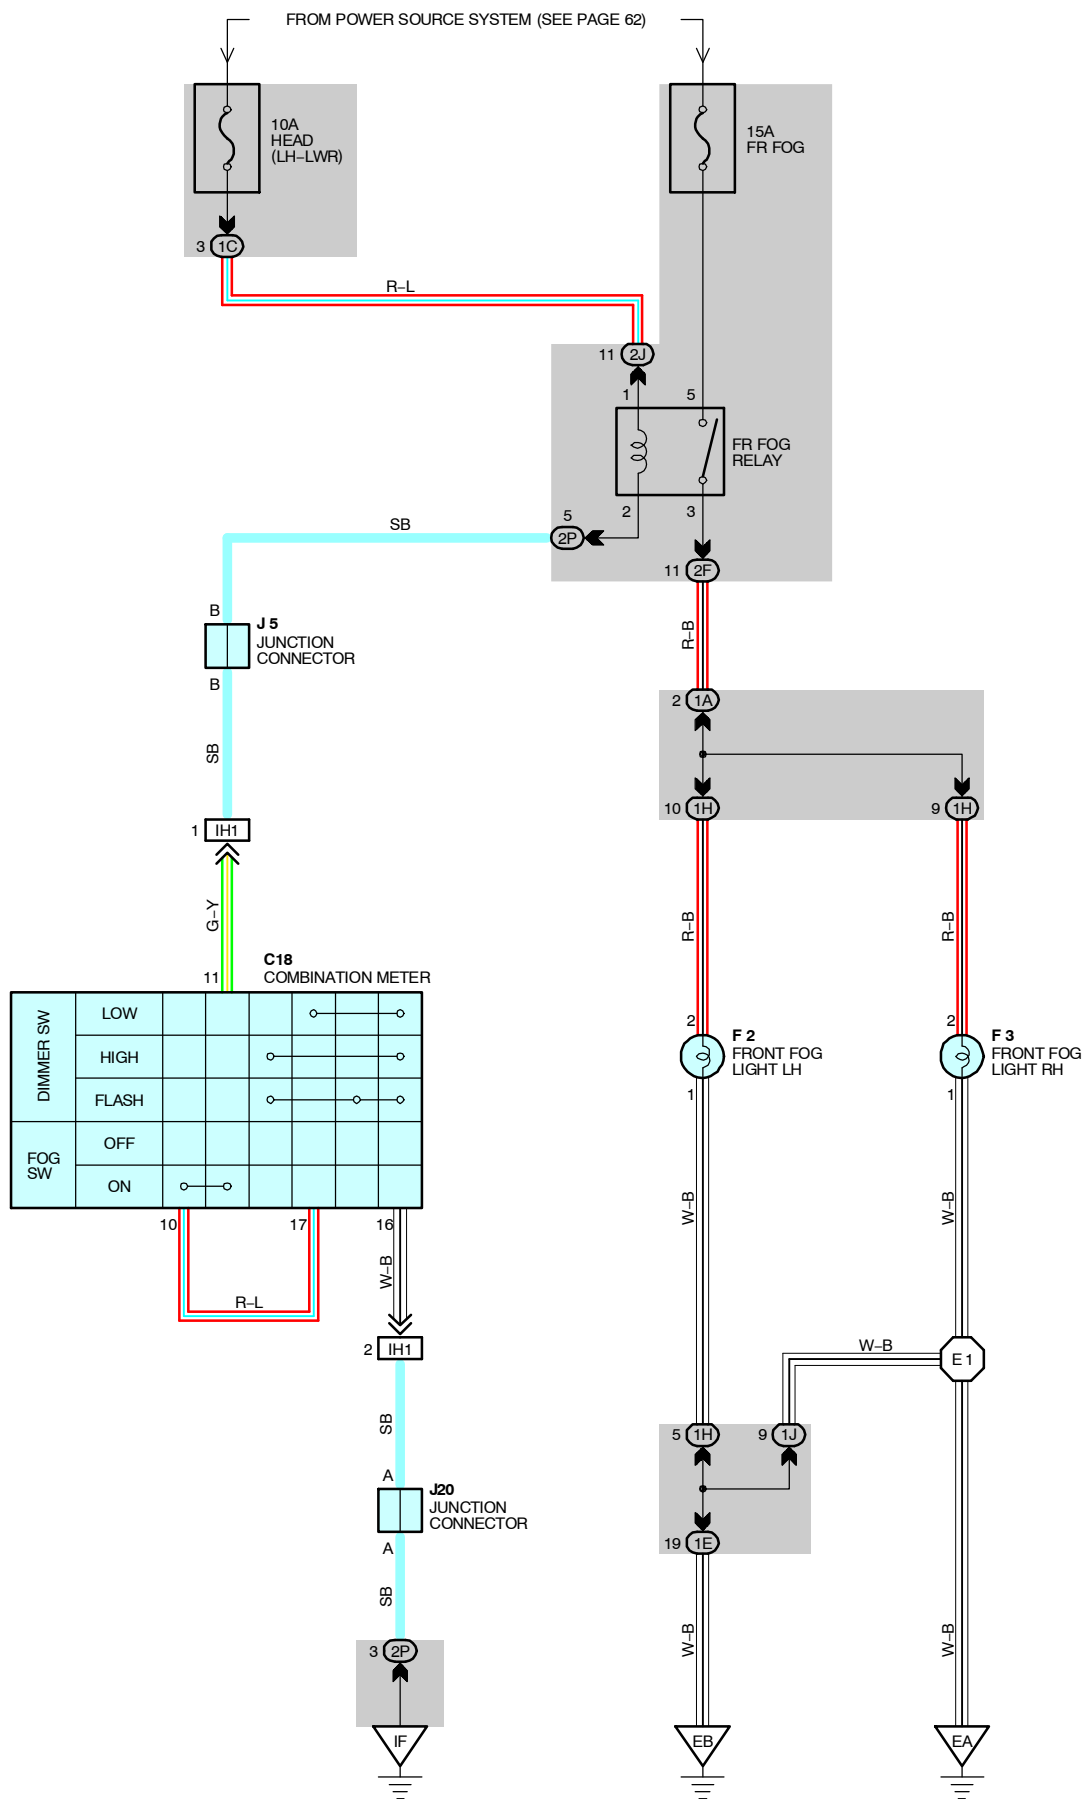

SERVICE HINTS

FR FOG RELAY

5-3 : Closed with light control SW at **HEAD** position, dimmer SW at **LOW** position and fog SW at **ON** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C18	38	F3	36	J20	39
F2	36	J5	39		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No. 2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1H	21	Engine Room Main wire and Engine Room J/B (Engine Compartment Left)
1J		
2F	24	Engine Room No. 2 Wire and Cowl Side J/B LH (Left Kick Panel)
2J		
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	44	Front Right Side of Fender Apron
EB		
IF	46	Set Bolt of Cowl Side J/B LH


○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	44	Engine Room Main Wire			


C18

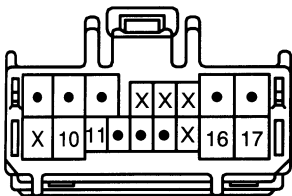


F2
BROWN

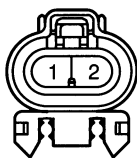

F3
BROWN

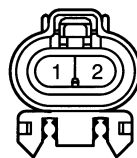


J5
GRAY

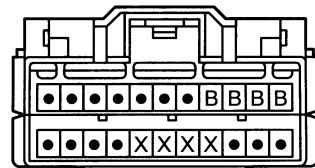

(Hint : See Page 7)

J20
GRAY

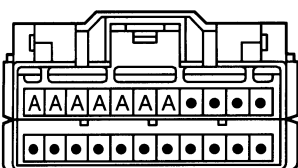

(Hint : See Page 7)