


HEADLIGHT CLEANER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

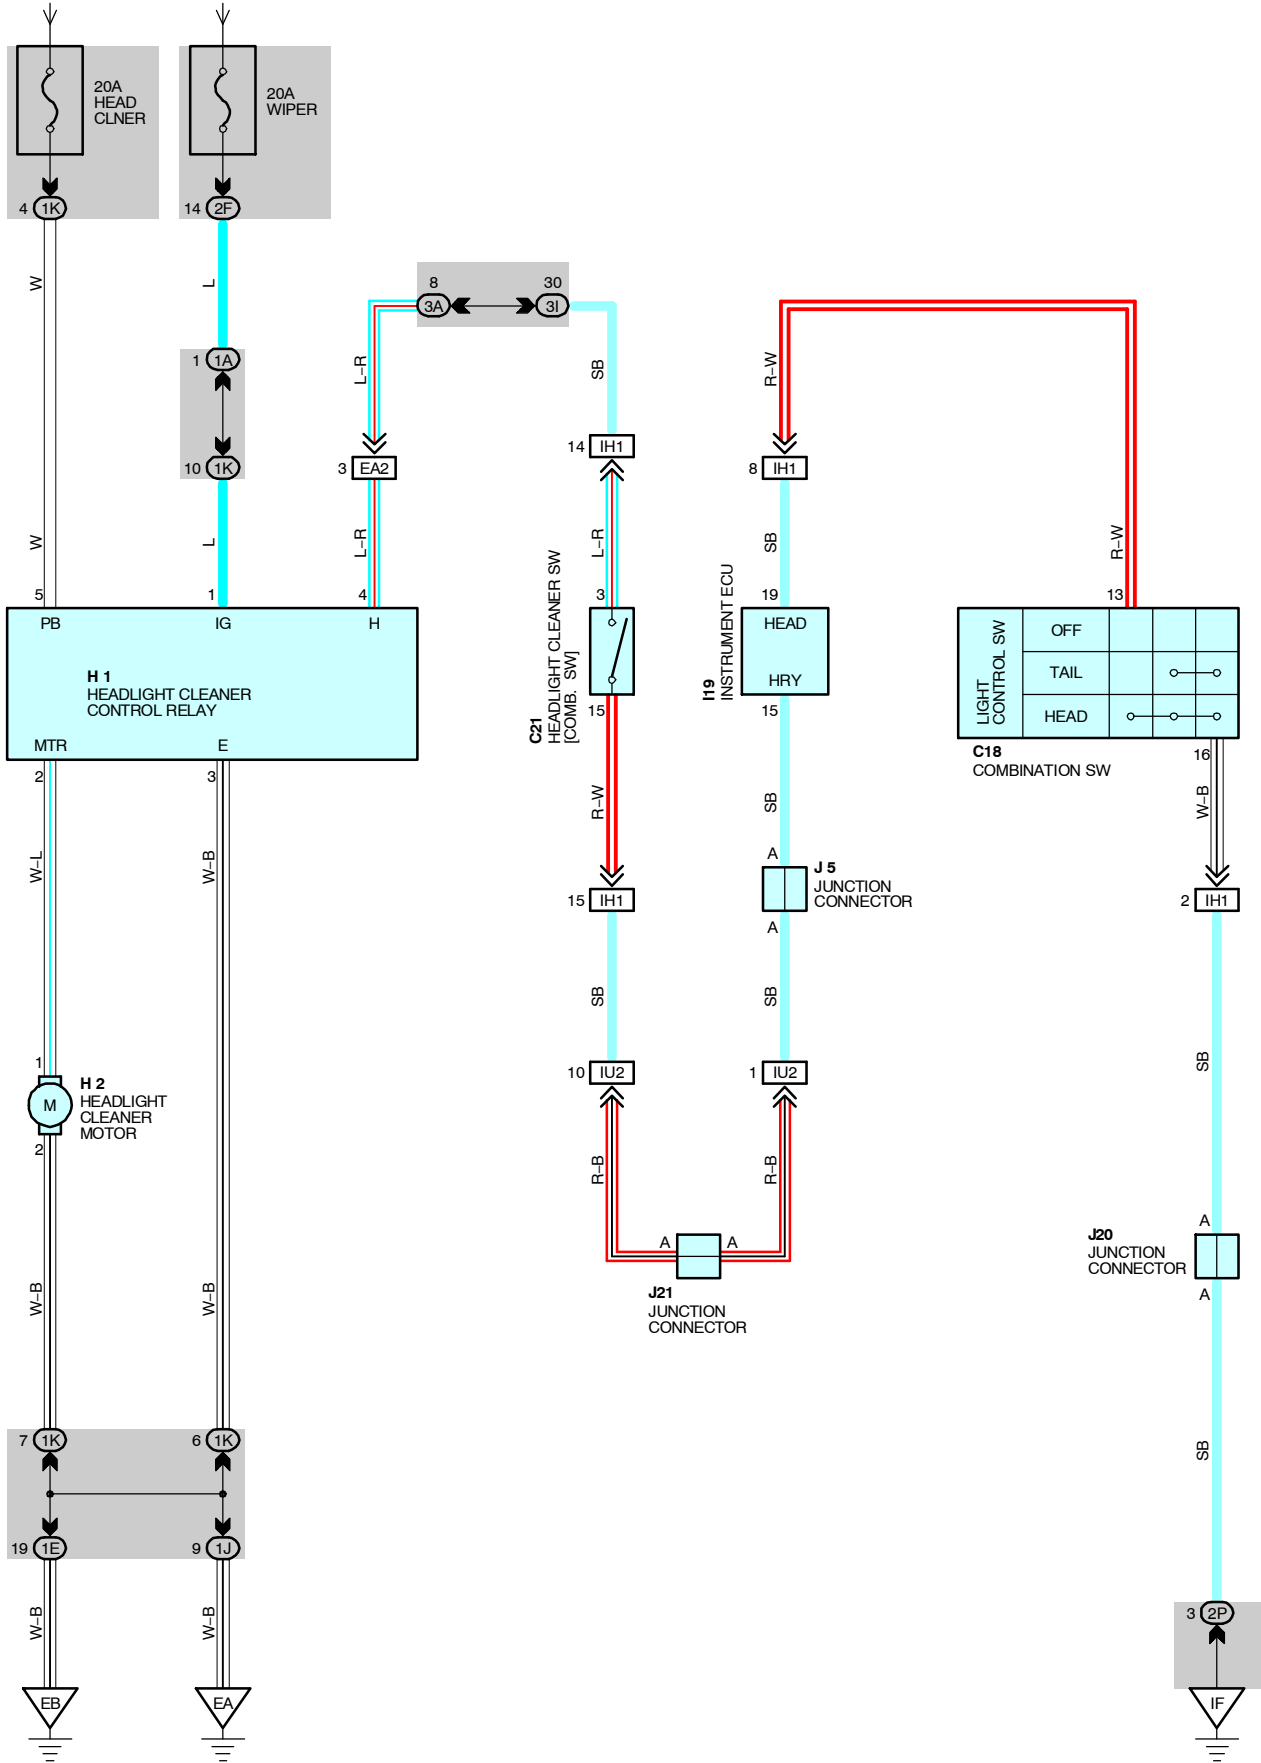

SERVICE HINTS**H1 HEADLIGHT CLEANER CONTROL RELAY**

5-2 : Closed with ignition SW at ON or ST position, light control SW at HEAD position and headlight cleaner SW on

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
C18	38	H2	37	J20	39
C21	38	I19	38	J21	39
H1	37	J5	39		

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No. 2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1J	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1K		
2F	24	Engine Room No. 2 Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	30	Engine Room No. 2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	44	Engine Room Main Wire and Engine Room No. 2 Wire (Engine Compartment Right)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IU2	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)

 : **GROUND POINTS**


Code	See Page	Ground Points Location
EA	44	Front Right Side of Fender Apron
EB	44	
IF	46	Set Bolt of Cowl Side J/B LH

HEADLIGHT CLEANER


C18

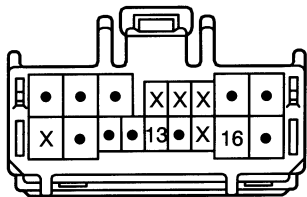

C21
BLACK

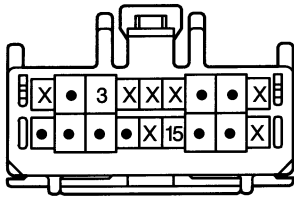


H1
BLACK

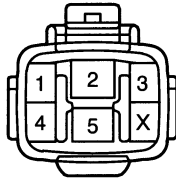


H2
GRAY



I19

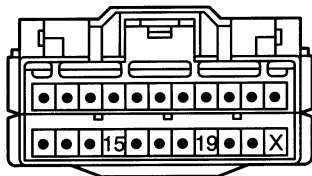


J5
GRAY

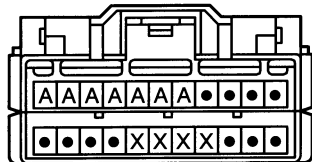


(Hint : See Page 7)

J20
GRAY

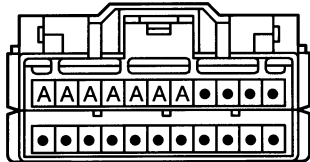

(Hint : See Page 7)

 J21
BLUE



(Hint : See Page 7)
