





INTERIOR LIGHT

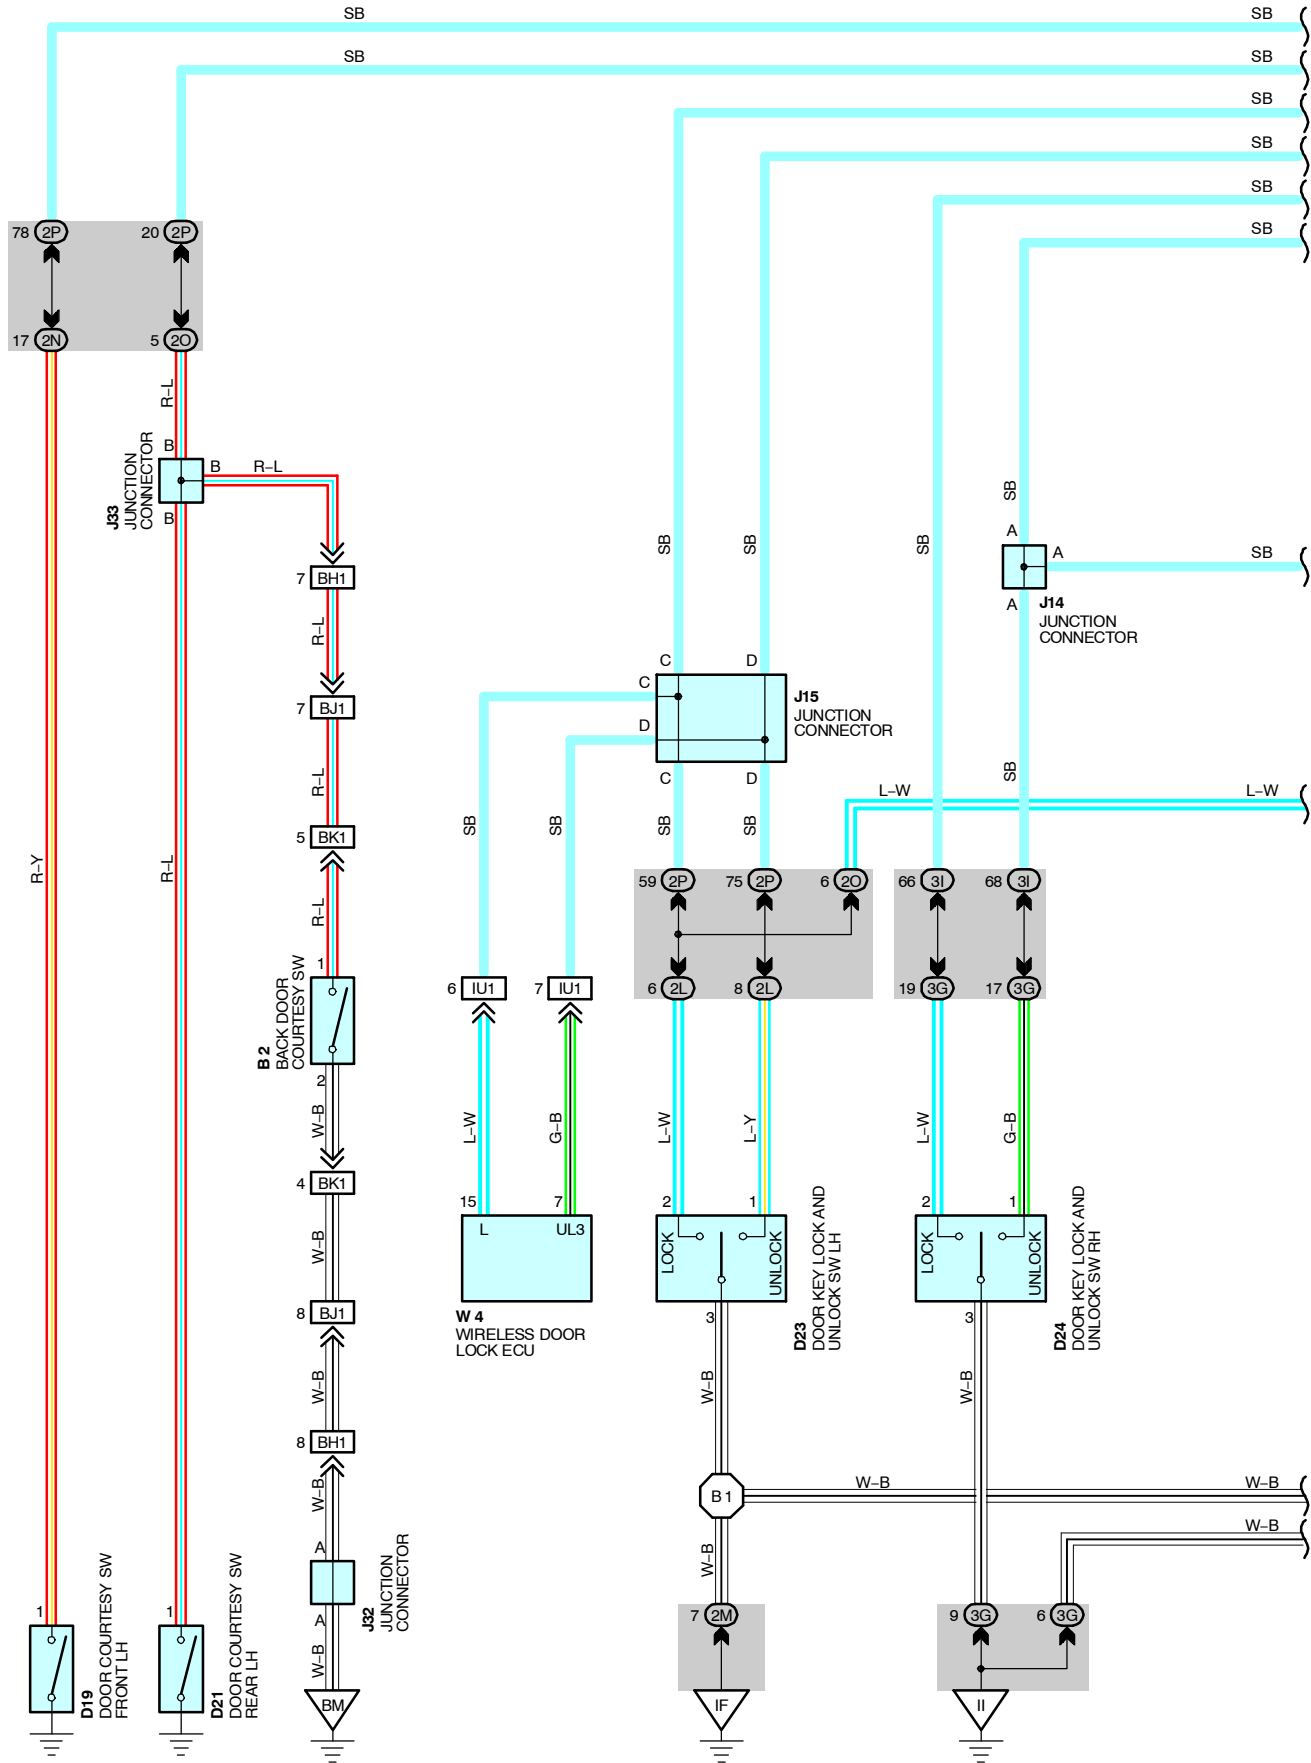

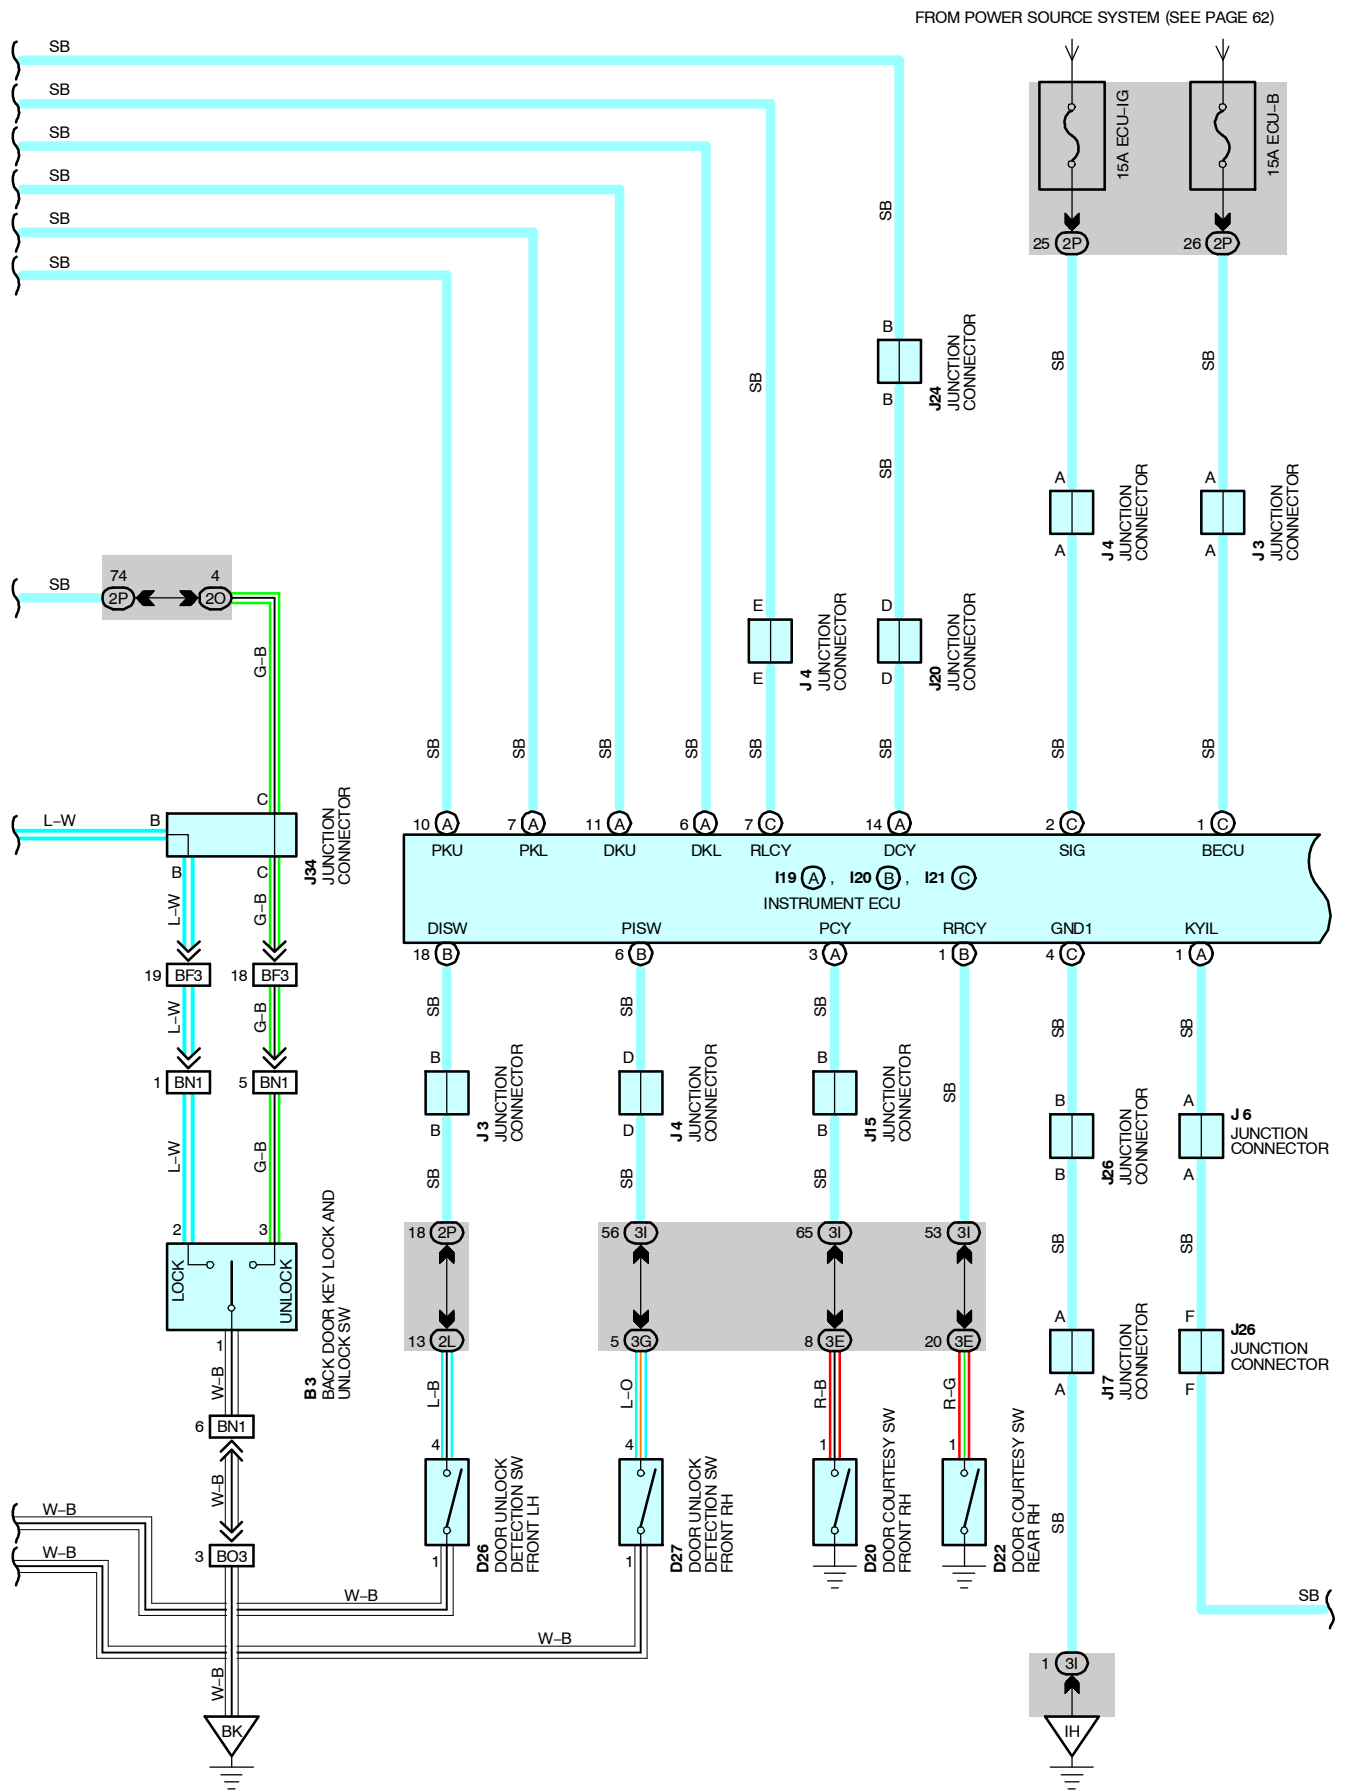

INTERIOR LIGHT

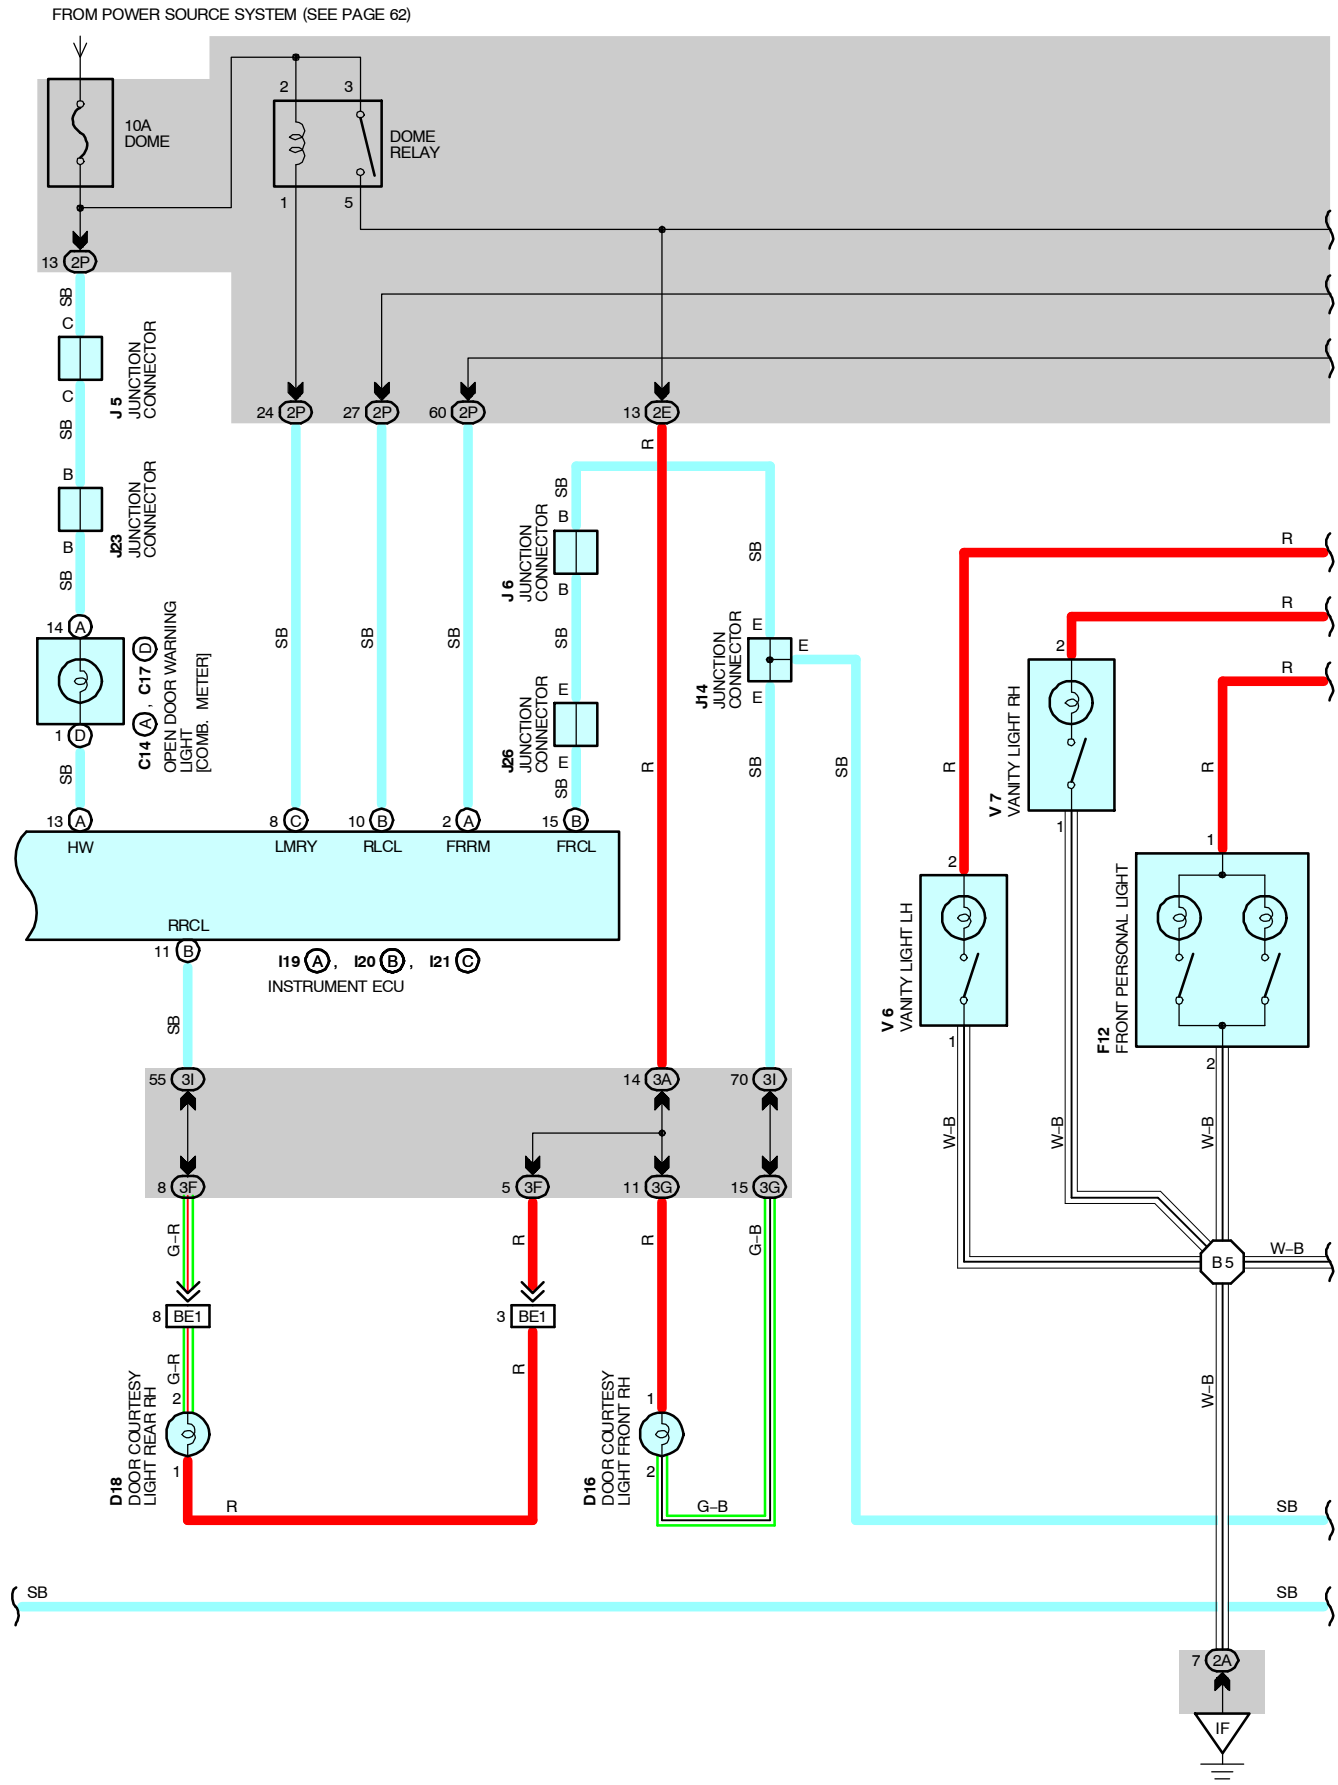

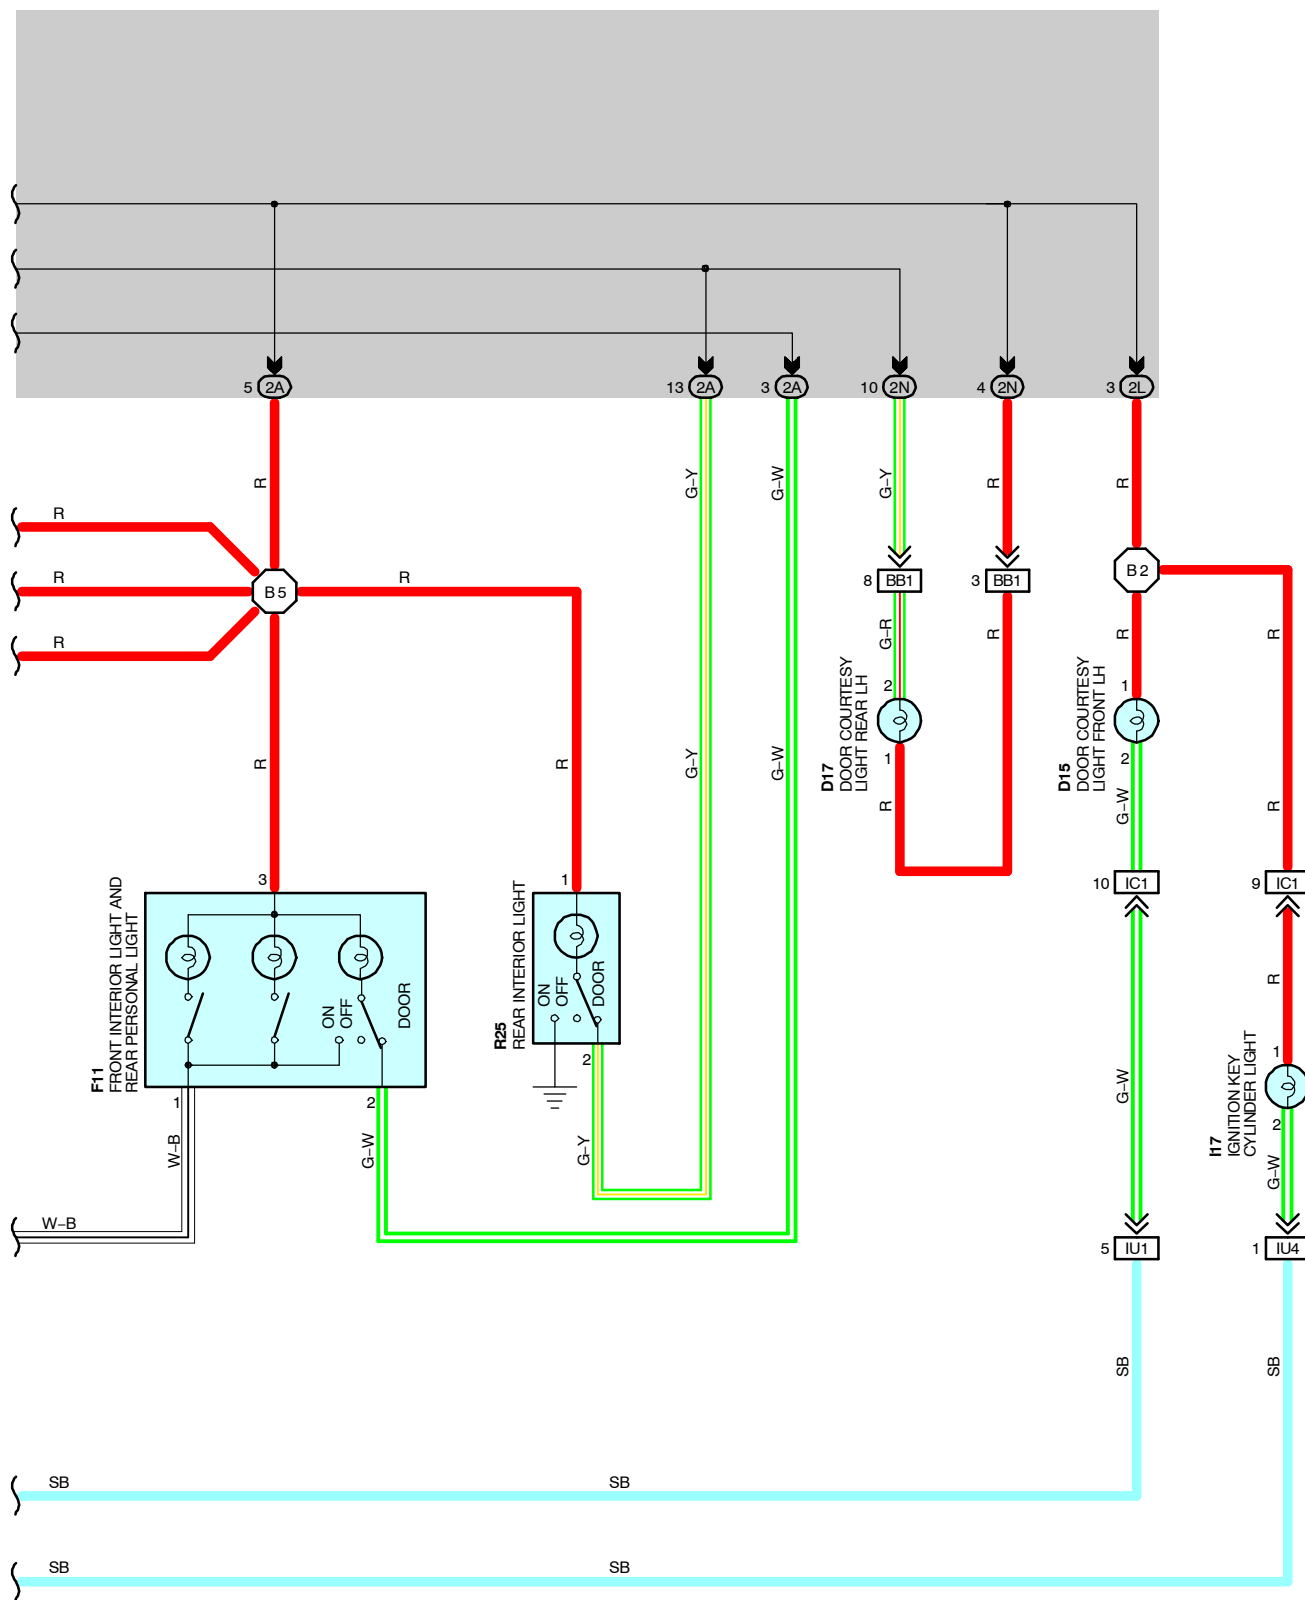

INTERIOR LIGHT

SYSTEM OUTLINE

NORMAL OPERATION

- * When the front door LH or RH is opened, the door courtesy light front LH, RH and open door warning light is turned on. When the front door LH and RH are closed, the door courtesy light front LH, RH is turned off.
- * When the rear door LH, RH or the back door is opened, door courtesy light rear LH, RH, rear interior light and the open door warning light is turned on. When the rear door LH, RH and back door are closed, the door courtesy light rear LH, RH is turned off.
- * When all the doors are closed, the open door warning light is turned off.

TURN OFF FUNCTION

When the ignition SW is turned off and there is no change in the door courtesy SW for approx. **30** minutes, the DOME relay is turned off. the DOME relay is turned on again when any of the following conditions are met:

- * Ignition SW is turned from **OFF** position to **ACC** or **ON** position
- * Change to any door courtesy SW
- * Driver or front passenger door is unlocked by the key or transmitter

IMMEDIATE TURN OFF FUNCTION AT DOOR LOCK

When all the doors are closed, and the driver or front passenger door is locked by the key or transmitter, the DOME relay is turned off, after approx. **80** seconds. However, when the illuminated entry system is operating, the DOME relay is turned off after the operation is completed. The DOME relay is turned on again when any of the following conditions are met:

- * Ignition SW is turned from **OFF** position to **ACC** or **ON** position
- * Change to any door courtesy SW
- * Driver or front passenger door is unlocked by the key or transmitter

ILLUMINATED ENTRY SYSTEM

- * When any door is opened, each light is turned on.
- * The light remains on for approx. **15** seconds after all doors are closed, and fades out.
- * With the ignition SW at **ACC** or **ON** position, and any door open, when all doors are closed, each light fades out immediately.
- * With the ignition SW at **ACC** or **ON** position, during timer lighting, each light fades out immediately.
- * When the doors are locked during timer lighting, each light fades out immediately.
- * The lights include the front interior light, ignition key cylinder light and front door courtesy light LH, RH.

SERVICE HINTS

D19, D20, D21, D22 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

1-GROUND : Always approx. **12** volts

B2 BACK DOOR COURTESY SW

1-2 : Closed with door open

B2 BACK DOOR COURTESY SW

- 1-GROUND : Always approx. **12** volts
- 2-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 1-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B2	40	D26	40	J17	39
B3	40	D27	40	J20	39
C14	A 38	F11	40	J23	39
C17	D 38	F12	40	J24	39
D15	40	I17	38	J26	39
D16	40	I19	A 38	J32	40
D17	40	I20	B 38	J33	40
D18	40	I21	C 38	J34	40
D19	40	J3	39	R25	41
D20	40	J4	39	V6	41
D21	40	J5	39	V7	41
D22	40	J6	39	W4	39
D23	40	J14	39		
D24	40	J15	39		

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	24	Roof Wire and Cowl Side J/B LH (Left Kick Panel)
2E	24	Engine Room No. 2 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	24	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M		
2N	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2O		
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	30	Engine Room No. 2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	30	Floor No. 2 Wire and Cowl Side J/B RH (Right Kick Panel)
3F		
3G	30	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	46	Front Door LH Wire and Dash Wire (Left Kick Panel)
IU1	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
BB1	54	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BE1	54	Rear Door RH Wire and Floor Wire No. 2 Wire (Right Side of Center Pillar)
BF3	54	Floor No. 3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BH1	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BJ1	56	Pillar No. 1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BK1	56	Pillar No. 1 Wire and Back Door Upper Wire (Left Side of Back Door)
BN1	56	Back Door Lower Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)
BO3	56	Floor No. 2 Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)

 : GROUND POINTS

Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH
IH	46	Set Bolt of Cowl Side J/B RH
II		
BK	54	Front Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel

 : SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	56	Front Door LH Wire	B5	56	Roof Wire
B2					

INTERIOR LIGHT


B2



 
B3



C14 (A)
GRAY

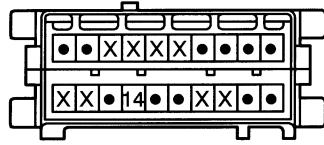

C17 (D)

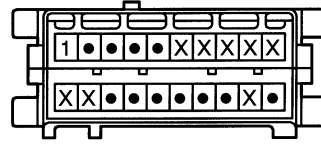

D15, D16
GRAY



D17, D18
GRAY



D19, D20



 
D21, D22



D23, D24
GRAY




D26, D27
BLACK



F11



 
F12




I17




I19 (A)

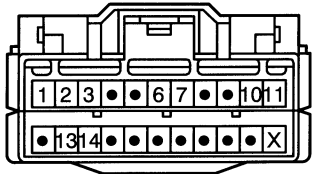


I20 (B)

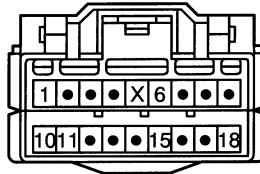

I21 (C)
BLUE

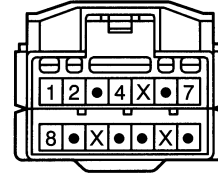


J3
GRAY

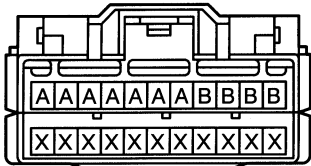


(Hint : See Page 7)

J4

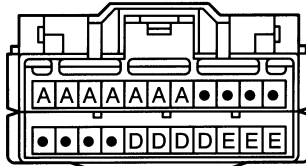


(Hint : See Page 7)

J5
GRAY

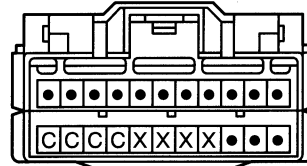


(Hint : See Page 7)

J6
BLUE

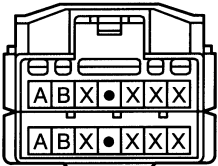


(Hint : See Page 7)

J14

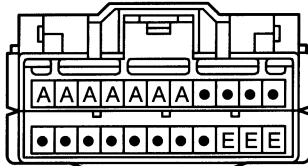


(Hint : See Page 7)

J15
GRAY

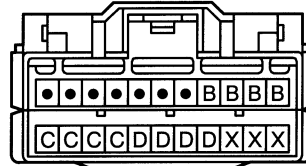


(Hint : See Page 7)

J17

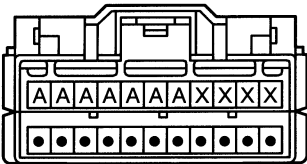


(Hint : See Page 7)

J20
GRAY

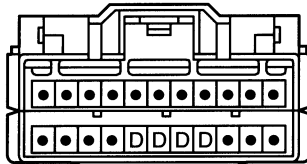


(Hint : See Page 7)

J23
BLUE

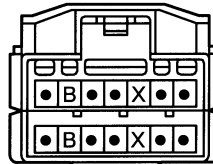


(Hint : See Page 7)

J24
GRAY

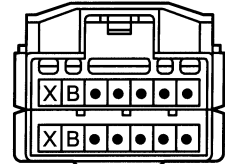


(Hint : See Page 7)

J26

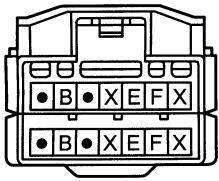


(Hint : See Page 7)

 J32




(Hint : See Page 7)

 J33
BLUE



(Hint : See Page 7)

 J34
BLUE



(Hint : See Page 7)

R25



V6, V7



W4

