




ILLUMINATION

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

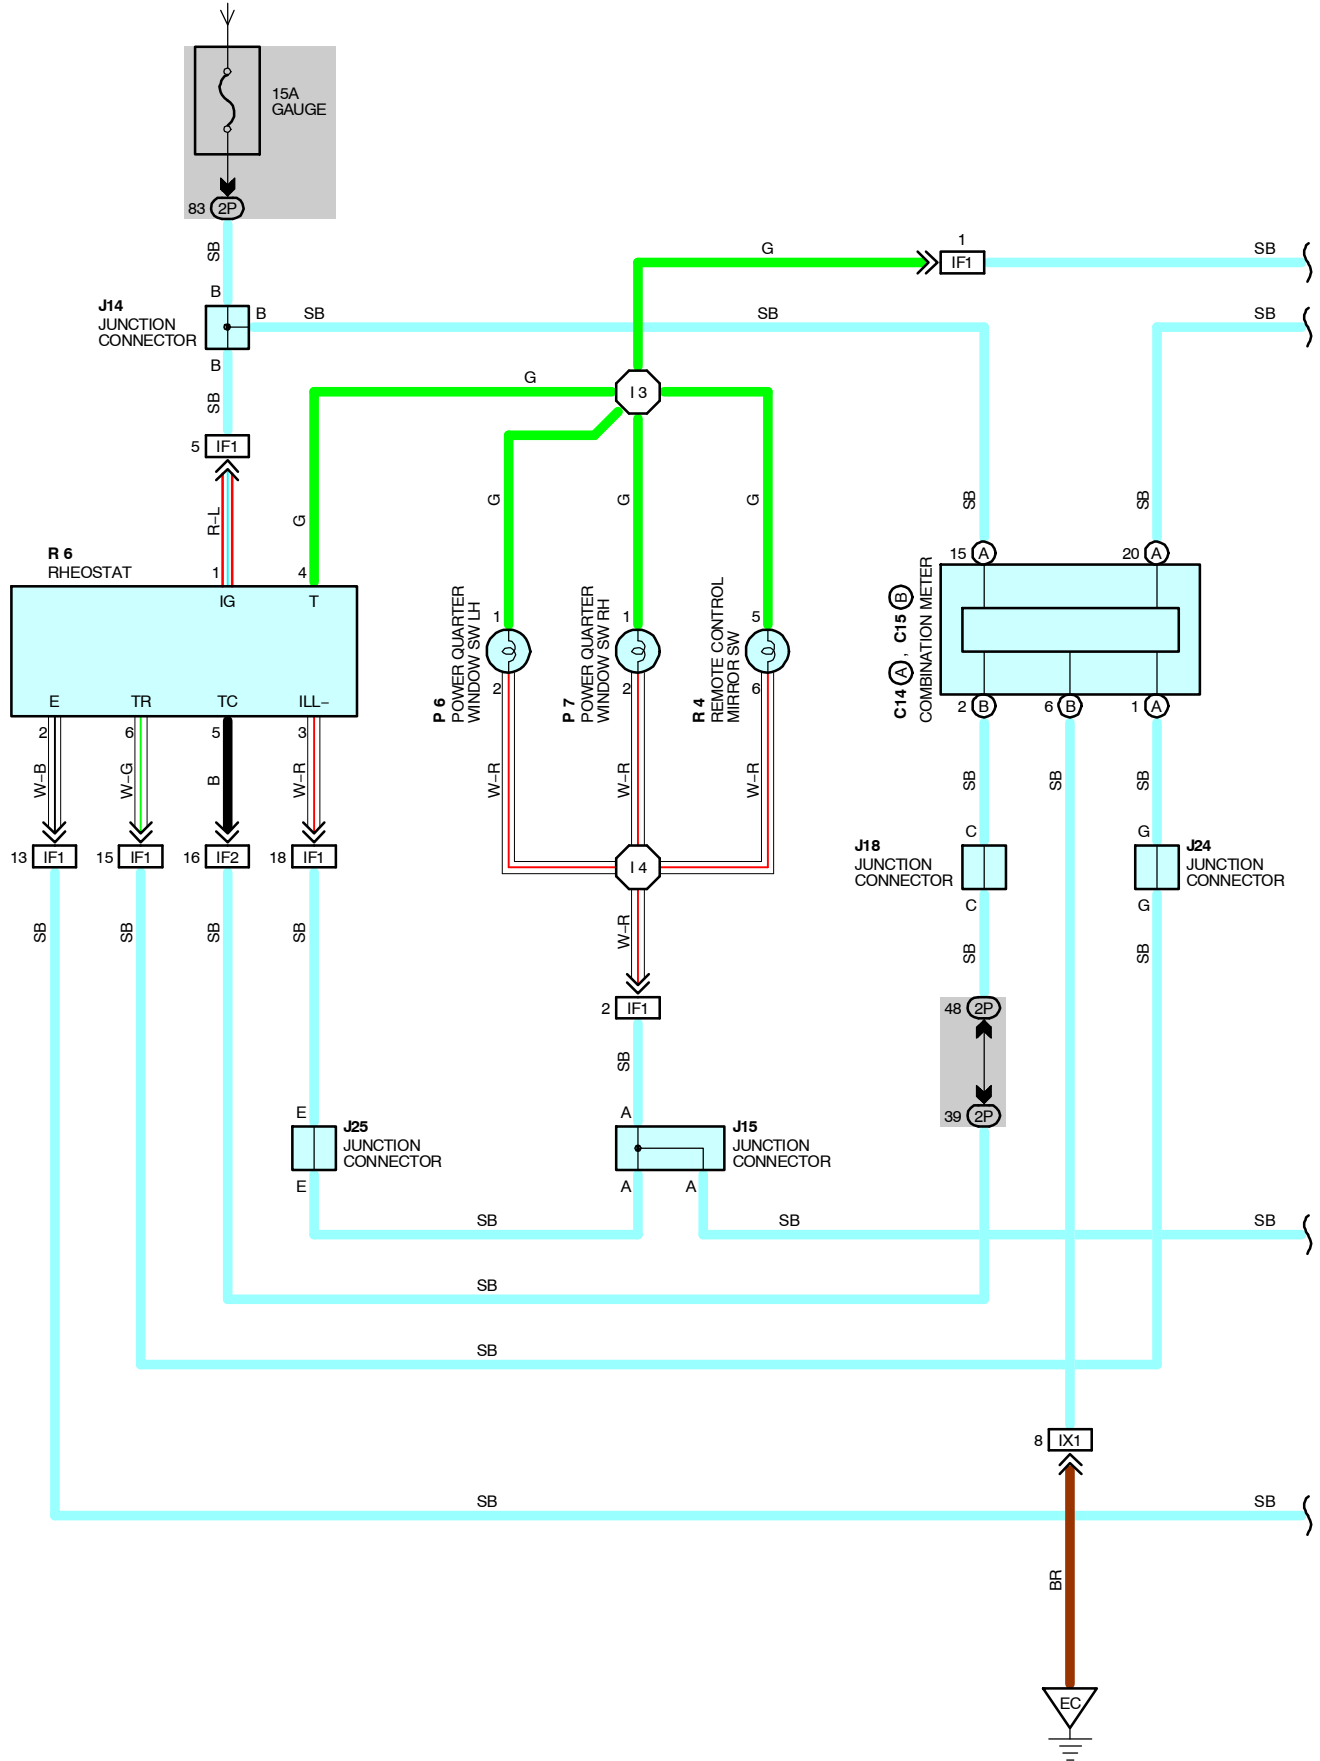

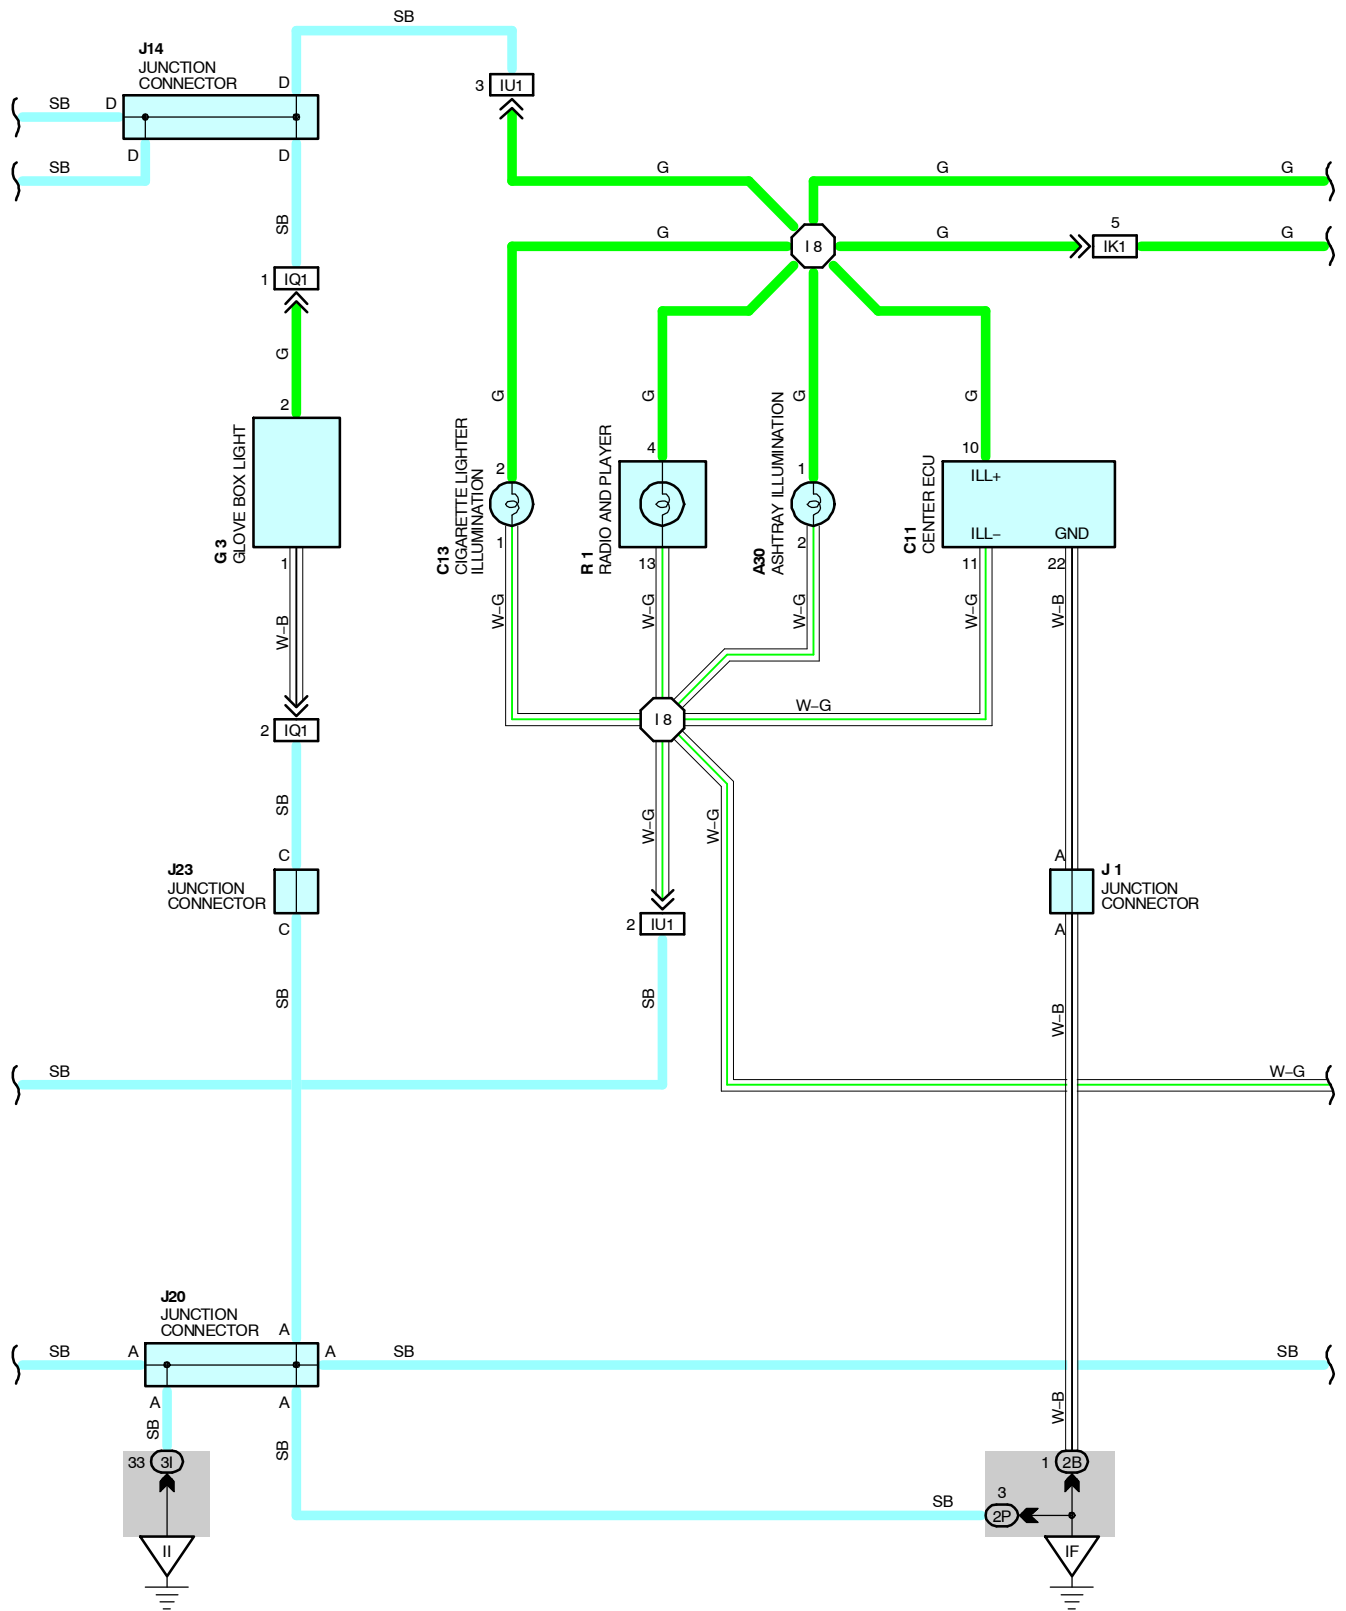

ILLUMINATION

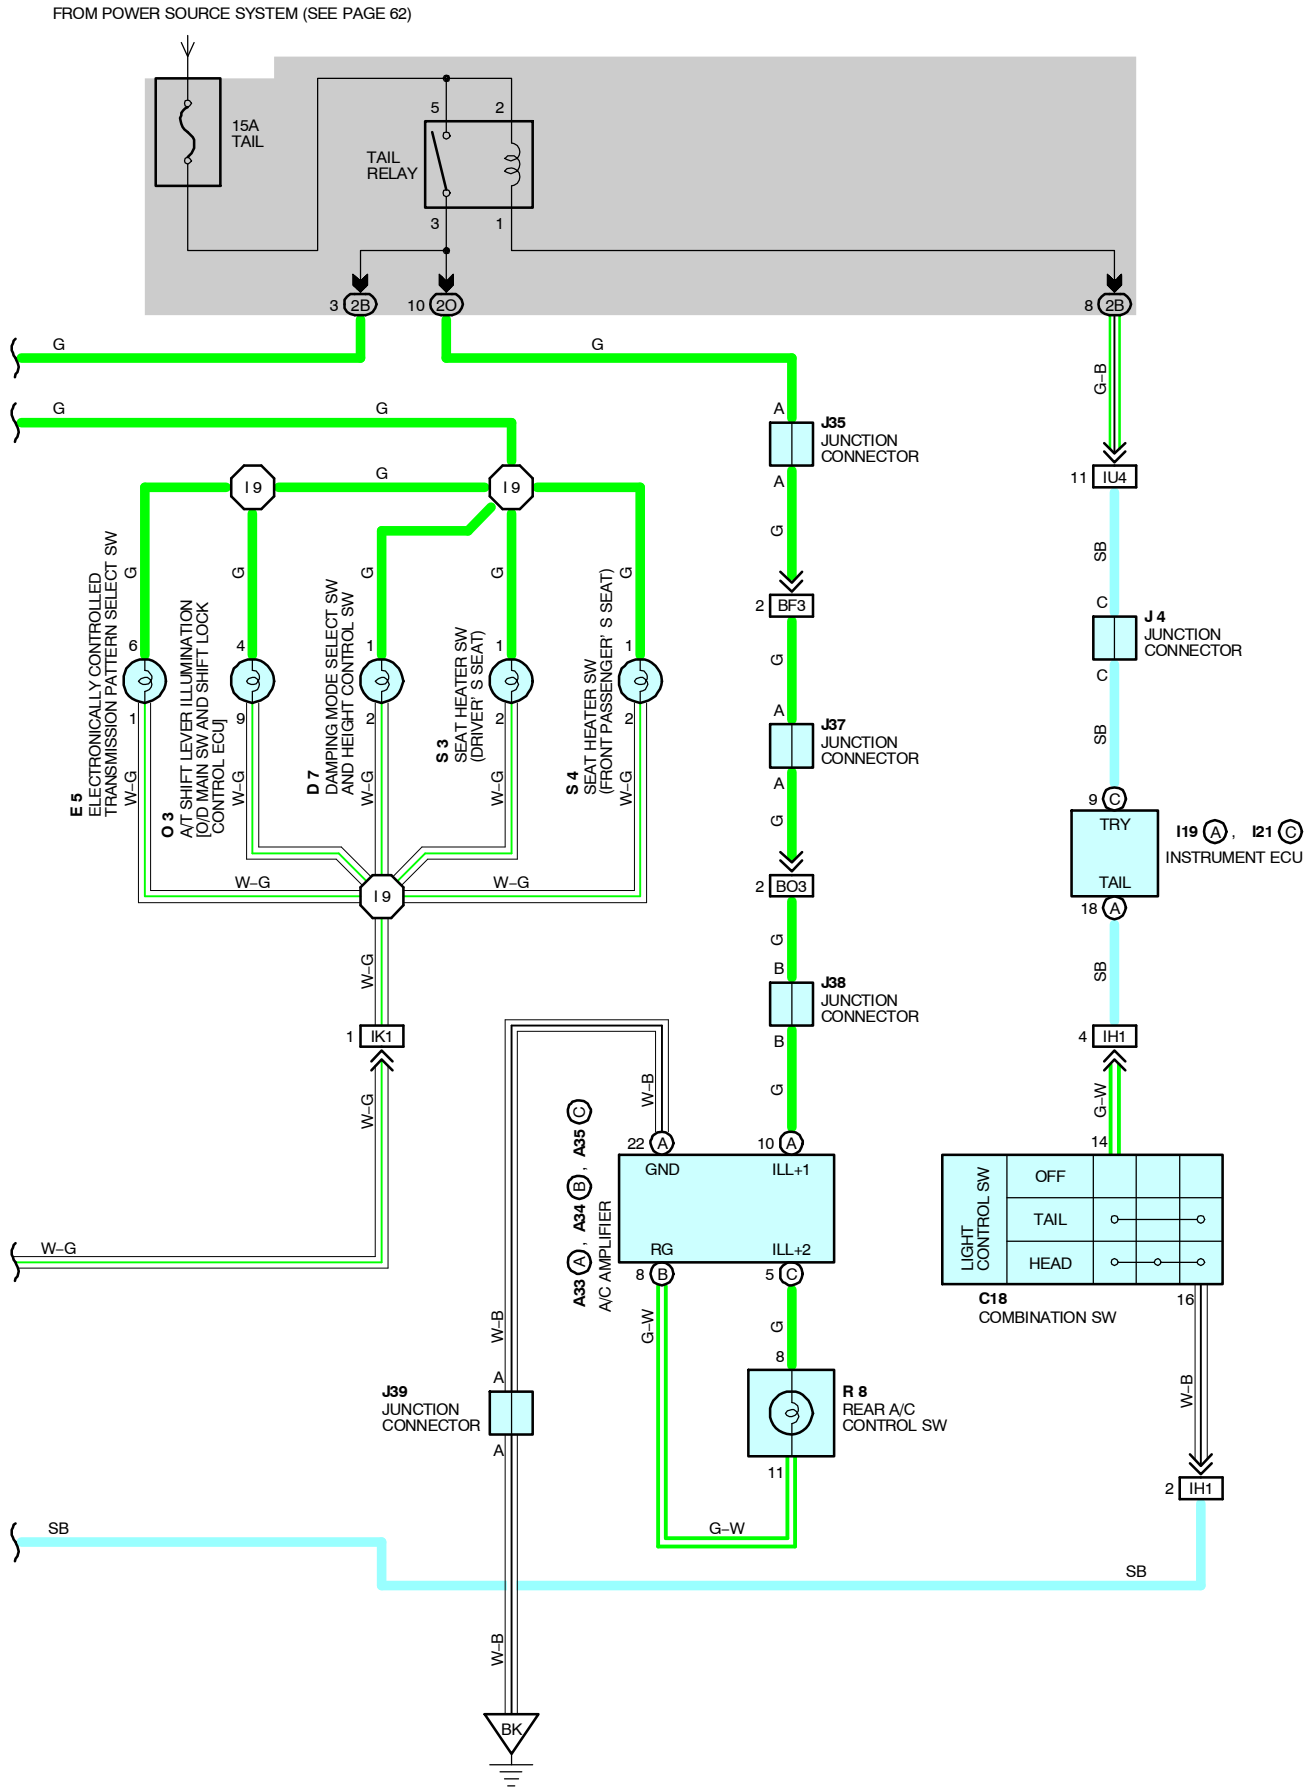

SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

C18 COMBINATION SW

14-16 : Closed with light control SW at **TAIL** or **HEAD** position



: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A30	38	I19	A 38	J37	40
A33	A 40	I21	C 38	J38	40
A34	B 40	J1	39	J39	40
A35	C 40	J4	39	O3	39
C11	38	J14	39	P6	39
C13	38	J15	39	P7	39
C14	A 38	J18	39	R1	39
C15	B 38	J20	39	R4	39
C18	38	J23	39	R6	39
D7	38	J24	39	R8	41
E5	38	J25	39	S3	39
G3	38	J35	40	S4	39



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	46	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IK1	48	Console Box Wire and Dash Wire (Left Side of Front Console)
IQ1	50	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IU1	50	Instrument Panel Integration Wire and and Dash Wire (Behind the Glove Box)
IU4		
IX1	52	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BF3	54	Floor No. 3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BO3	56	Floor No. 2 Wire And Floor No. 3 Wire (Right Side of Rear Floor Crossmember)



: GROUND POINTS

Code	See Page	Ground Points Location
EC	44	Rear Bank of Right Cylinder Head
IF	46	Set Bolt of Cowl Side J/B LH
II	46	Set Bolt of Cowl Side J/B RH
BK	54	Front Side Under the Front Passenger's Seat




: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	48	Instrument Panel Wire	I8	48	Dash Wire
I4			I9	48	Console Box Wire


A30



 
A33 (A)




A34 (B)

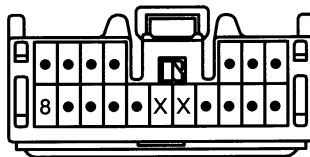

A35 (C)

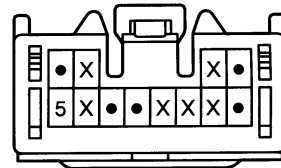


C11

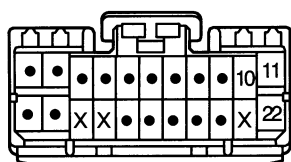


C13
GRAY




C14 (A)
GRAY

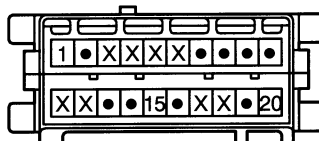


C15 (B)

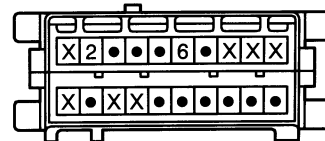


C18

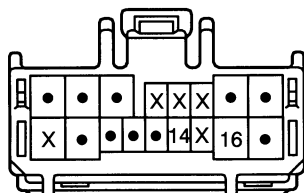

D7
BLACK

 


E5

 


G3




I19 (A)

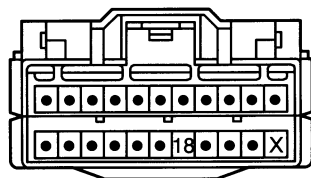

I21 (C)
BLUE

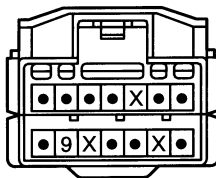


J1

 


(Hint : See Page 7)

J4

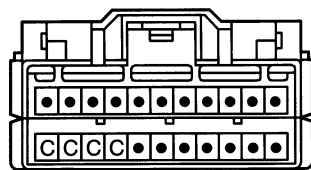


(Hint : See Page 7)

J14

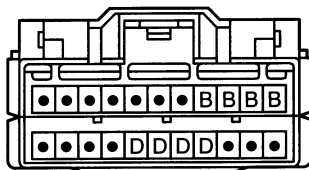


(Hint : See Page 7)

J15
GRAY

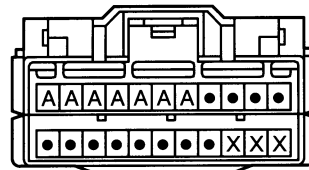


(Hint : See Page 7)

J18
GRAY

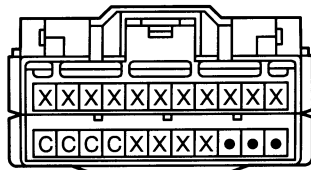


(Hint : See Page 7)

J20
GRAY

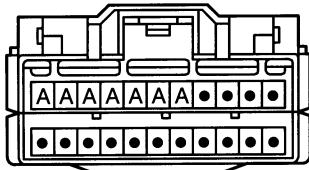


(Hint : See Page 7)

J23
BLUE

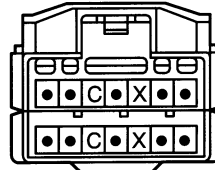


(Hint : See Page 7)

J24
GRAY

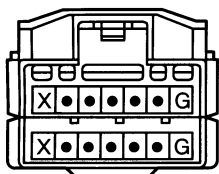


(Hint : See Page 7)

J25

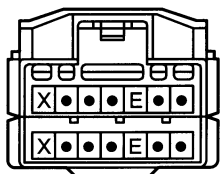


(Hint : See Page 7)

 J35
GREEN




(Hint : See Page 7)

 J37
GREEN




(Hint : See Page 7)

 J38
BLUE




(Hint : See Page 7)

 J39
BLUE




(Hint : See Page 7)


03

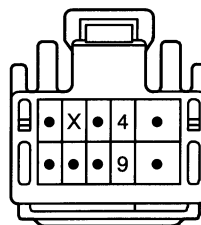


P6
BLACK

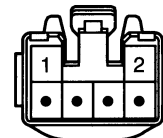


P7
BLACK

 


R1

 


R4
BLACK

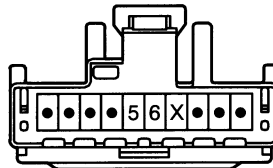


R6
BLUE

 

R8

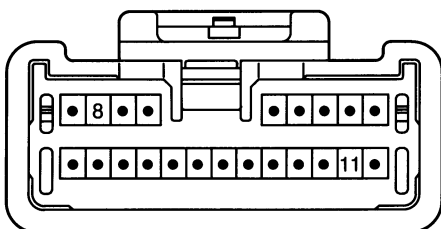

S3
BLACK

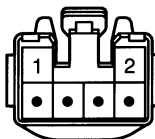

S4

