



RADIO AND PLAYER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

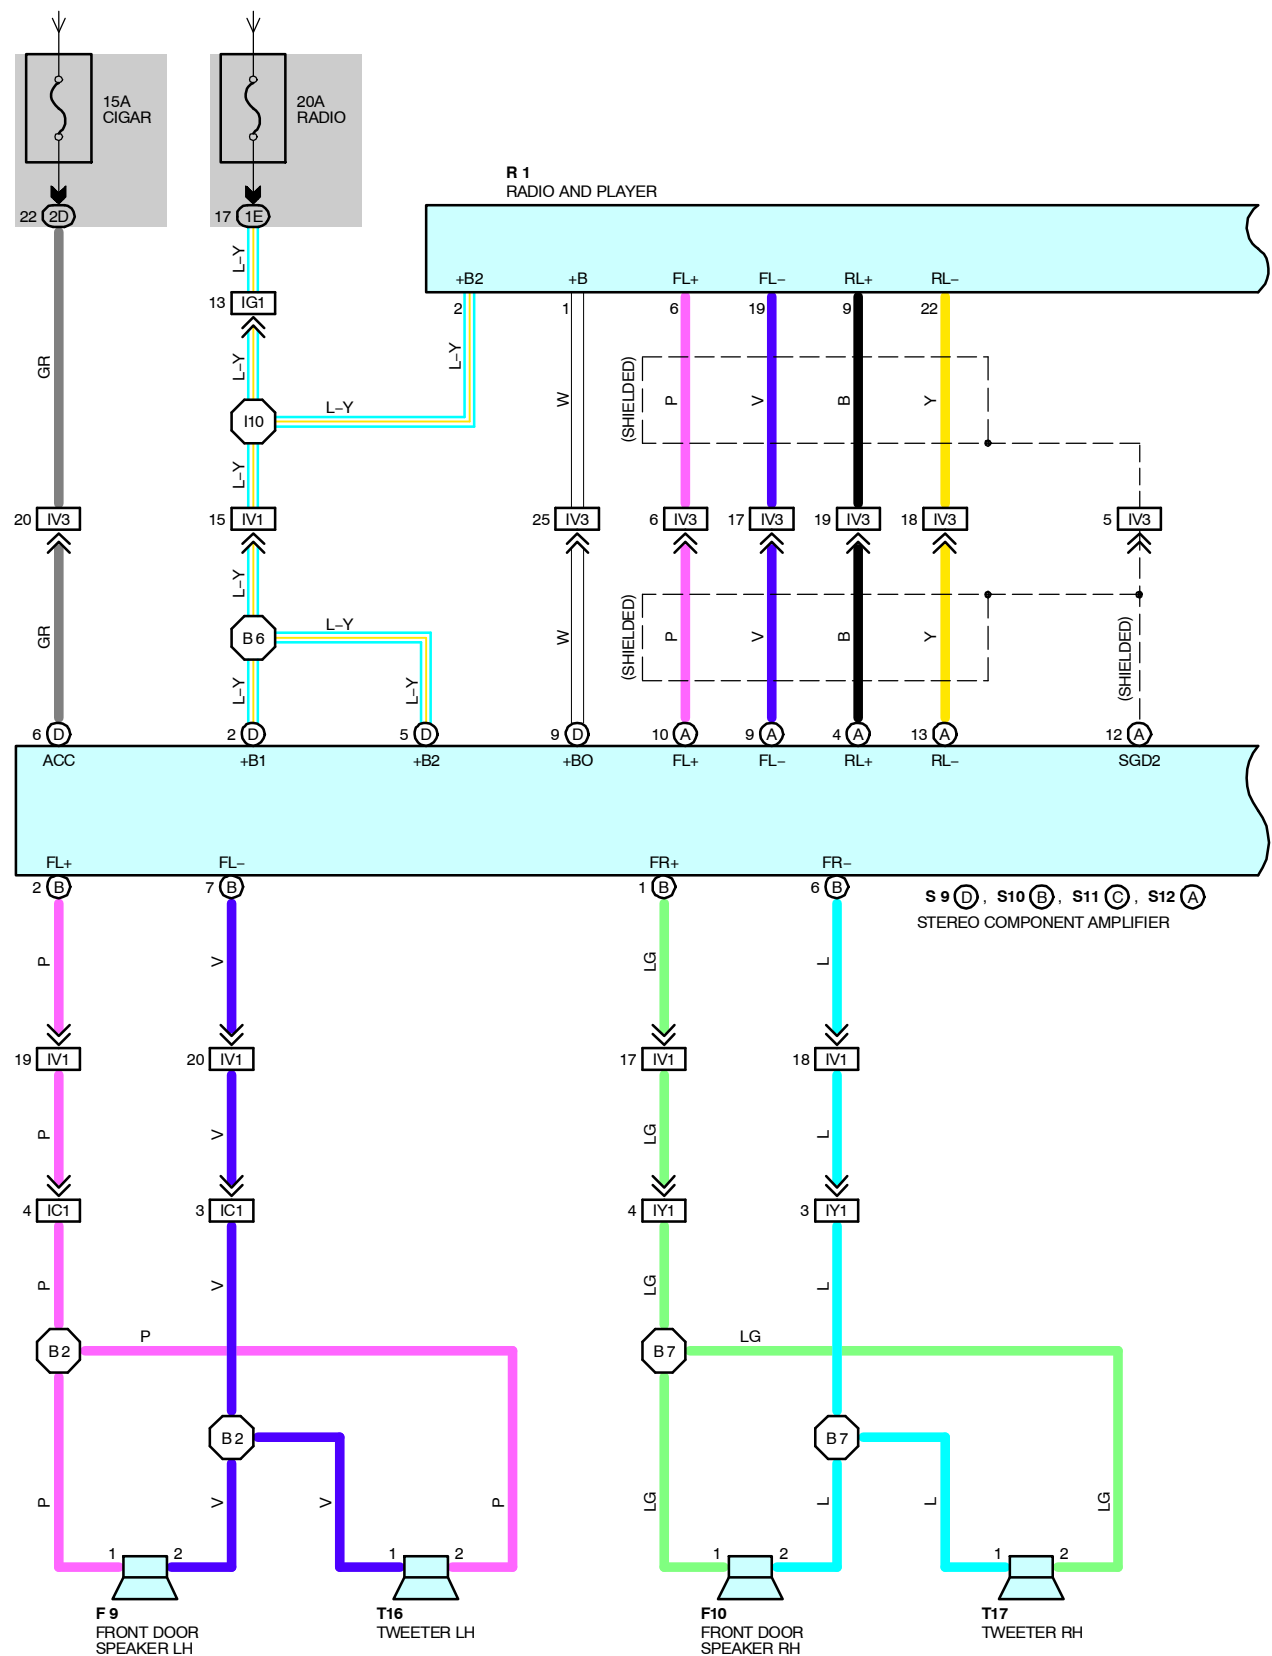

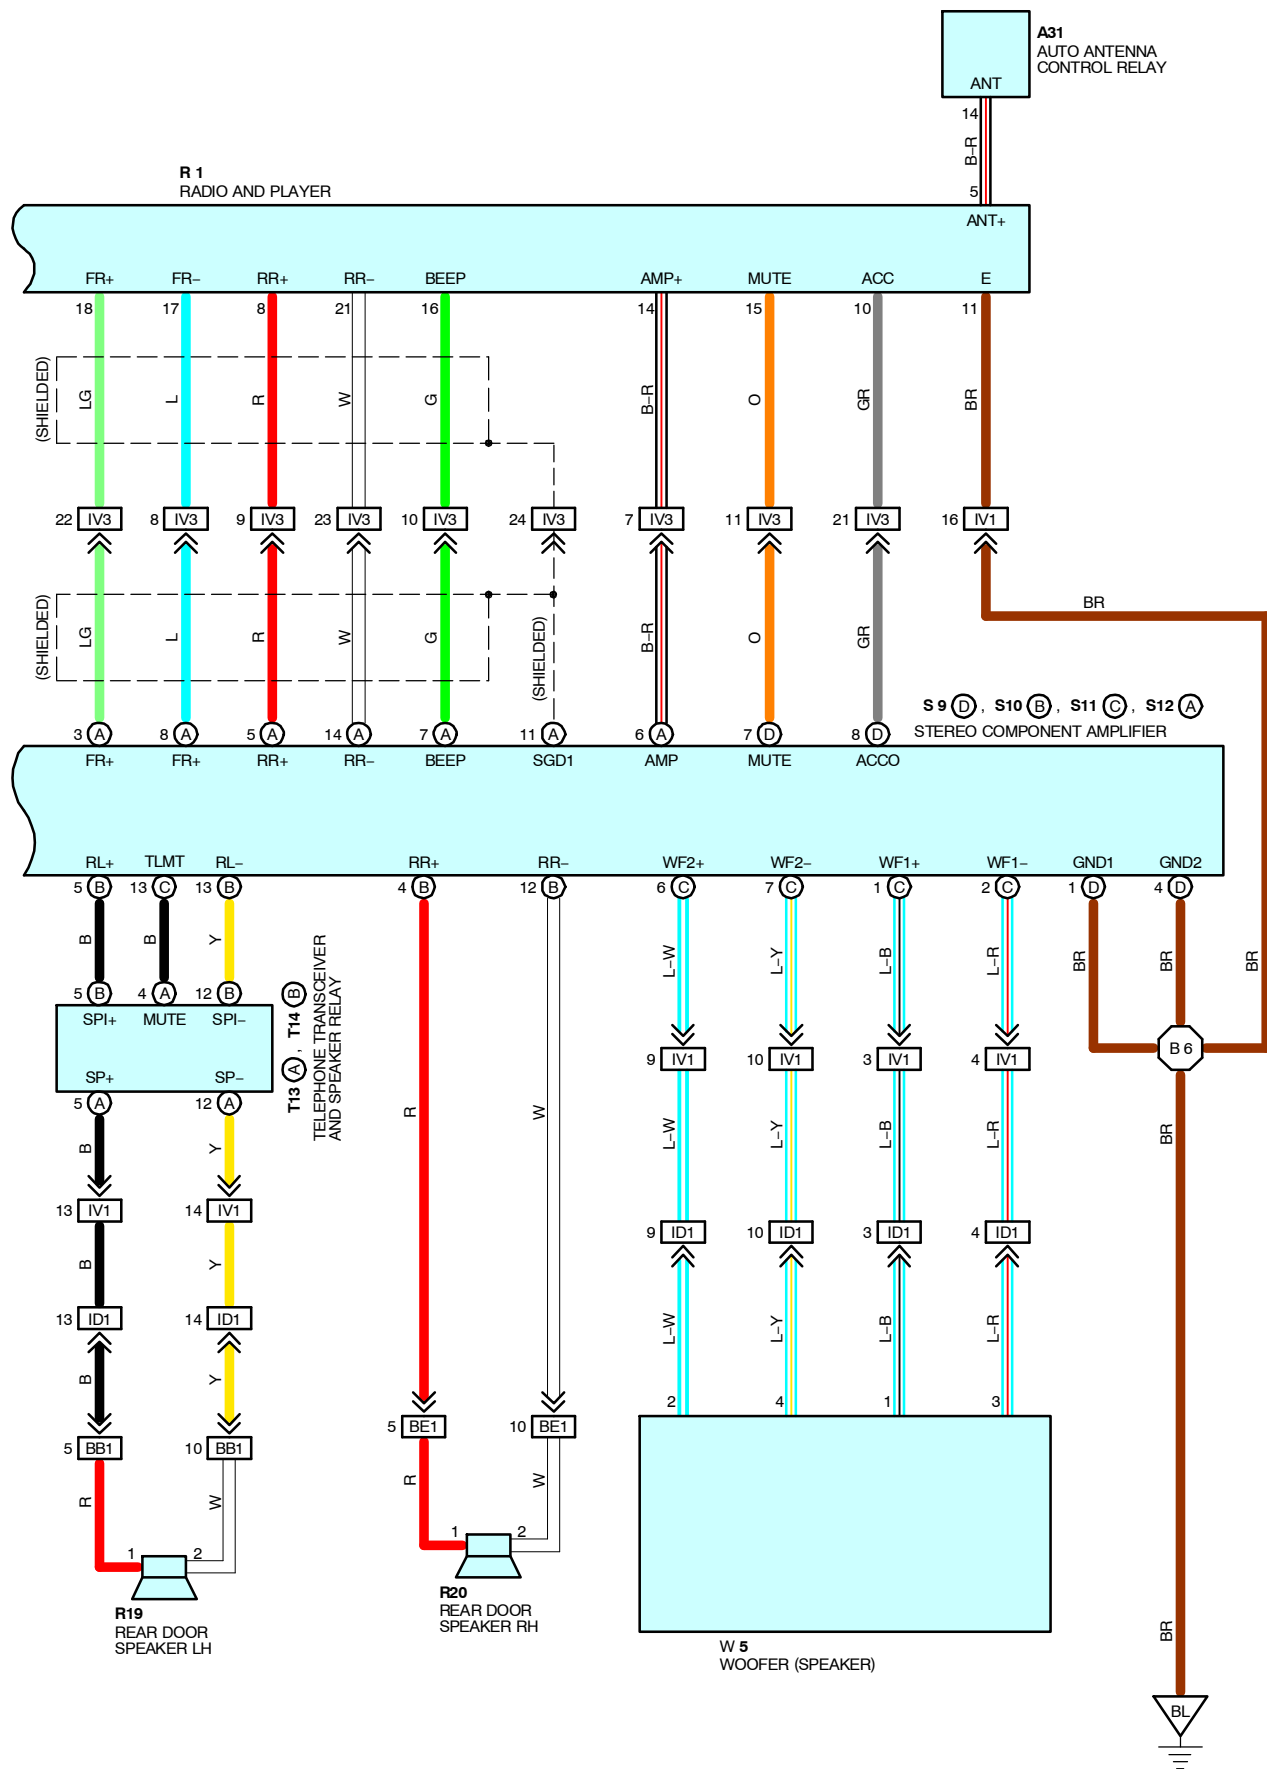

RADIO AND PLAYER

SERVICE HINTS

R1 RADIO AND PLAYER

2-GROUND : Always approx. **12** volts

11-GROUND : Always continuity

S9 STEREO COMPONENT AMPLIFIER

6-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

2,5-GROUND : Always approx. **12** volts

1,4-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A31	38	R20	41	T13	A 41
F9	40	S9	D 41	T14	B 41
F10	40	S10	B 41	T16	41
R1	39	S11	C 41	T17	41
R19	41	S12	A 41	W5	41

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	21	Engine Room No. 2 Wire and Engine Room J/B (Engine Compartment Left)
2D	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	46	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID1	46	Dash Wire and Floor Wire (Left Kick Panel)
IG1	48	Engine Room No. 2 Wire and Dash Wire (Behind the Combination Meter)
IV1	52	Dash Wire and Floor No. 2 Wire (Behind the Glove Box)
IV3		
IY1	52	Front Door RH Wire and Dash Wire (Right Kick Panel)
BB1	54	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BE1	54	Rear Door RH Wire and Floor No. 2 Wire (Right Side of Center Pillar)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BL	54	Rear Side Under the Front Passenger's Seat

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I10	48	Dash Wire	B6	56	Floor No. 2 Wire
B2	56	Front Door LH Wire	B7	56	Front Door RH Wire

