




REMOTE CONTROL MIRROR

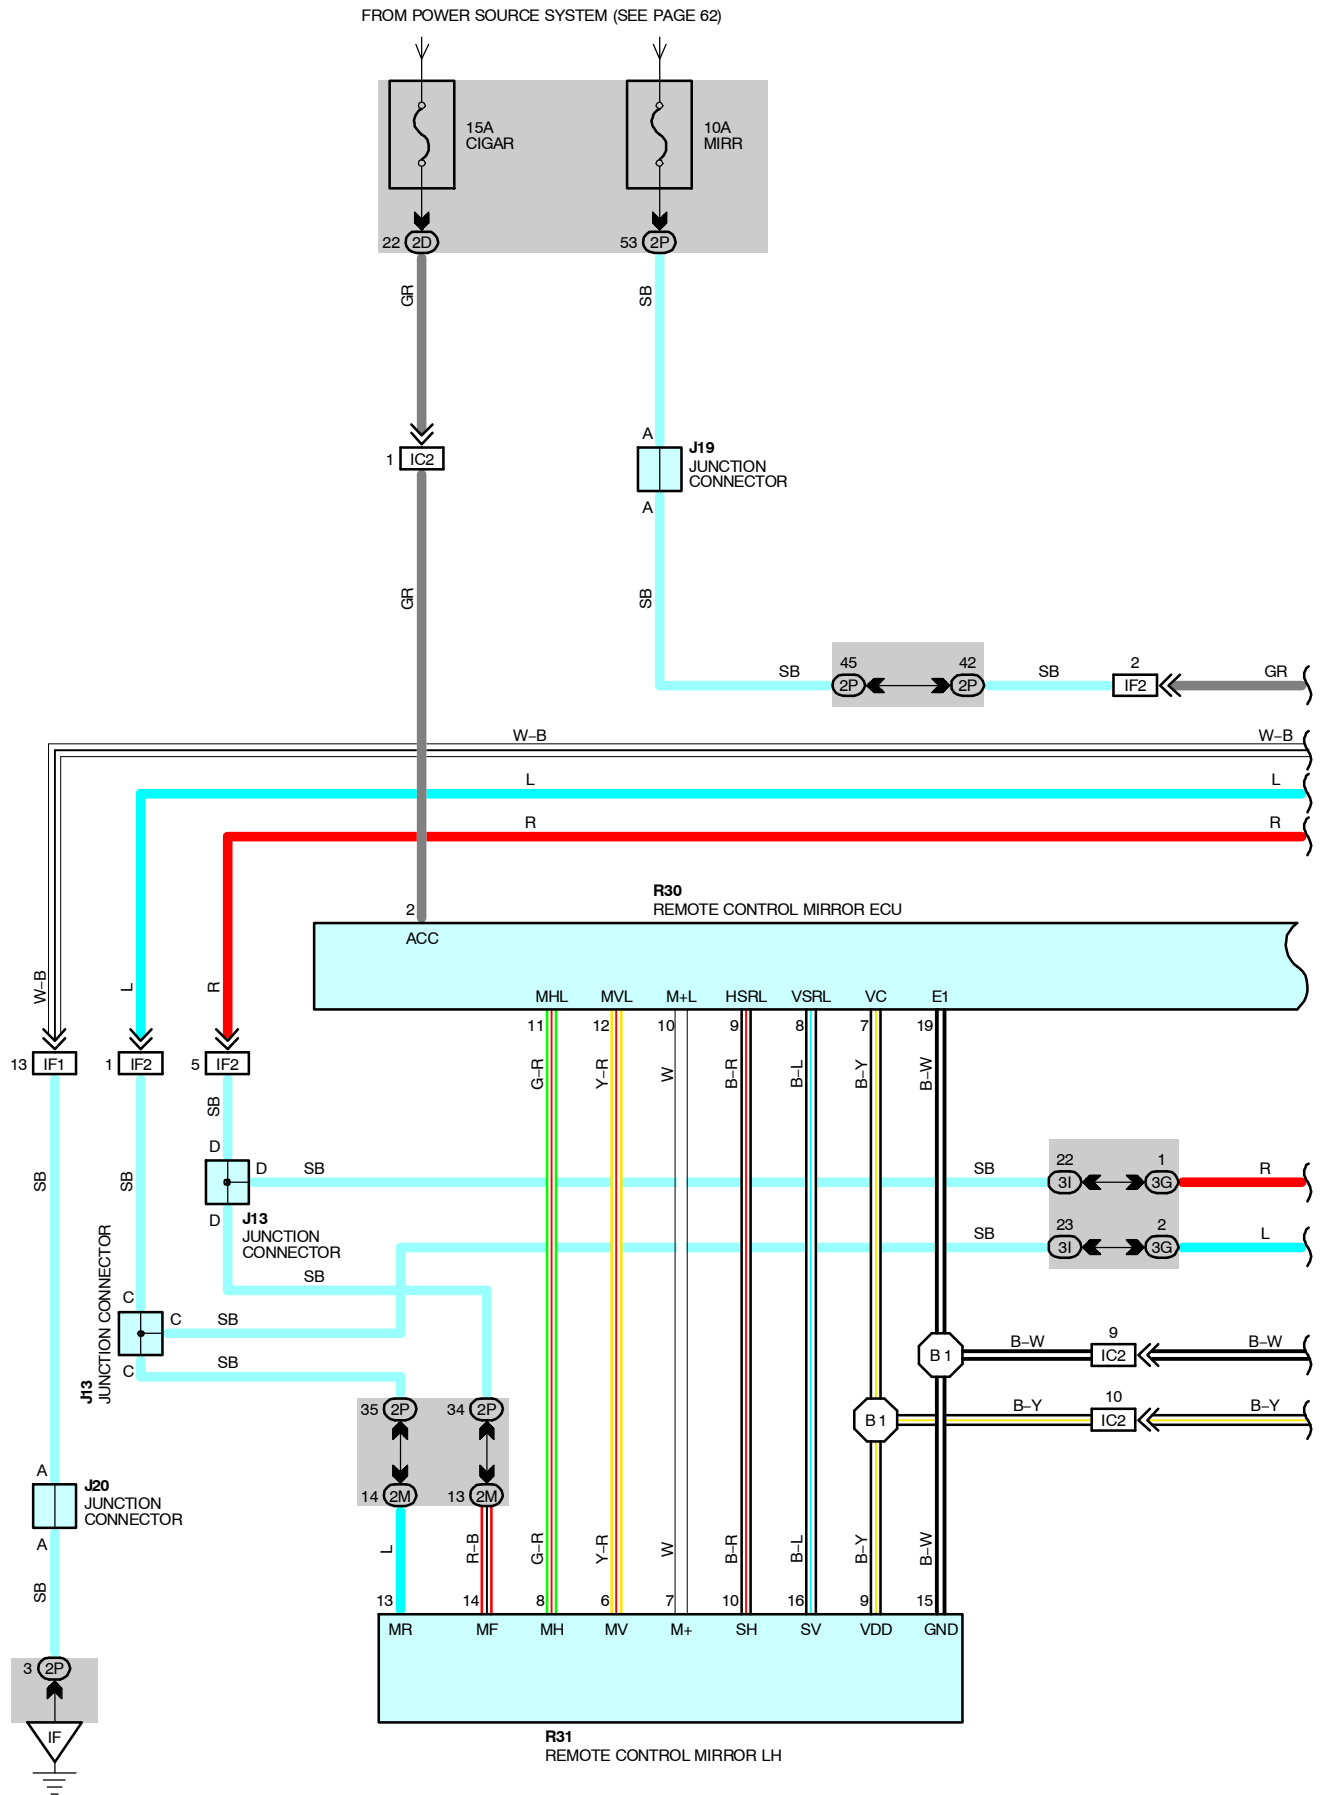

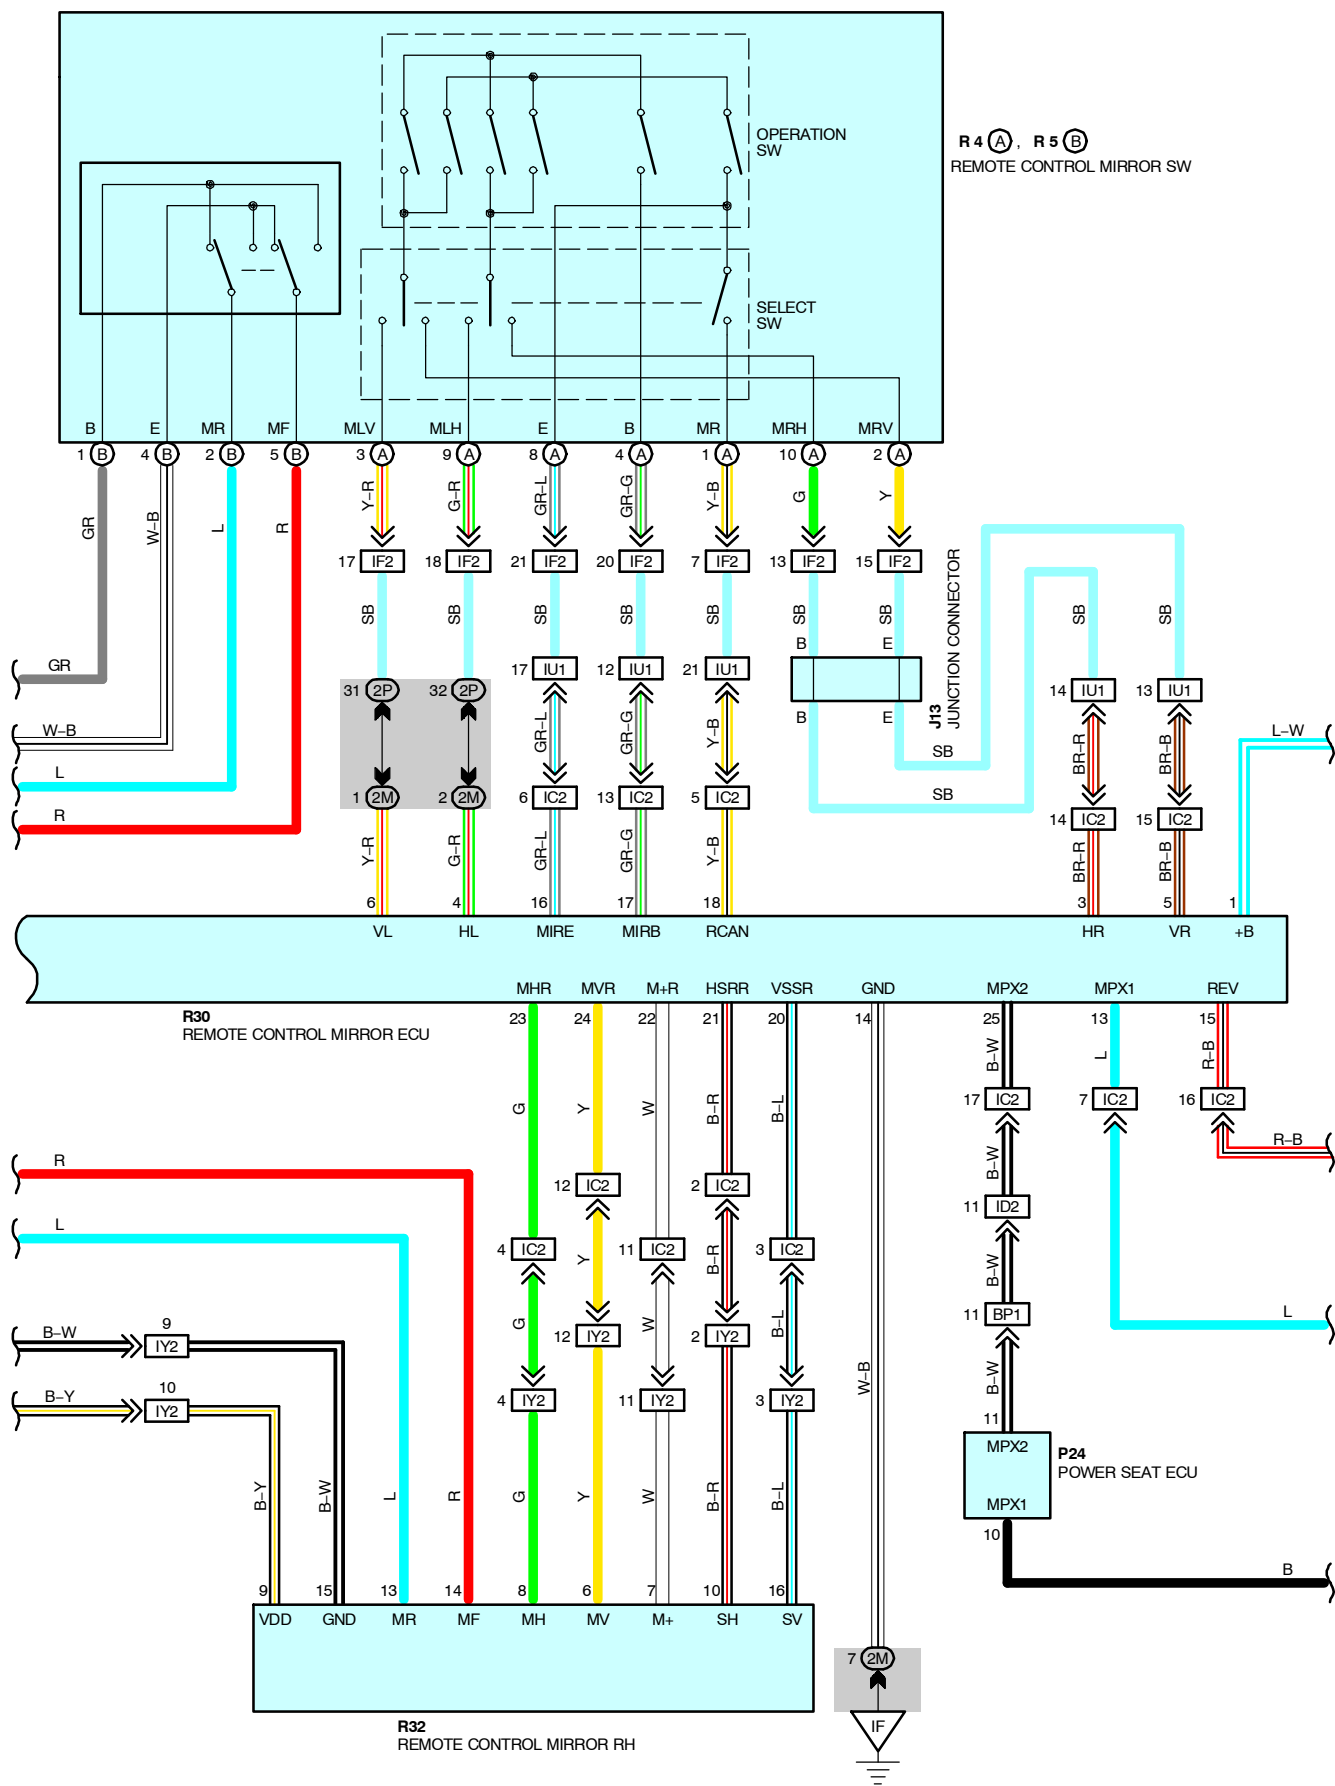

REMOTE CONTROL MIRROR

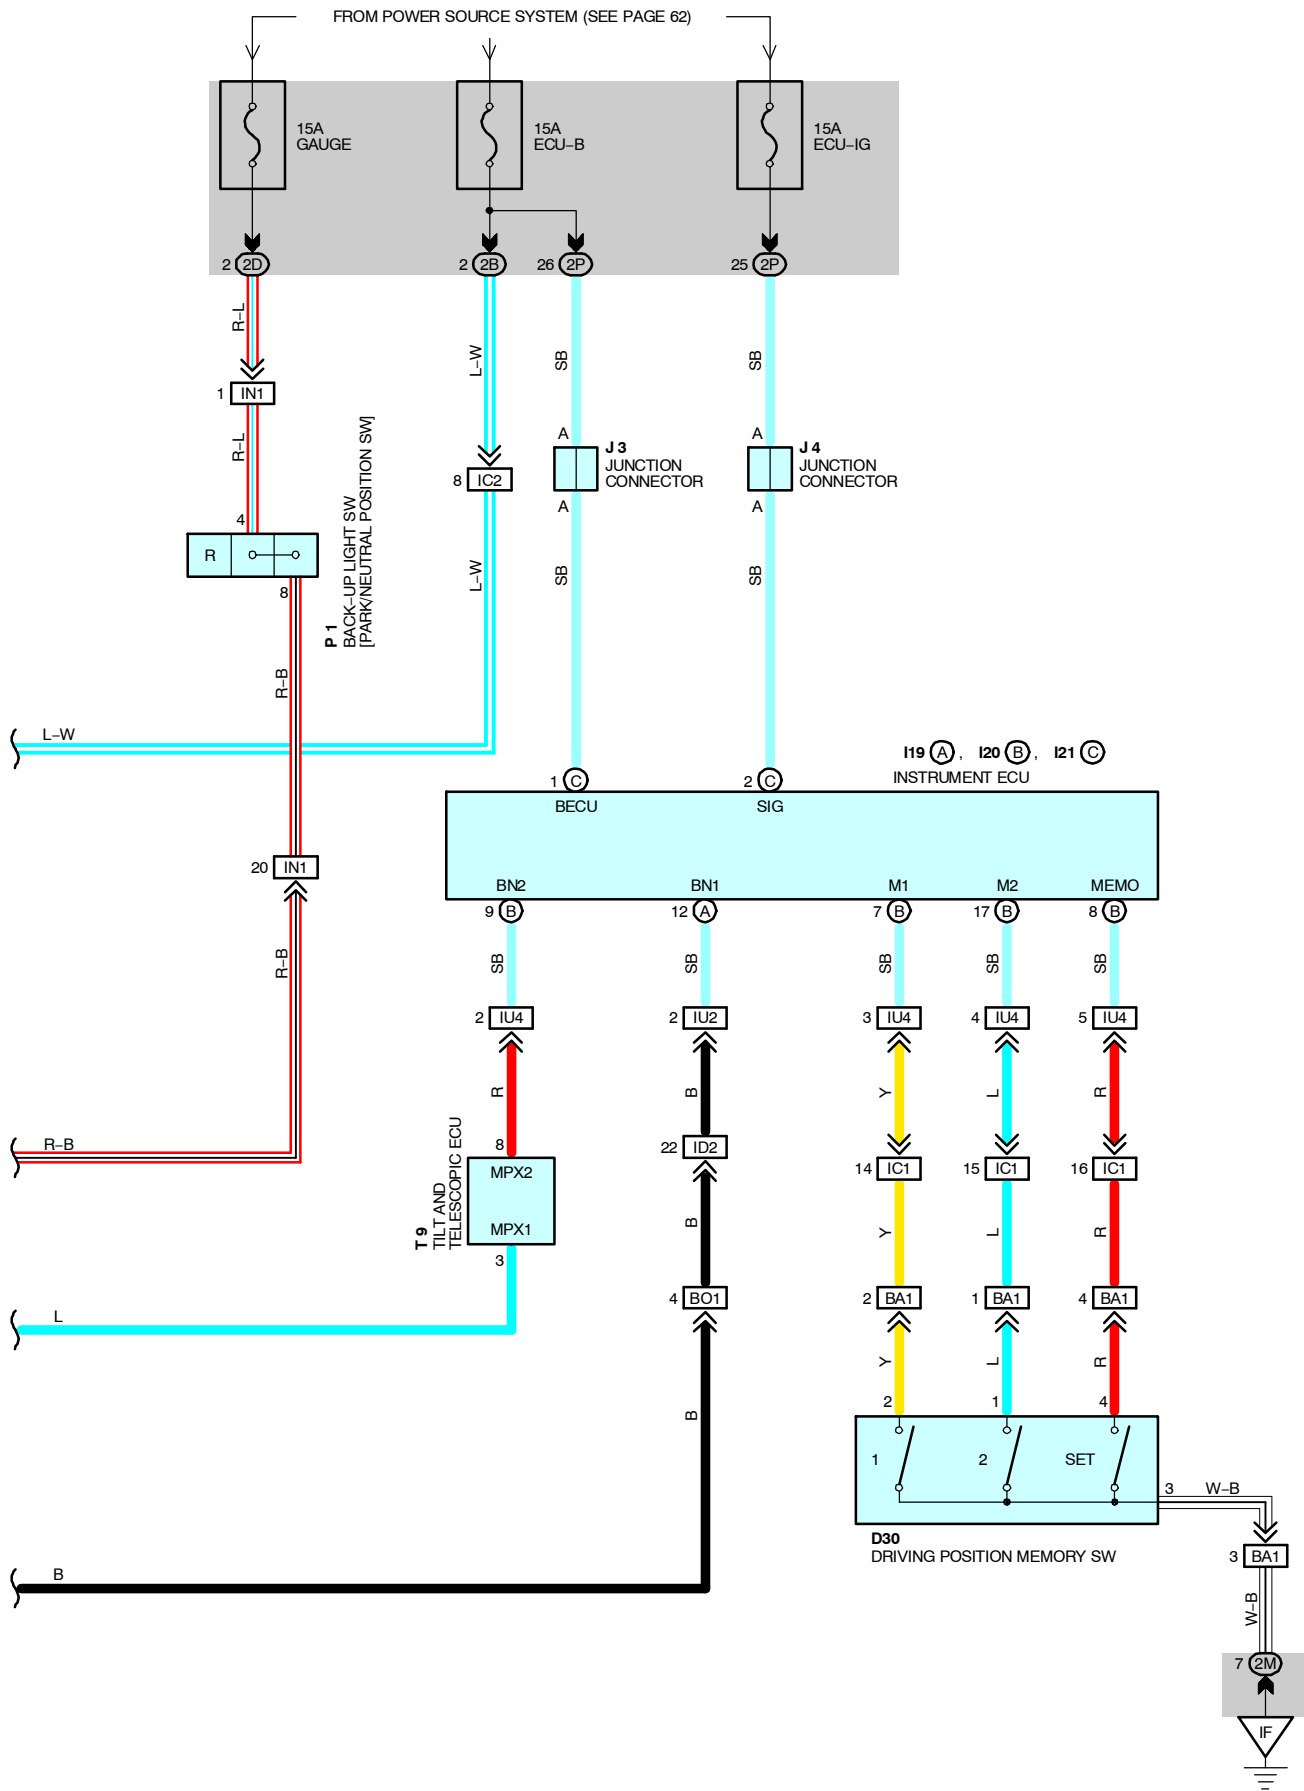

SYSTEM OUTLINE

When the ignition SW is turned on, the outer mirrors can be operated. When the remote control mirror SW is operated, a signal is input to the remote control mirror ECU, and the outer mirror can be adjusted to the desired position.

In this system, the position sensor detects the number of rotations of each motor (Movement amount of each mirror) and inputs it to the remote control mirror ECU. This makes it possible to store and recall the outer mirror position using the driving position memory SW. The outer mirror position is stored and recalled through communication control of the instrument ECU.

When the remote control mirror SW (Select SW) is moved to the left side from neutral position, while the ignition SW is on and the shift lever is in **R** position, the outer mirror LH, RH moves downward a little bit. In this case, it is not necessary to operate the remote control mirror SW for approx. **120** seconds.

SERVICE HINTS

R5 REMOTE CONTROL MIRROR SW

1-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

4-GROUND : Always continuity

R30 REMOTE CONTROL MIRROR ECU

2-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

14-GROUND : Always continuity



: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D30	40	J13	39	R5	39
I19	38	J19	39	R30	41
I20	38	J20	39	R31	41
I21	38	P1	37	R32	41
J3	39	P24	42	T9	39
J4	39	R4	39		



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2M	24	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3G	30	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	46	Front Door LH Wire and Dash Wire (Left Kick Panel)
IC2		
ID2	46	Dash Wire and Floor Wire (Left Kick Panel)
IF1	46	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
IN1	50	Engine Wire and Dash Wire (Behind the Glove Box)
IU1	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2		
IU4		
IY2	52	Front Door RH Wire and Dash Wire (Right Kick Panel)
BA1	54	Front Door LH Wire and Front Door LH Sub Wire (Front Door LH)
BO1	56	Floor No. 2 Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)
BP1	58	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)



: GROUND POINTS

Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH

REMOTE CONTROL MIRROR

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	56	Front Door LH Wire			

