


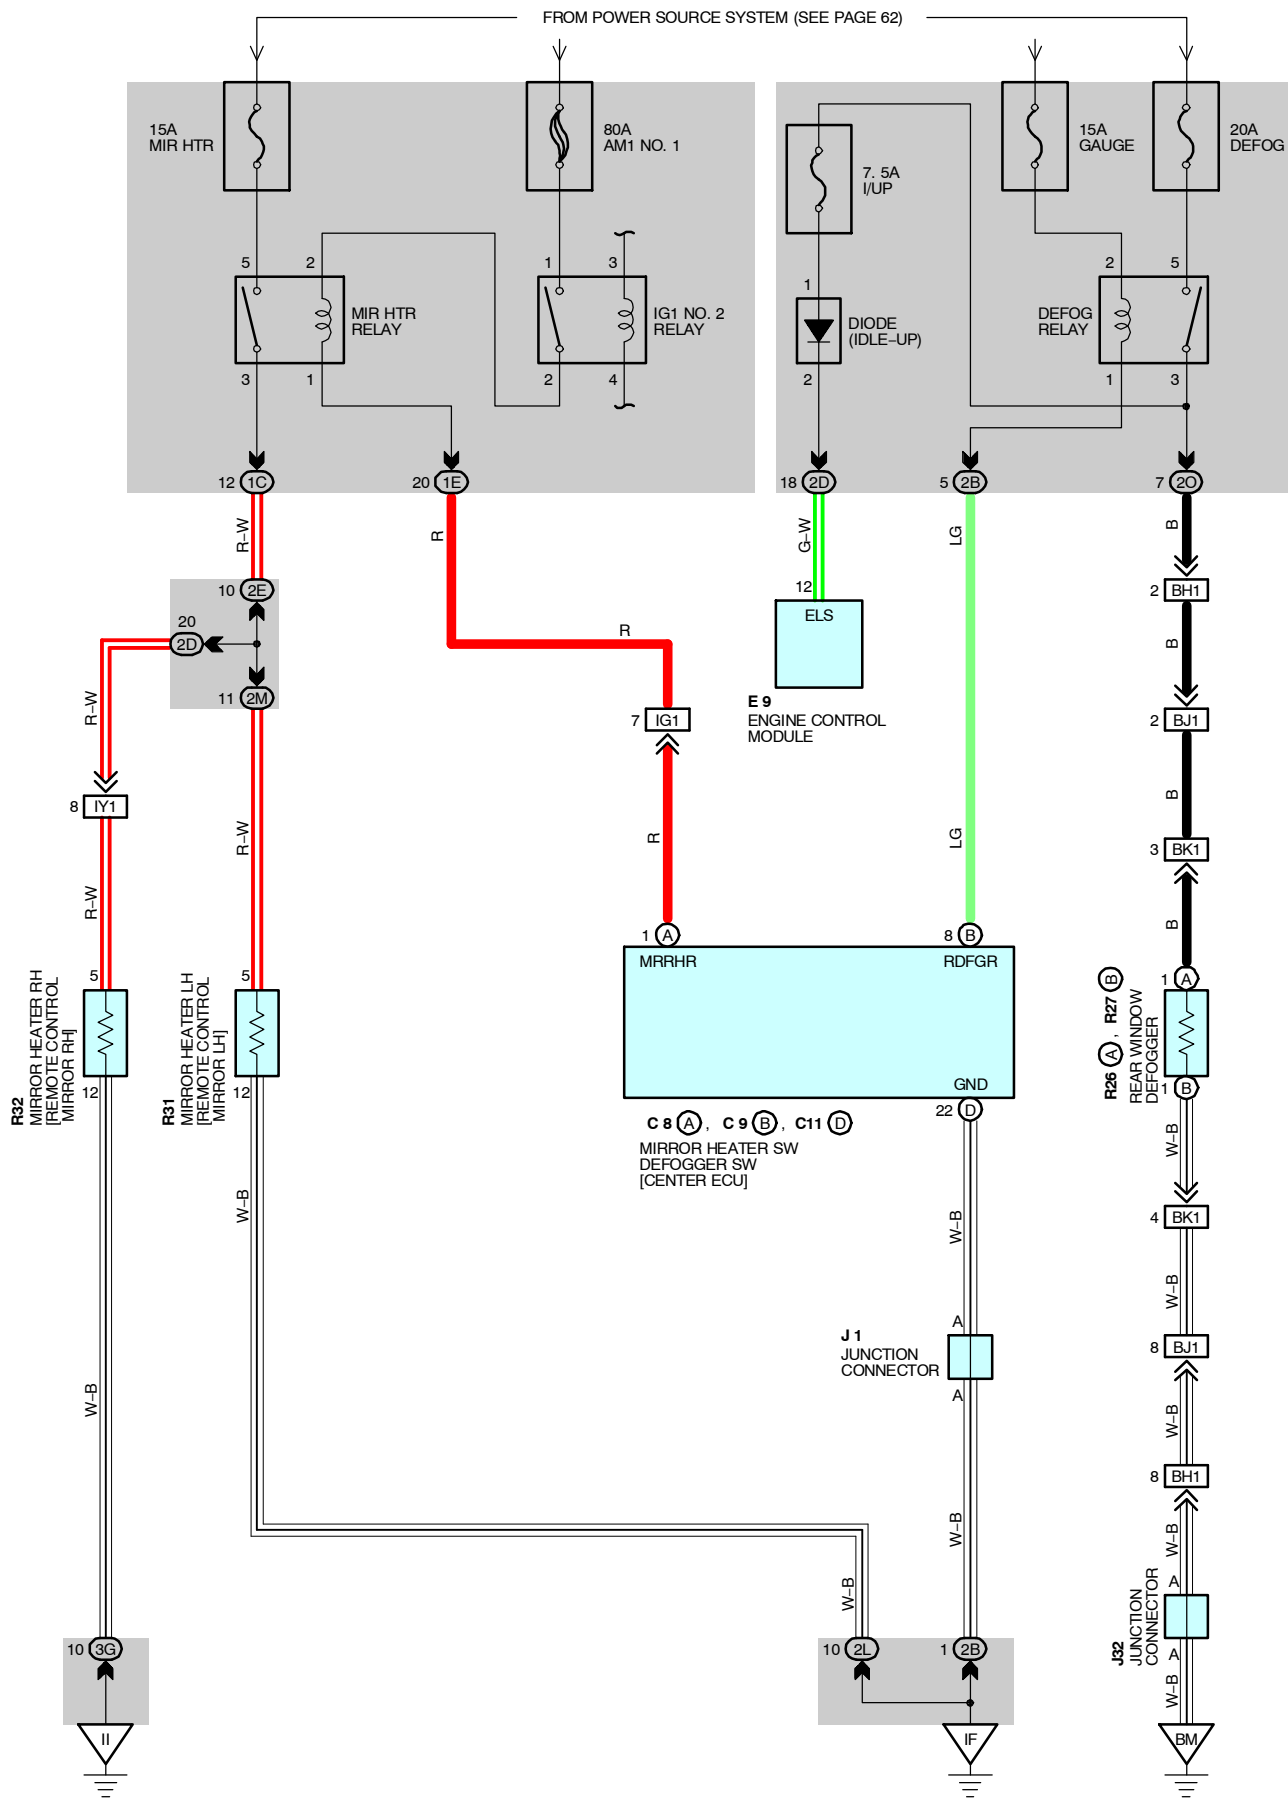

SERVICE HINTS

DEFOG RELAY

5-3 : Closed with ignition SW at **ON** or **ST** position and defogger SW on

MIR HTR RELAY

5-3 : Closed with ignition SW at **ON** or **ST** position and mirror heater SW on



: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C8	A	38	J1		39	R31		41
C9	B	38	J32		40	R32		41
C11	D	38	R26	A	41			
E9		38	R27	B	41			



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	21	Engine Room No. 2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2E	24	Engine Room No. 2 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	24	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M		
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
3G	30	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	48	Engine Room No. 2 Wire and Dash Wire (Behind the Combination Meter)
IY1	52	Front Door RH Wire and Dash Wire (Right Kick Panel)
BH1	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BJ1	56	Pillar No. 1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BK1	56	Pillar No. 1 Wire and Back Door Upper Wire (Left Side of Back Door)




: GROUND POINTS


Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH
II	46	Set Bolt of Cowl Side J/B RH
BM	54	Left Rear Side Quarter Panel

REAR WINDOW DEFOGGER AND MIRROR HEATER


C8 (A)

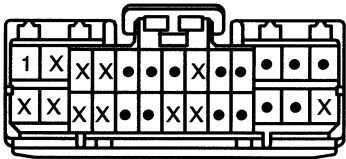


C9 (B)

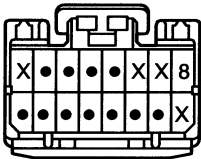


C11 (D)

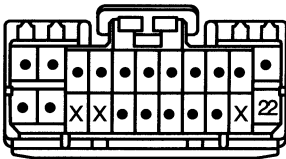

E9

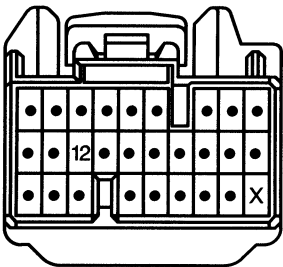


J1

 

(Hint : See Page 7)

 J32



(Hint : See Page 7)


R26 (A)



R27 (B)



R31

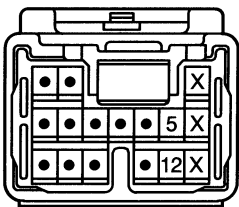

R32

