


STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

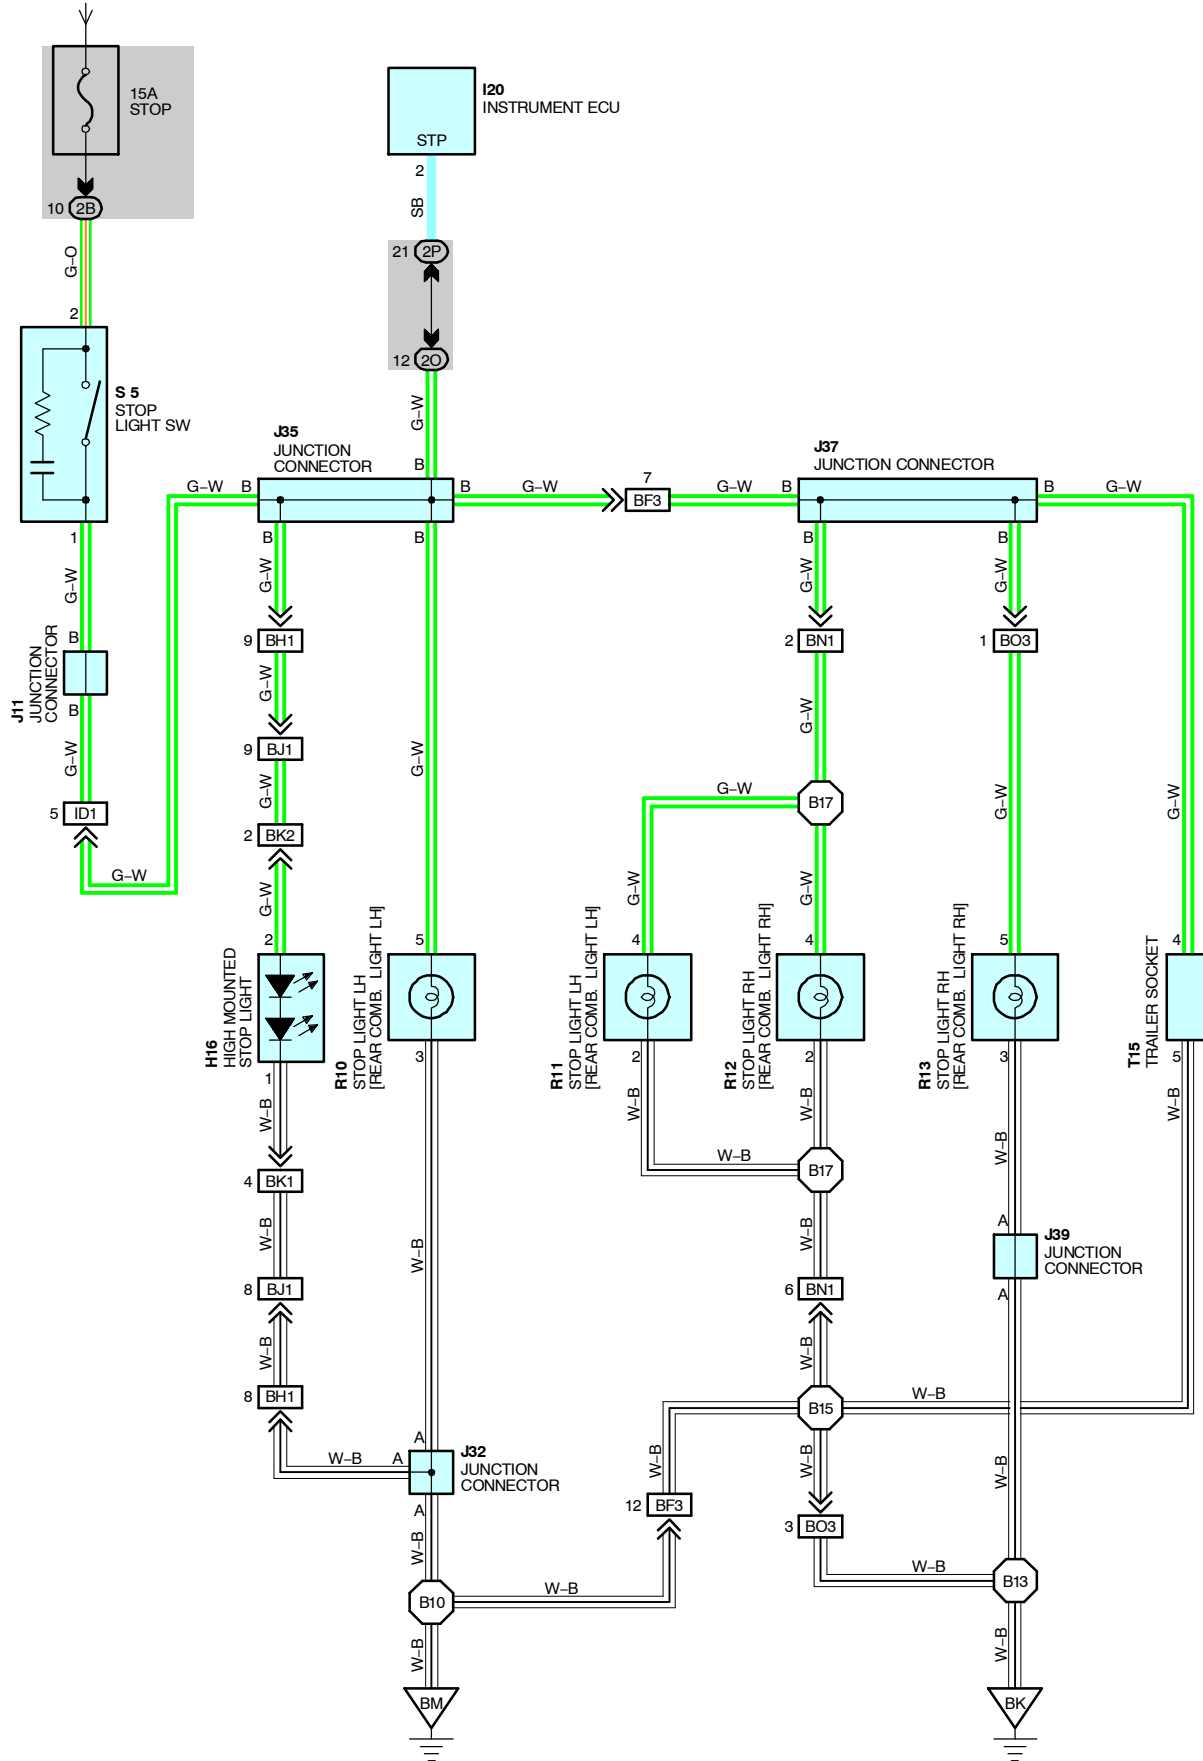

SERVICE HINTS**S5 STOP LIGHT SW**

2-1 : Closed with the brake pedal depressed

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
H16	40	J37	40	R13	41
I20	38	J39	40	S5	39
J11	39	R10	41	T15	41
J32	40	R11	41		
J35	40	R12	41		

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	46	Dash Wire and Floor Wire (Left Kick Panel)
BF3	54	Floor No. 3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BH1	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BJ1	56	Pillar No. 1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BK1	56	Pillar No. 1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2		
BN1	56	Back Door Lower Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)
BO3	56	Floor No. 2 Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
BK	54	Front Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	56	Floor Wire	B15	56	Floor No. 3 Wire
B13	56	Floor No. 2 Wire	B17	56	Back Door Lower Wire

STOP LIGHT

