


TAILLIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

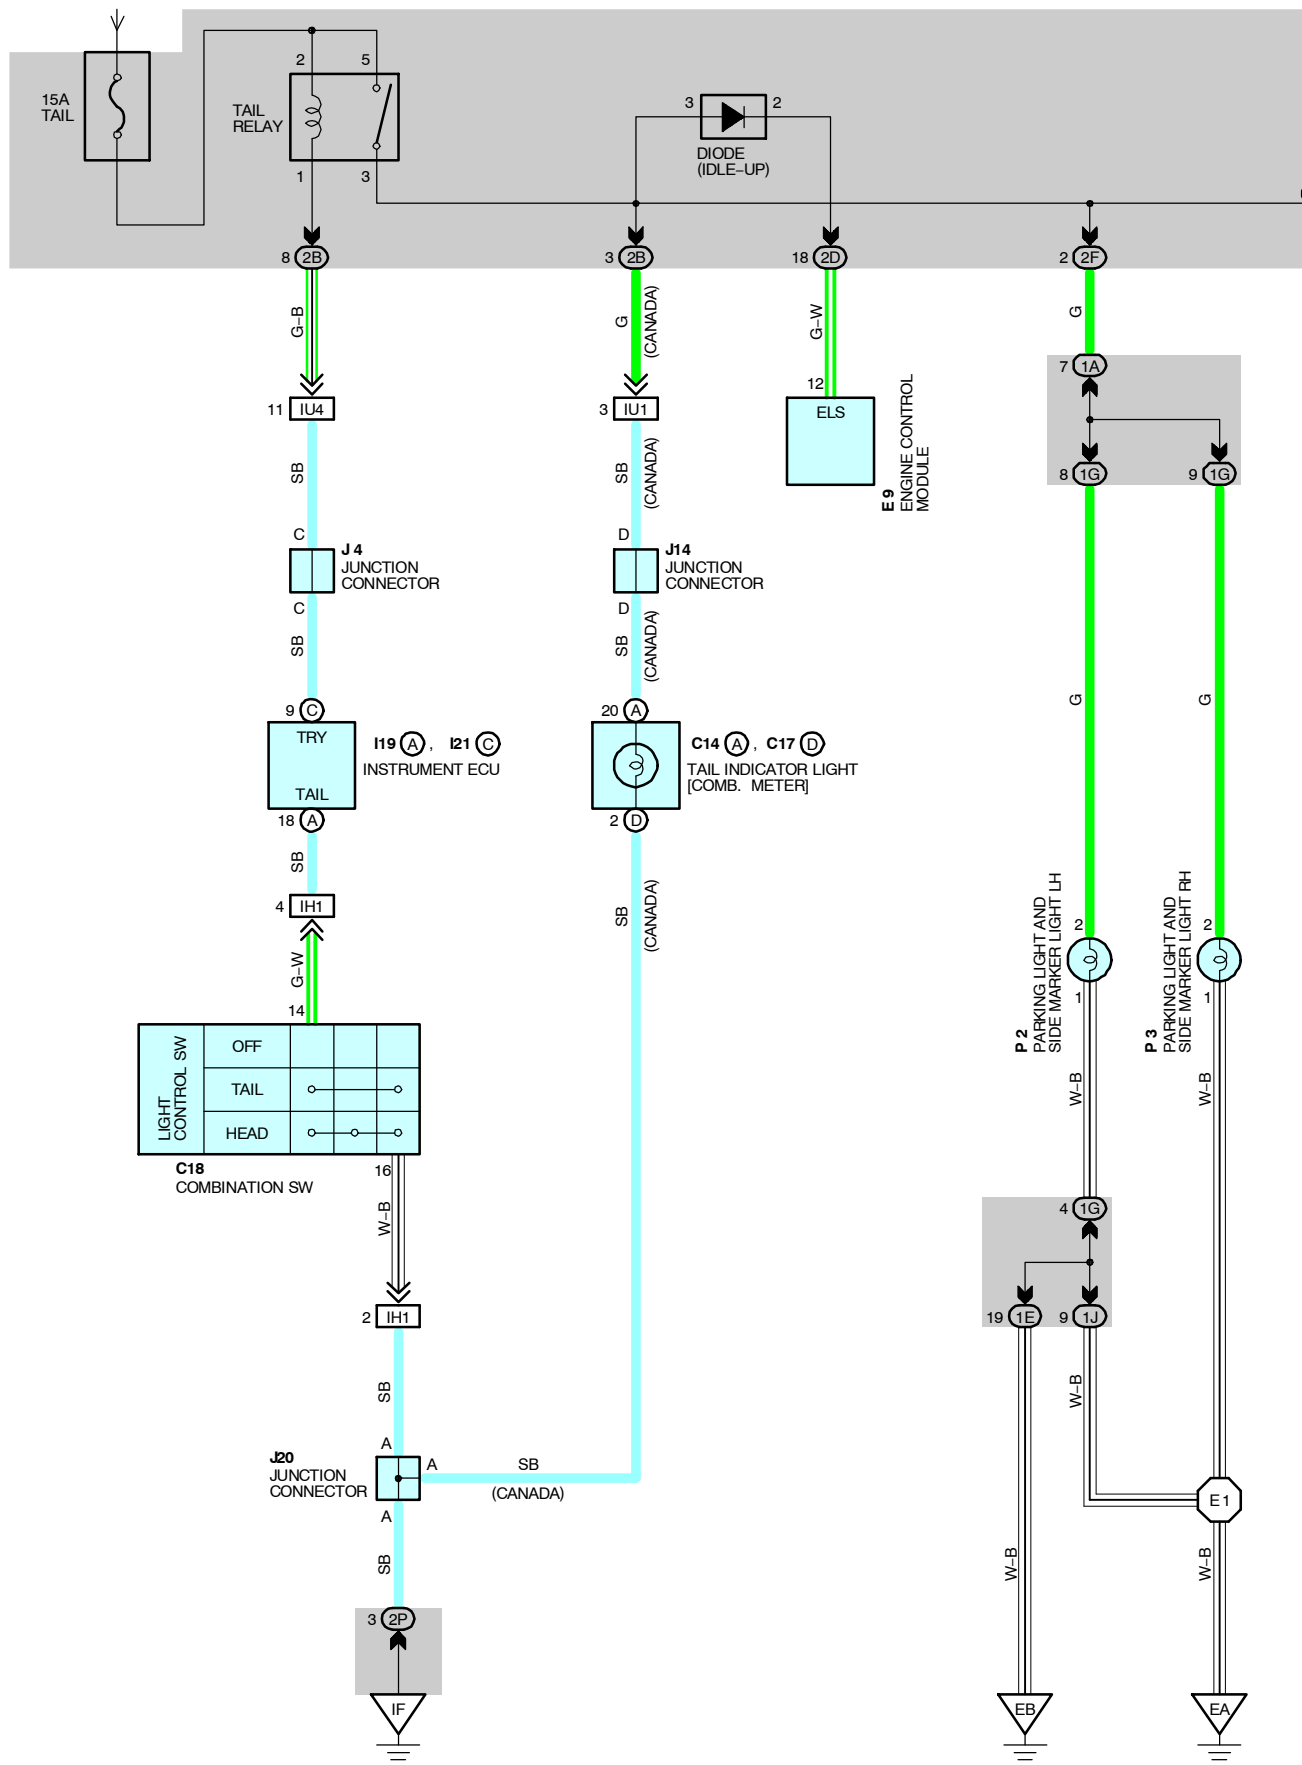

TAILLIGHT

SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control switch at **TAIL** or **HEAD** position

C18 COMBINATION SW

14-16 : Closed with light control switch at **TAIL** or **HEAD** position

: PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
C14	A	38	J20	39	P2	37
C17	D	38	J32	40	P3	37
C18		38	J35	40	R10	41
E9		38	J37	40	R11	41
I19	A	38	J38	40	R12	41
I21	C	38	J39	40	R13	41
J4		39	L1	41	T15	41
J14		39	L2	41		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No. 2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1G	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2F	24	Engine Room No. 2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS








Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IU1	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
BF3	54	Floor No. 3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BH1	54	Luggage Room Wire and Floor wire (Left Rear Side Quarter Panel)
BJ1	56	Pillar No. 1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BK1	56	Pillar No. 1 Wire and Back Door Upper Wire (Left Side of Back Door)
BN1	56	Back Door Lower Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)
BO3	56	Floor No. 2 Wire and Floor No. 3 Wire (Right Side of Rear Floor Crossmember)

: GROUND POINTS


Code	See Page	Ground Points Location
EA	44	Front Right side of Fender Apron
EB		
IF	46	Set Bolt of Cowl Side J/B LH
BK	54	Front Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel

: SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	44	Engine Room Main Wire	B14	56	Back Door Upper Wire
B10	56	Floor Wire	B15	56	Floor No. 3 Wire
B13	56	Floor No. 2 Wire	B16	56	Back Door Lower Wire

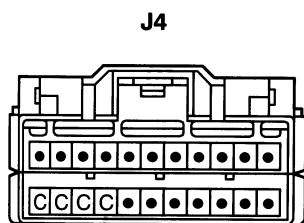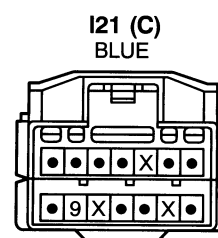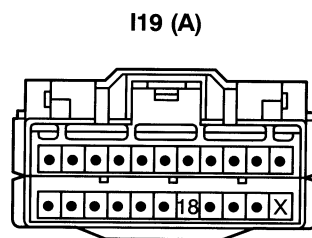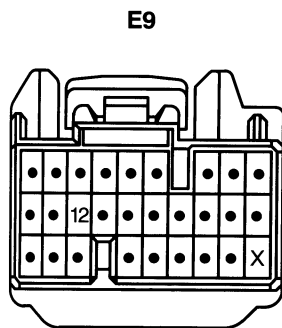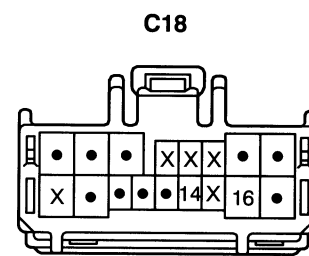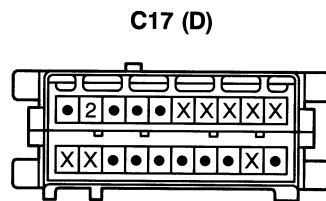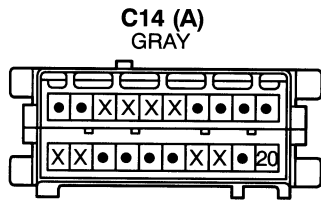


(Hint : See Page 7)

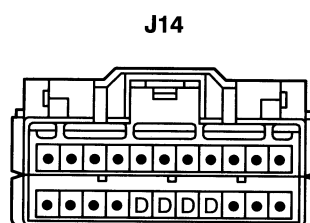


(Hint : See Page 7)

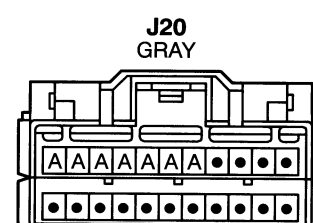


(Hint : See Page 7)

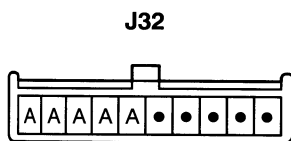


(Hint : See Page 7)

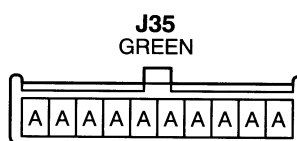


(Hint : See Page 7)

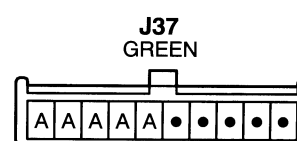

(Hint : See Page 7)

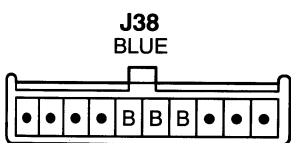

(Hint : See Page 7)

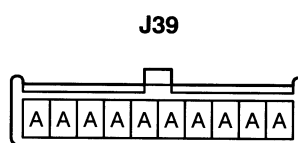

(Hint : See Page 7)

