


HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

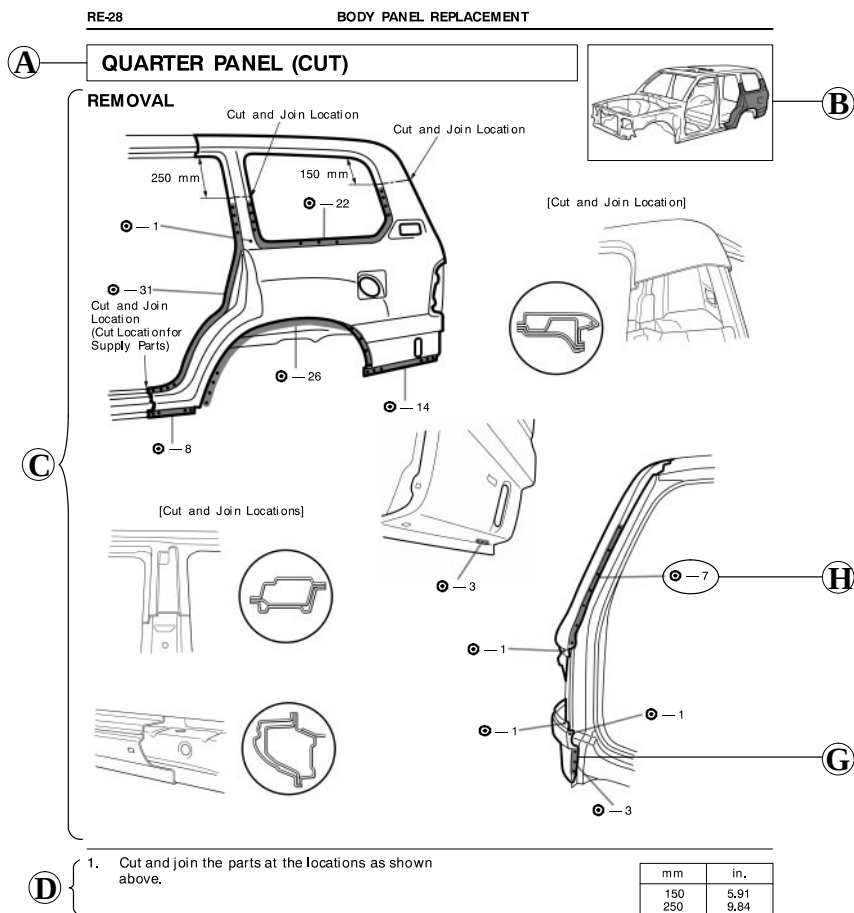

A : REPLACEMENT PARTS AND METHOD

QUARTER PANEL (CUT)

Replacement method

(ASSY) Assembly replacement

(CUT) Major cutting (less than 1/2 of parts used)

(CUT-H) Half cutting (about 1/2 of parts used)

(CUT-P) Partial cutting (most of parts used)

Replacement Parts


B : PARTS LOCATION

C : REMOVAL DIAGRAM

Describes in detail removal of the damaged parts involving repair by cutting.

D : REMOVAL GUIDE

Provides additional information to more efficiently help you perform the removal.

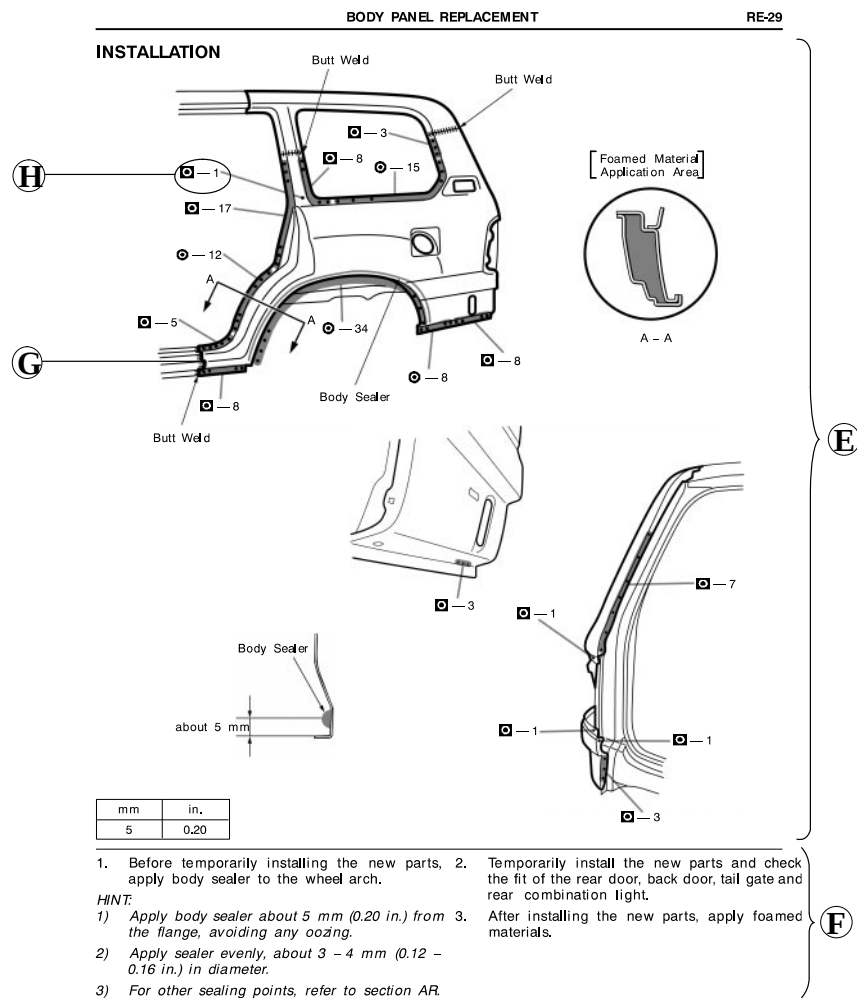

Ⓔ : INSTALLATION DIAGRAM

Describes in detail installation of the new parts involving repair by welding and/or cutting, but excluding painting.

Ⓕ : INSTALLATION GUIDE

Provides additional information to more efficiently help you perform the installation.

Ⓖ : SYMBOLS

See page IN-4.

Ⓕ : ILLUSTRATION OF WELD POINTS

Weld method and panel position symbols.
See page IN-5.